

# IRON BALTIC

## FRONT BASKET

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/SL5CmTRM](https://code.ironbaltic.com/u/SL5CmTRM)

Code 56.7100

Version 02012024




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

# SPECIFICATION

| Pos. | Description            | Code         | Amount |
|------|------------------------|--------------|--------|
| 1    | Basket                 | 56.7101K     | 1      |
| 2    | Filler profile         | 56.7102      | 1      |
| 3    | Filler profile bracket | 56.7103      | 2      |
| 4    | Mounting bracket       | 56.7202      | 8      |
| 5    | Bolt M6x80 DIN933      | OT.02.02.160 | 8      |
| 6    | Washer Ø6 DIN125       | OT.04.01.020 | 16     |
| 7    | Bolt M6x16 DIN933      | OT.02.02.050 | 2      |
| 8    | Nyloc nut M6 DIN985    | OT.03.02.030 | 10     |

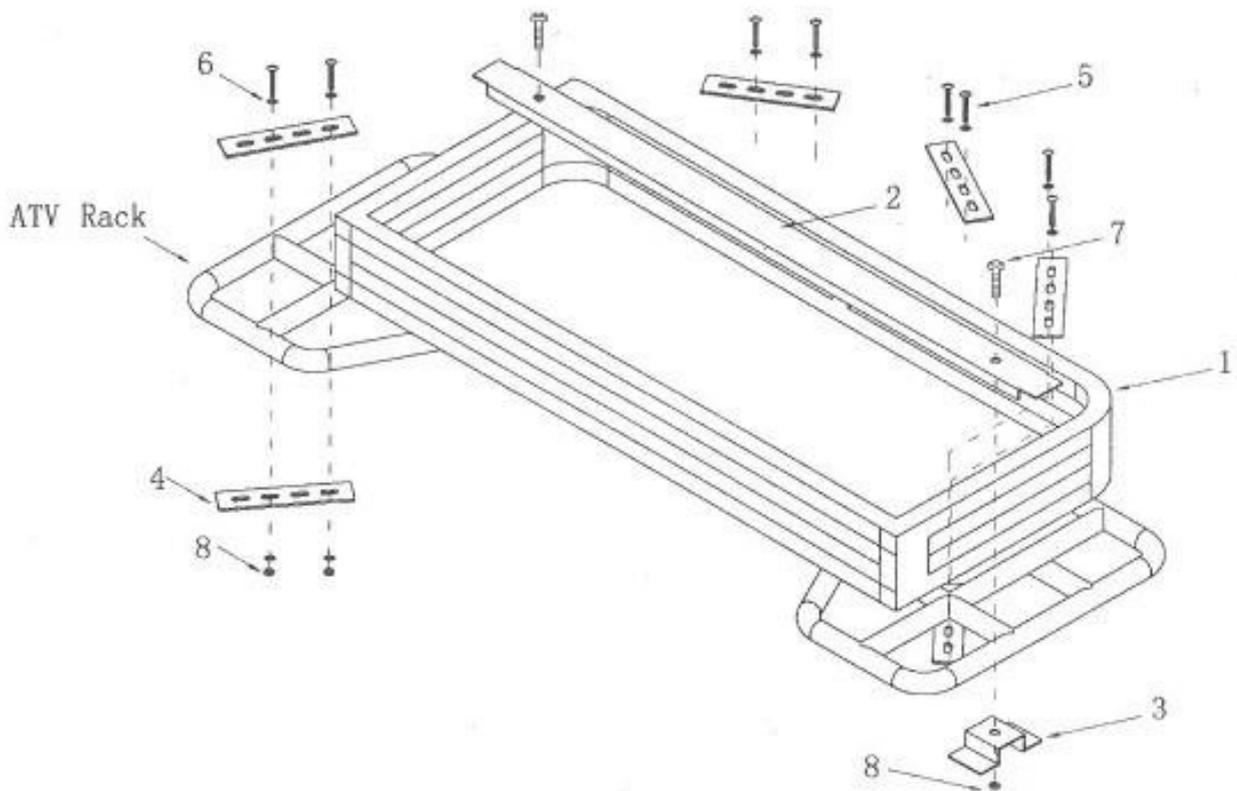

# FITTING INSTRUCTIONS

## Step 1

Position the basket so it is centred on the luggage rack of the ATV and the rack upright fits through the basket opening. NB! Depending on the size and type of the rack upright, it may have to be removed before the basket can be installed.

When mounting the basket on an ATV rack without an upright, attach filler profile (Pos. 2) and filler profile bracket (Pos.3) to the basket. The filler profile (Pos.2) will lie over the opening with the flat side up. Two filler profile brackets (Pos.3) are installed from below the basket. Secure with M6x16 bolts (2 pcs) and M6 nyloc nuts (2 pcs).

## Step 2

Kinnitage korvi üks nurk ATV raami külge kinnitus plaatide (Pos.4, 2 tk), M6x80 poldide (2 tk), seibide (4 tk) ja nyloc mutrite (2 tk) abil. Veenduge, et ülemine kinnitus plaat on asetatud üle korvi raami toru ja, et poldid on paigaldatud toru mõlemale küljele. NB! Kui polti pingutatakse võib kinnitus plaat deformeeruda.



## Step 3

Repeat step 2, three more times. Space the mounting brackets evenly over the surface of basket. Check basket for alignment and assure it is securely fastened. Tighten fasteners as needed.



**When loading your basket do not exceed the ATV rack weight carrying capacity!  
Distribute the load as evenly as possible!**

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)