

IRON BALTIC

WIRING KIT (1 CYLINDER)

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/2u1Flihe

Code 70.2500

Version 02012024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Wiring loom with remote control	OT.33.03.030	1
2	Remote control holder	70.2501	1
3	Pipe clamp 28mm	OT.05.01.010	1
3	Pipe clamp bracket 28 mm	OT.05.04.010	1
4	Cable tie 7,5x365mm	PM.11.00.005	5
5	Screw M3x14 DIN7985	OT.01.02.030	2
6	Washer M3 DIN125	OT.04.01.004	2
7	Washer Ø8/20 SFS3738	OT.04.03.030	2
8	Nyloc nut M3 DIN985	OT.03.02.005	2
9	Nyloc nut M8 DIN985	OT.03.02.040	2



Pos.1



Pos.4



Pos.3




Pos.2

FITTING INSTRUCTIONS


Step 1

Install remote control to holder. Use M3 screws, washers and nyloc nuts.

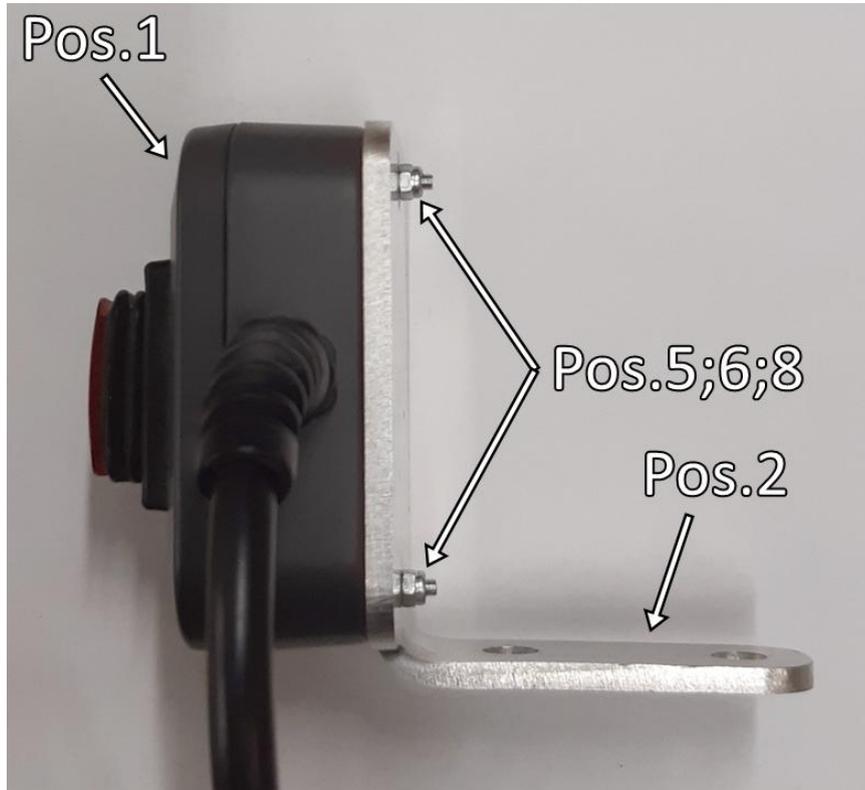

Step 2

Find suitable place for the remote control (under the rear view mirror, to the luggage rack, etc). To install on the luggage rack, use pipe clamp.

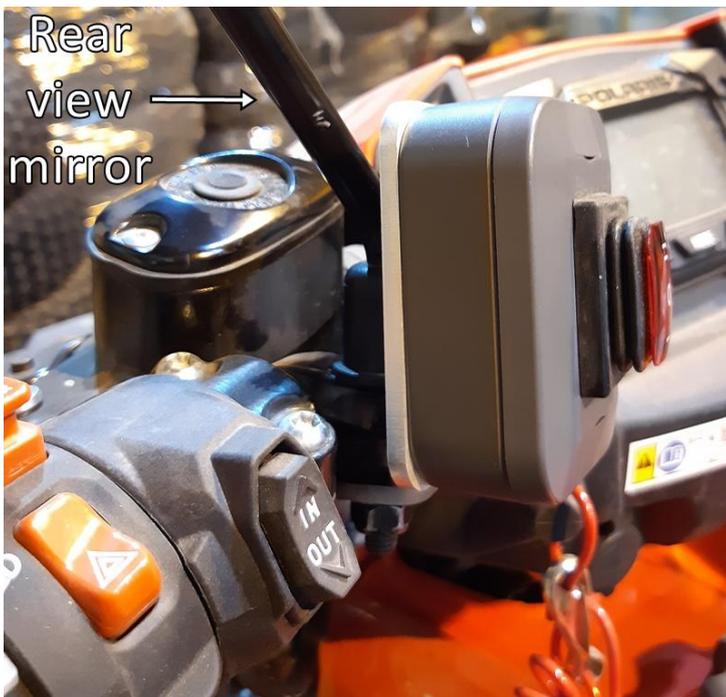


Step 3

Install wires to ATV battery.
Wire with fuse holder goes under battery + terminal.



Step 4

Connect plug to cylinder wires.

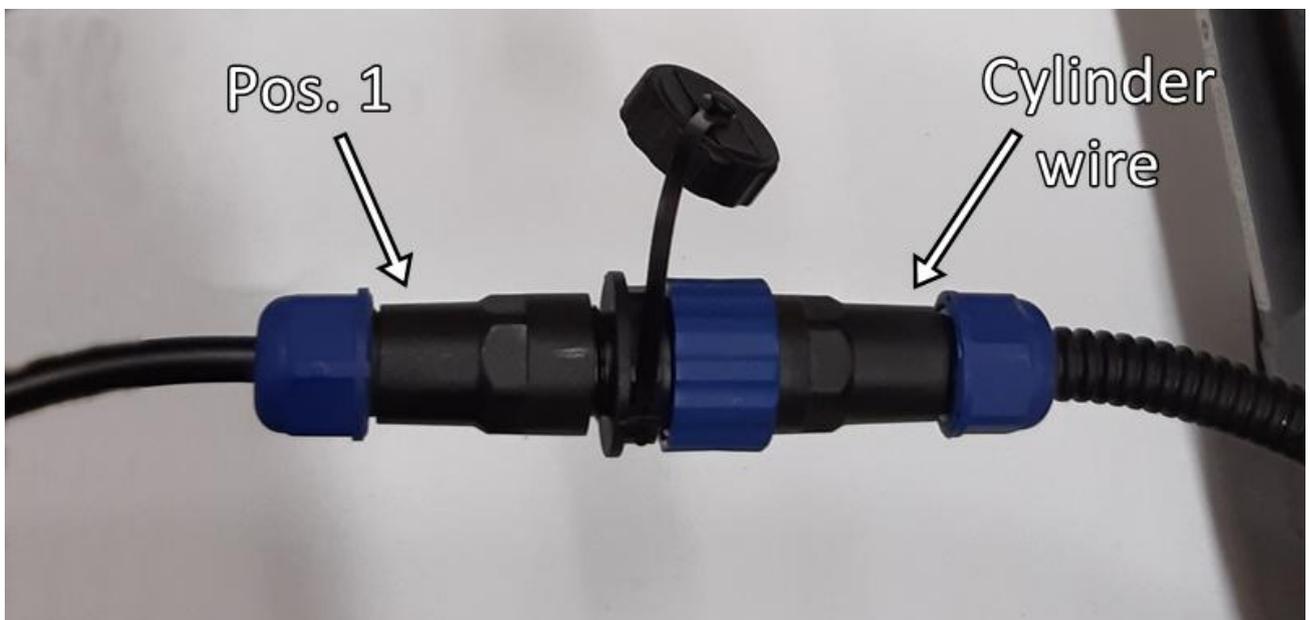

Step 5

Use cable ties to organize wires.

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

