

IRON BALTIC

LIFT CYLINDER ADAPTER

CFMOTO

CForce 850 / 1000

Code 71.10400

Version 04012024



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/3kPj0TZj


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Support plate	71.10401	1
2	Cylinder holder	71.3010	1
3	Bracket	71.3001	1
4	Cylinder holder support	71.3002	1
5	Lower cylinder bracket	71.3003	1
6	Pin	71.3004	1
7	Pin	71.3005	1
8	Bush	71.3006	2
9	Cotter pin 3 DIN 11024	OT.07.01.020	2
10	Pipe clamp M8x28	OT.05.01.010	2
11	Bolt M8x20 DIN 933	OT.02.02.180	2
12	Bolt M8x25 DIN 933	OT.02.02.190	10
13	Bolt M12x30 DIN 933	OT.02.02.390	1
14	Washer M8 SFS 3738	OT.04.03.030	24
15	Washer M12 DIN 125	OT.04.01.050	1
16	Nut M8 DIN 985	OT.03.02.040	12
17	Nut M12 DIN 985	OT.03.02.060	1

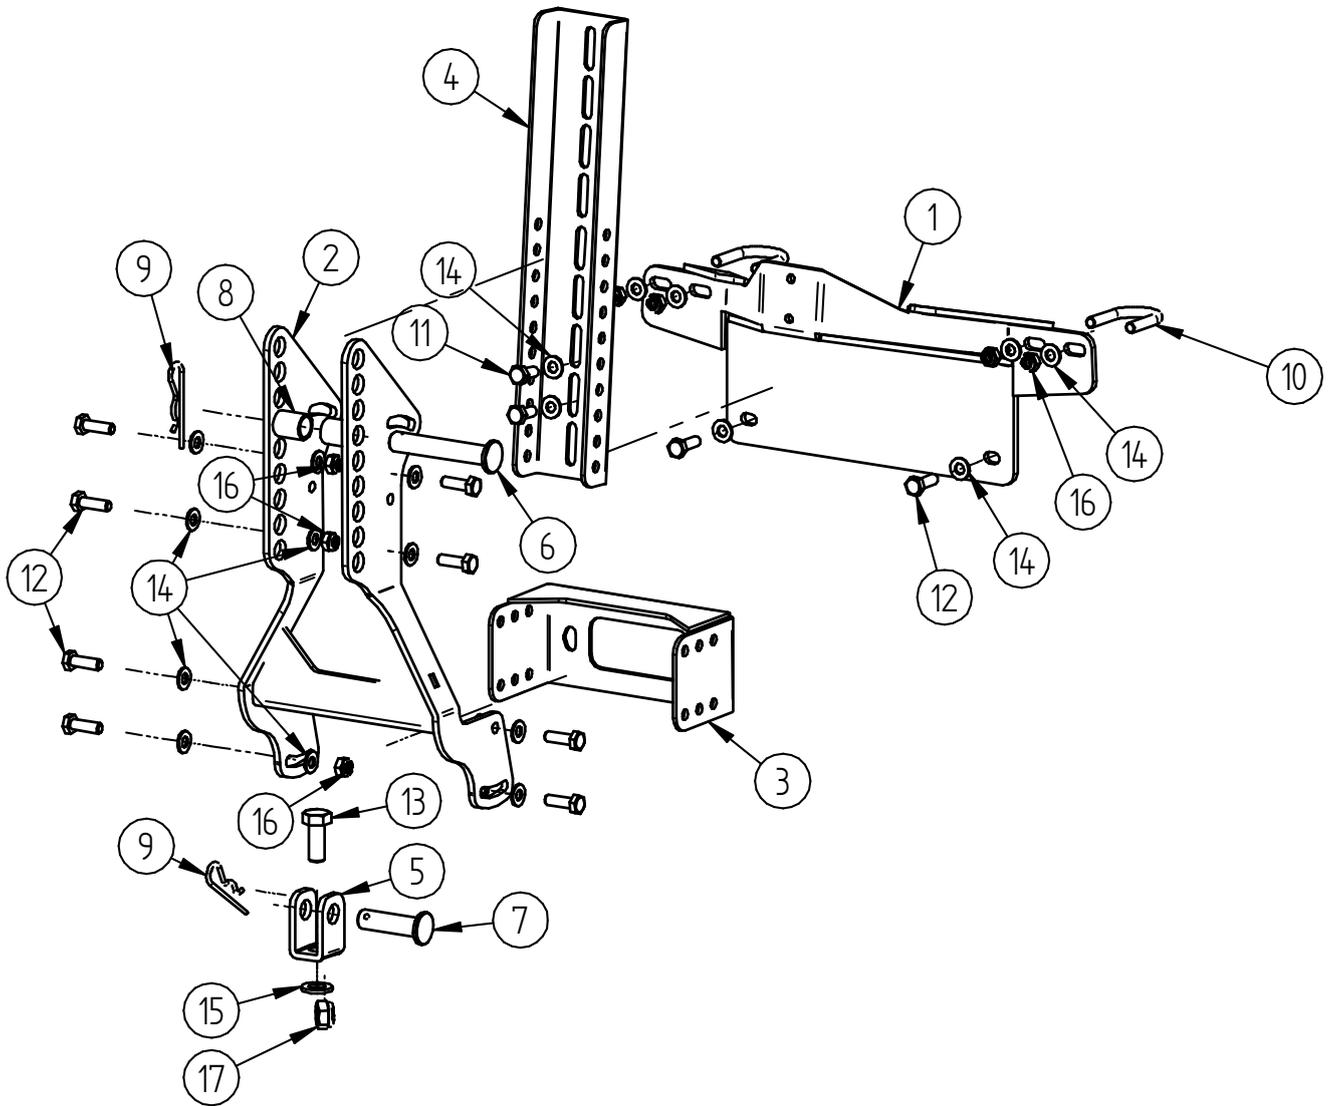

FITTING INSTRUCTIONS

Step 1

Remove winch fairlead and original plastic cover.
After that, remove front bumper.



Step 2

Install support plate. Support plate goes under the original bumper!



Step 3

Install bracket and cylinder holder.




Step 4

Re-install original plastic and then support for cylinder holder.




Step 5

Install cylinder bottom bracket to pushtubes.

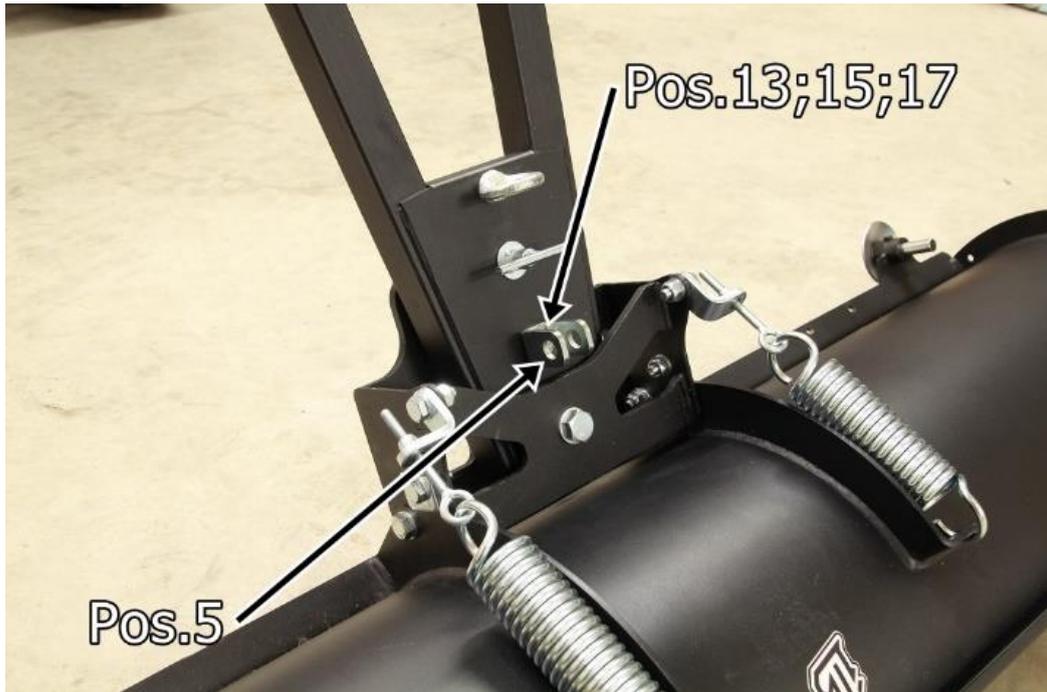

Step 6

Install cylinder. Find appropriate height for cylinder, if cylinder is in minimal position then plow frame should not touch ATV.

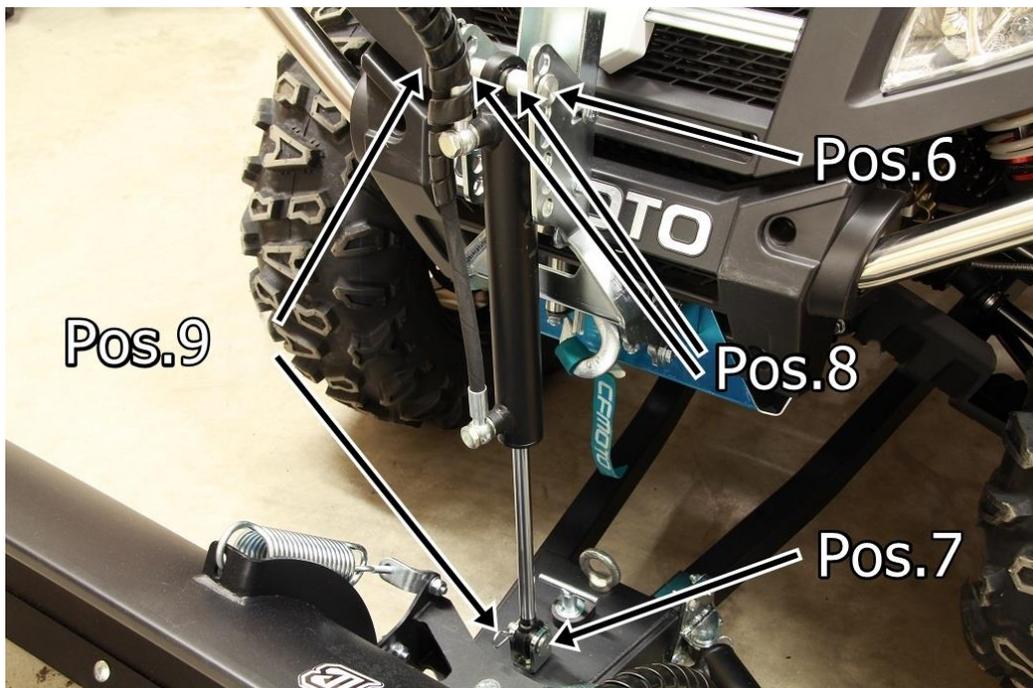

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

