



LIFT CYLINDER ADAPTER

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/fLR0IYSO

CORVUS

Terrain DX4 (Basic / Eco bumper)

Code 71.10800

Version 04012024




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Receiver mounting tube	71.10801	1
2	Cylinder holder	71.10802K	1
3	Cylinder holder support	71.10805	1
4	Lower cylinder bracket	71.3003	1
5	Pin (longer)	71.3004	1
6	Pin (shorter)	71.3005	1
7	Bush	71.3006	2
8	Receiver pin	15.1403	1
9	U-bolt bracket 42mm	OT.05.04.040	1
10	U-bolt M8x42mm	OT.05.01.040	1
11	Cotter pin 3 DIN 11024	OT.07.01.020	3
12	Bolt M8x20 DIN 933	OT.02.02.180	4
13	Bolt M10x80 DIN 931	OT.02.01.048	1
14	Bolt M12x30 DIN 933	OT.02.02.390	1
15	Washer M8 SFS 3738	OT.04.03.030	10
16	Washer M10 DIN 125	OT.04.01.040	2
17	Washer M12 DIN 125	OT.04.01.050	1
18	Nut M8 Nyloc DIN 985	OT.03.02.040	6
19	Nut M10 Nyloc DIN 985	OT.03.02.040	1
20	Nut M12 Nyloc DIN 985	OT.03.02.060	1

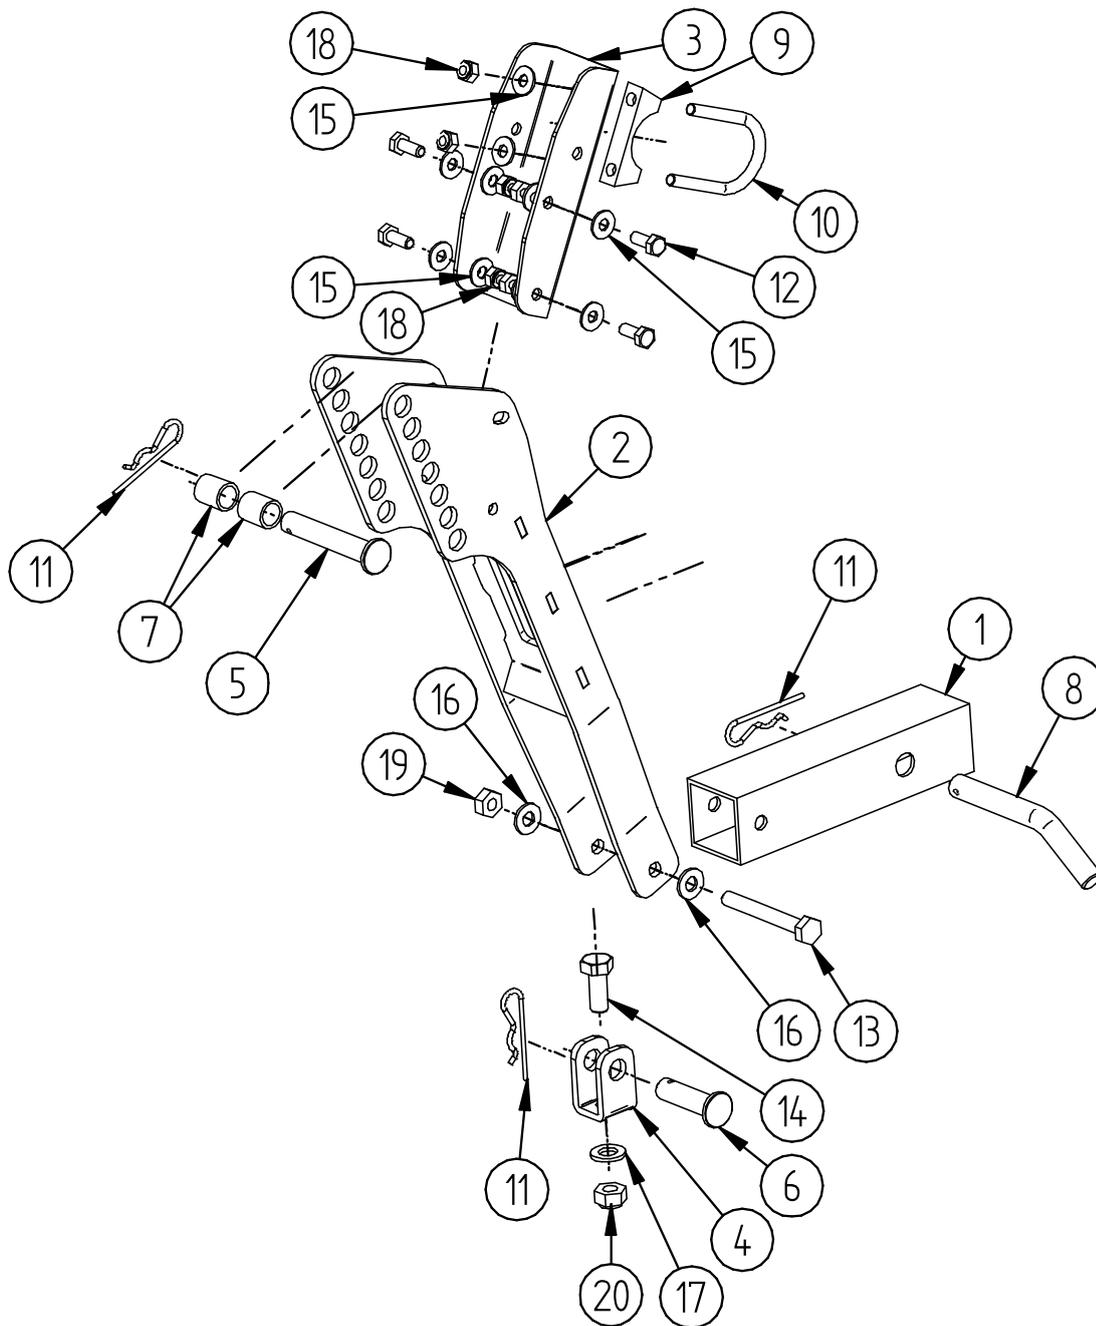

FITTING INSTRUCTIONS


Step 1

Remove original tow coupling from receiver (if fitted).
Replace tow coupling with Pos.1 tube.



Step 2

Install cylinder holder Pos.2 to tube Pos.1 and cylinder holder support to front bumper.

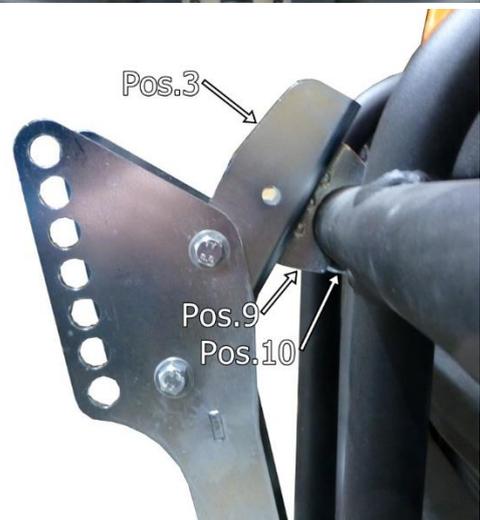

Step 3

Install cylinder bottom bracket to pushtubes.



Step 4

Install cylinder. Find appropriate height for cylinder, if cylinder is in minimal position then plow frame should not touch UTV. When using hydraulic cylinder, add bushes Pos.7 between upper cylinder mount and cylinder holder.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

