



HYDRAULIC UNIT RACK

Corvus Terrain DX4

CFMoto UForce 600

Segway Fugleman UT10

Polaris Ranger 570 SP

Trapper UTV 550 EFI

Can Am Maverick Trail

CFMoto U10 PRO

Segway UT6

Code 71.10850

Version 01112024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/MFw1Pv3Q

SPECIFICATION


Pos.	Description	Code	Amount
1	Hydraulic unit rack	71.10806K	1
2	Distance plate	71.10808	2
3	Bolt M8x30 DIN933	OT.02.02.200	4
4	Washer Ø8/20 SFS3738	OT.04.03.030	8
5	Nyloc nut M8 DIN985	OT.03.02.040	4

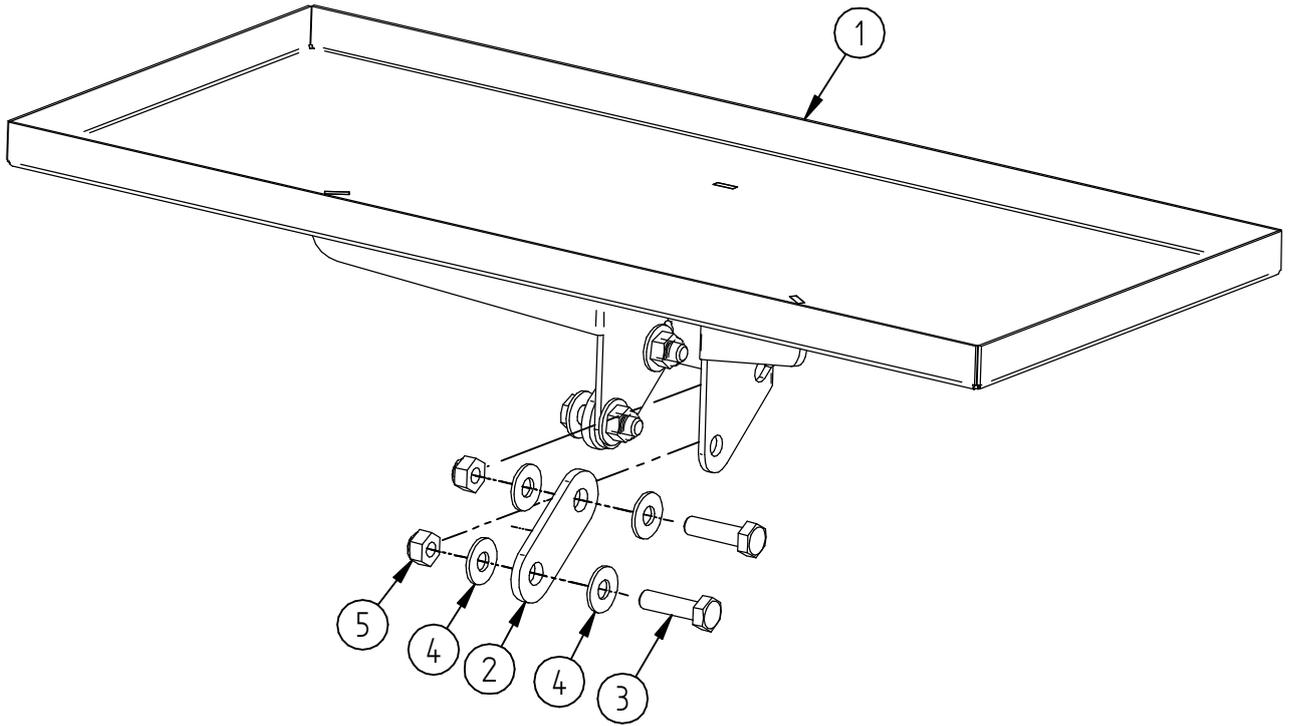


FITTING INSTRUCTIONS

CORVUS TERRAIN DX4

Step 1 Install hydraulic unit rack.

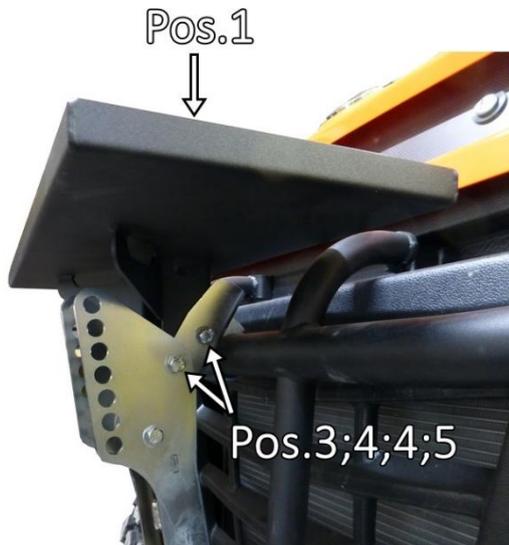

Installation with 71.10800 cylinder holder

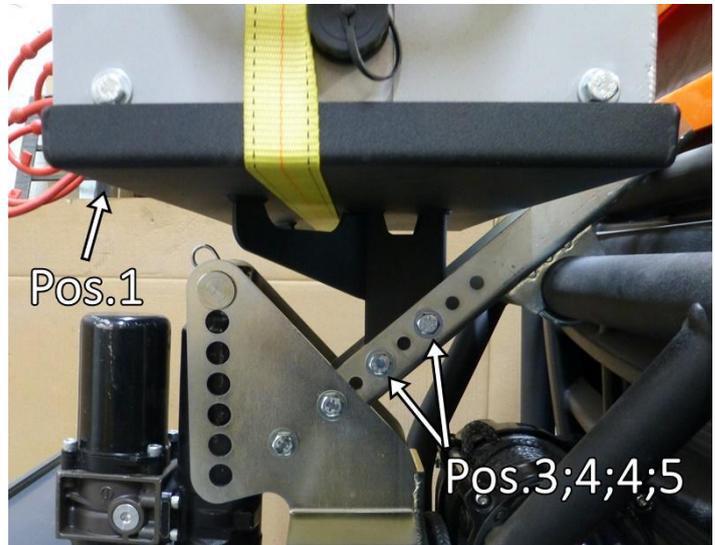

Installation with 71.10900 cylinder holder

Step 2 Install hydraulic unit and secure it with strap.



Step 3 Install cylinder. Connect hydraulic lines and power cables.

FITTING INSTRUCTIONS

CFMOTO UFORCE 600

SEGWAY FUGLEMAN UT10



POLARIS RANGER 570 SP

TRAPPER UTV 550 EFI


CAN AM MAVERICK TRAIL

CFMOTO U10 PRO


Step 1 Install hydraulic unit rack.

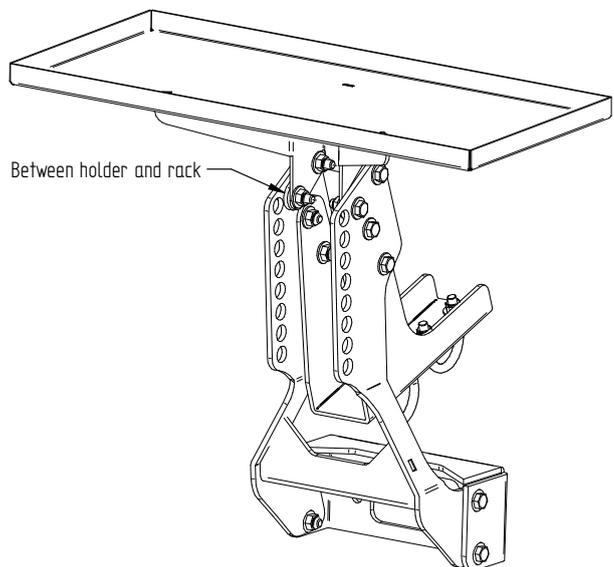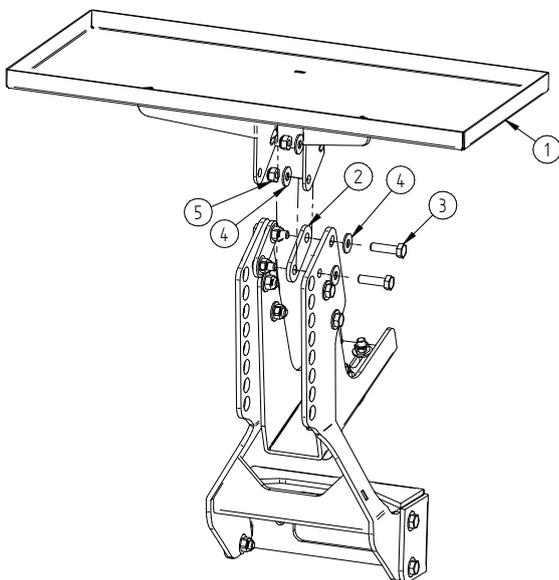


UFORCE 600

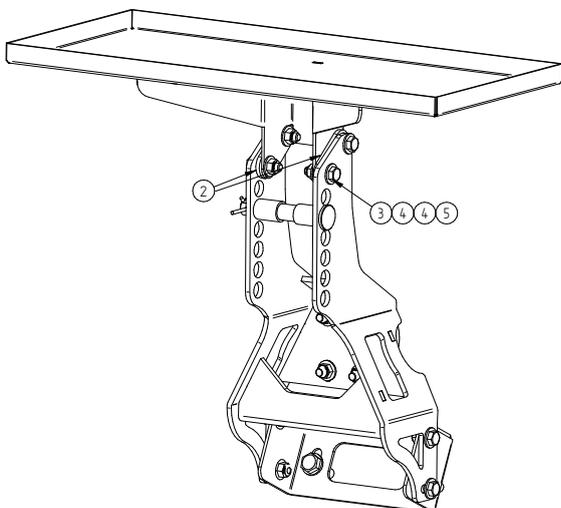


SEGWAY FUGLEMAN

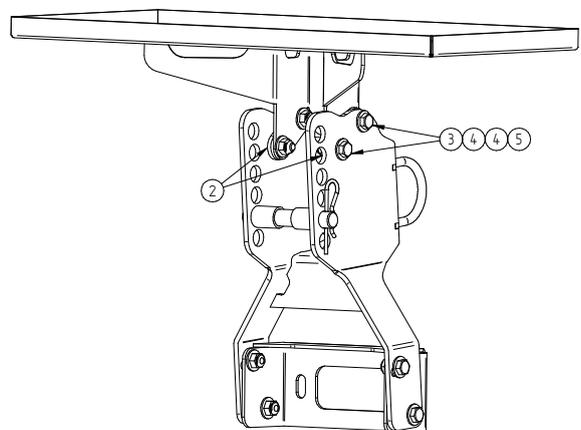


POLARIS RANGER 570 SP

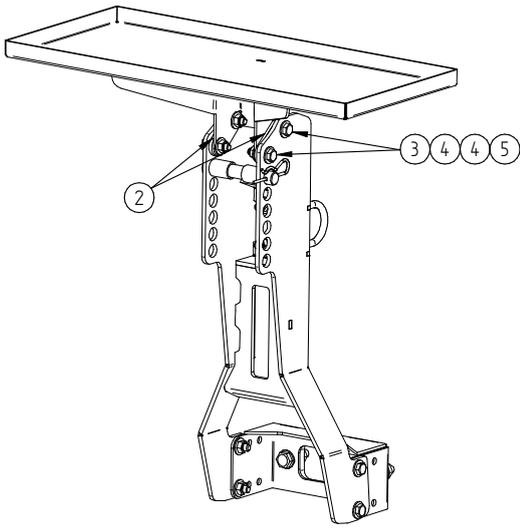


TRAPPER UTV 550 EFI

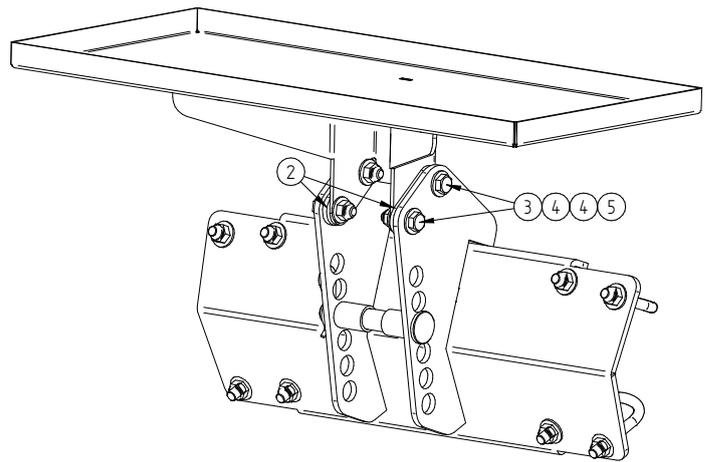

CAN AM MAVERICK TRAIL

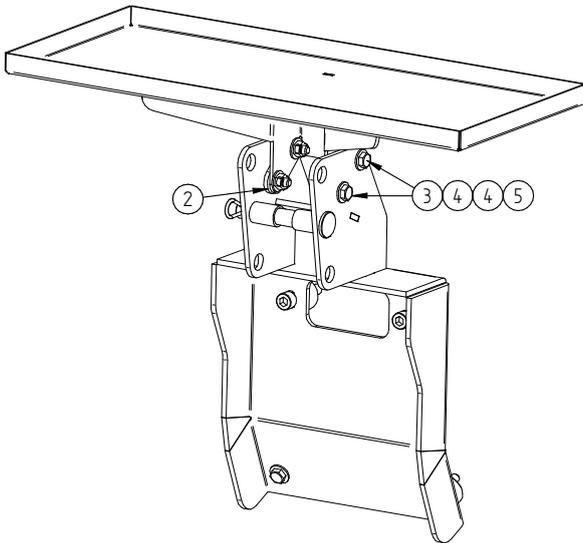


CFMOTO U10 PRO

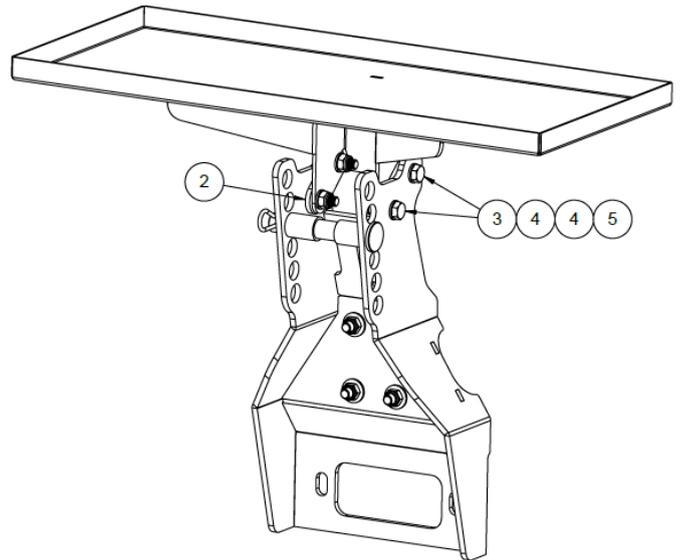

SEGWAY UT6

Step 2

Install hydraulic unit and secure it with strap.

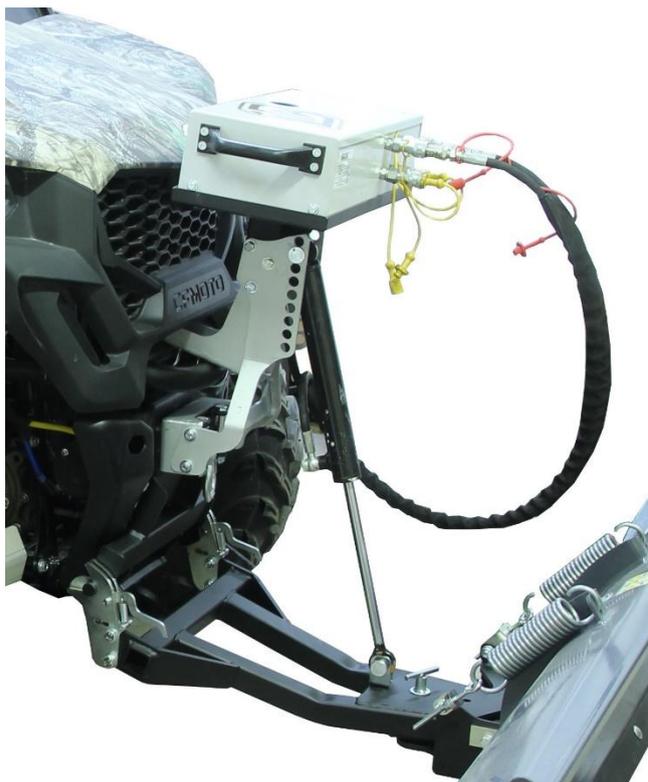

Step 3

Install cylinder. Connect hydraulic lines and power cables.

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

