

IRON BALTIC

LIFT CYLINDER HOLDER

CFMOTO CFORCE 850/1000 2024+

Code 71.11900

Version 15052024



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/Hz2KgG8a

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


SPECIFICATION

Pos	Description	Code	Amount
1	Lower mount for cylinder holder	71.11901	1
2	Cylinder holder	71.11902K	1
3	Front part	71.11906	1
4	Cylinder mount for frame	71.3003	1
5	Cylinder upper pin	71.3004	1
6	Cylinder bottom pin	71.3005	1
7	Distance bushing (for hydraulic cylinder)	71.3006	2
8	Distance plate	02.31809	1
9	Dished washer	14.503	2
10	Cotter pin 3 DIN11024	OT.07.01.020	2
11	U-clamp M8x45	OT.05.01.042	2
12	Bolt M6x20 DIN933	OT.02.02.060	2
13	Bolt M8x20 DIN933	OT.02.02.180	4
14	Bolt M12x30 DIN933	OT.02.02.390	1
15	Bolt M10x1,25x40 DIN912	OT.02.06.057	2
16	Washer Ø6/15 SFS3738	OT.04.03.020	2
17	Washer Ø6/18 DIN9021	OT.04.02.020	2
18	Washer Ø8/20 SFS3738	OT.04.03.030	12
19	Washer Ø12 DIN125	OT.04.01.050	1
20	Nyloc nut M6 DIN985	OT.03.02.030	2
21	Nyloc nut M8 DIN985	OT.03.02.040	8
22	Nyloc nut M12 DIN985	OT.03.02.060	1

TOOLS REQUIRED FOR INSTALLATION:



- Spanner 10mm
- Spanner 13mm
- Spanner 19mm
- Socket wrench 10mm
- Socket wrench 13mm
- Torx 27
- Allen wrench 8mm

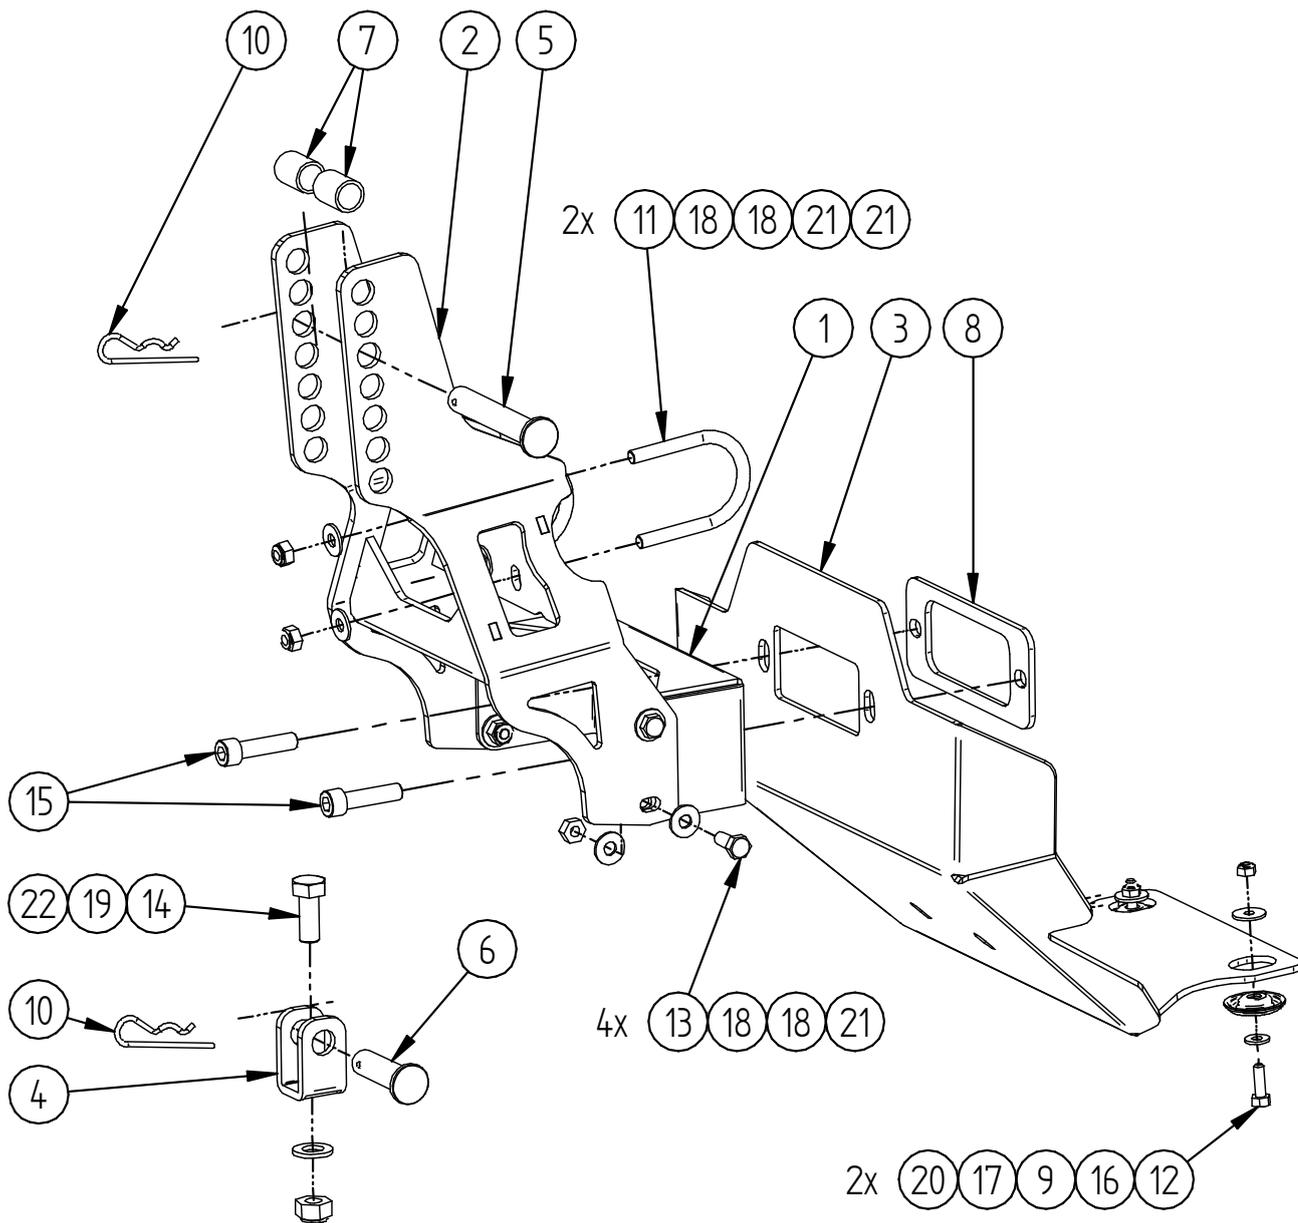


Numbers on drawing correspond to Pos numbers on specification table.

FITTING INSTRUCTIONS

Step 1 Installation with original front plastic:

Remove front mount adapter (if installed), front plastic and winch fairlead. Install front part 71.11906 (Pos. 3). NB! Distance plate 02.31809 (Pos. 8) and lower mount for cylinder holder 71.11901 (Pos. 1) must be installed together with the front part.


Installation with original front plastic:

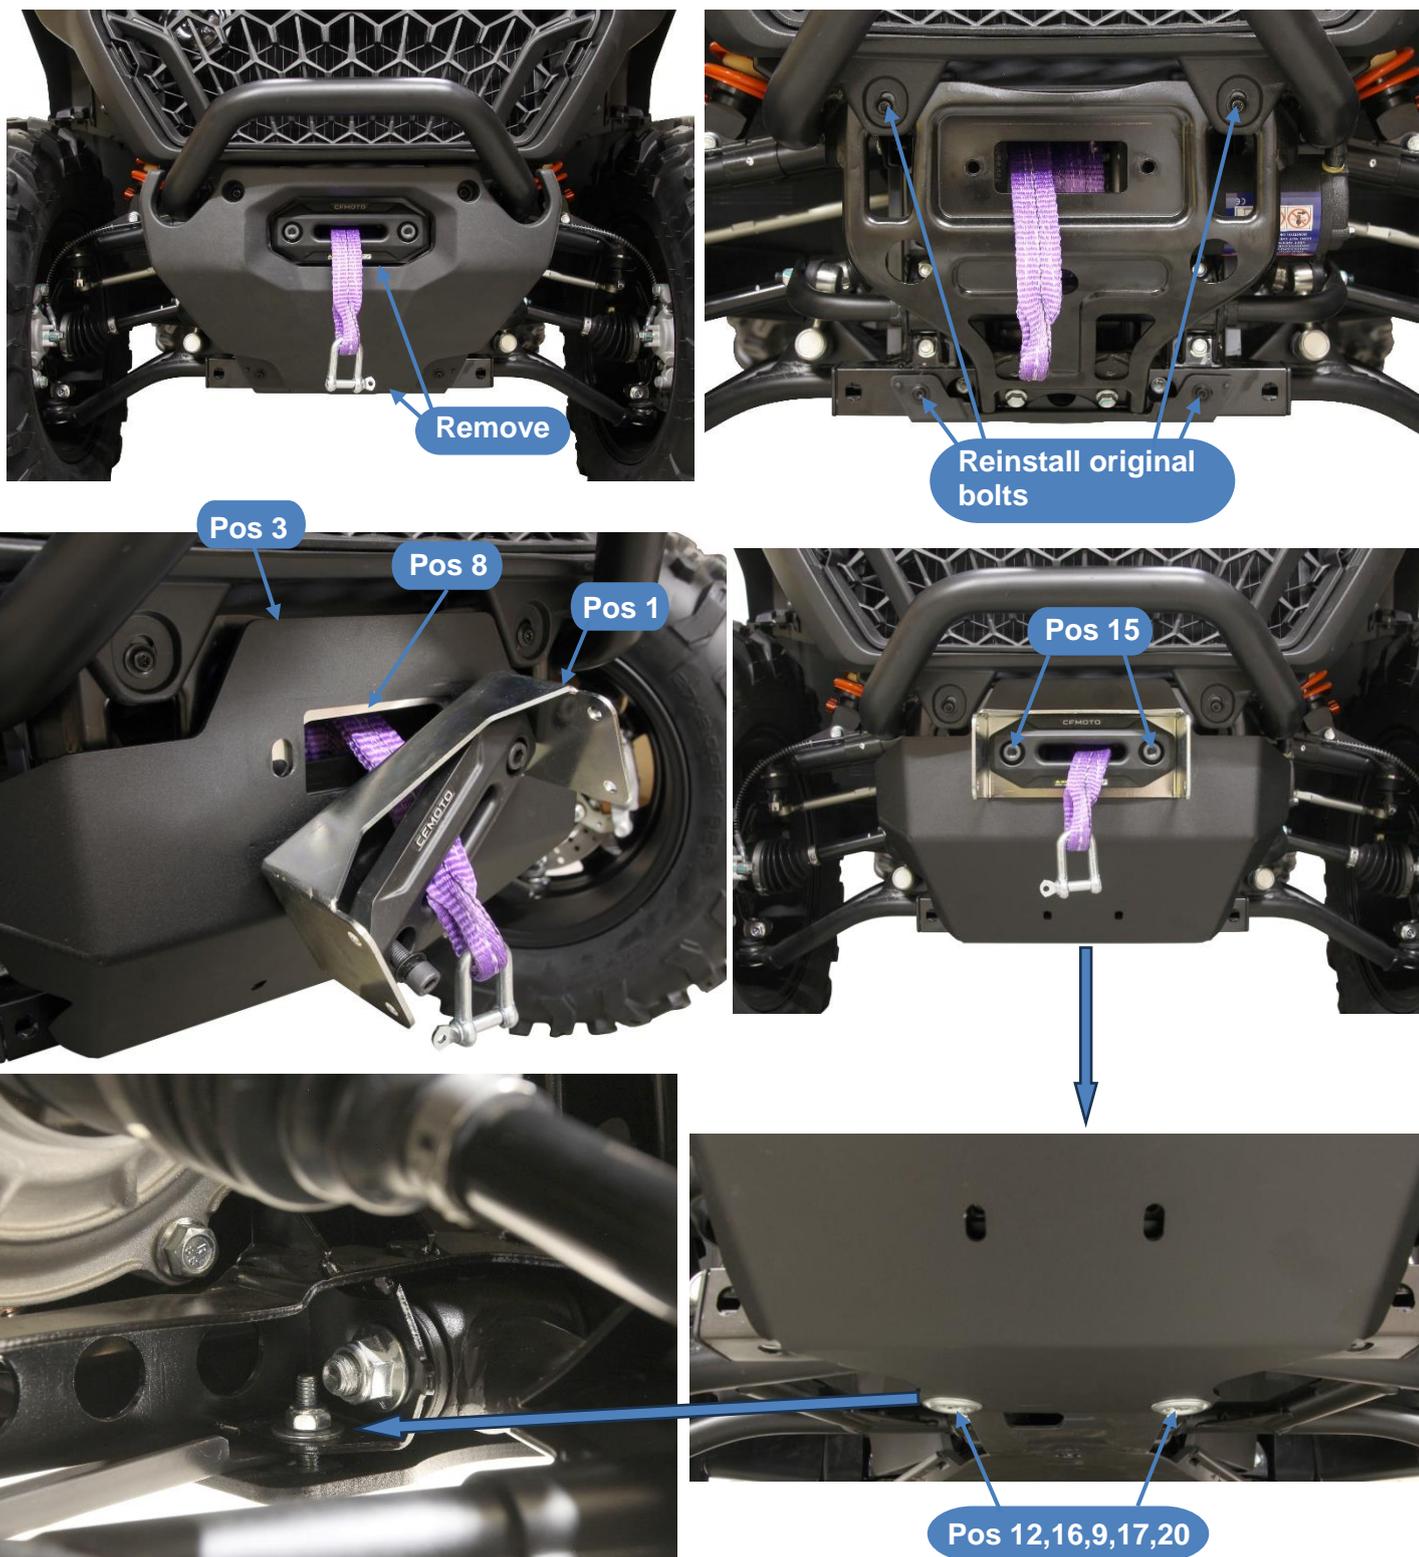

Installation with Iron Baltic skid plate:

Install the lower mount 71.11901 (Pos. 1) under the winch fairlead.



Installation with Iron Baltic skid plate:

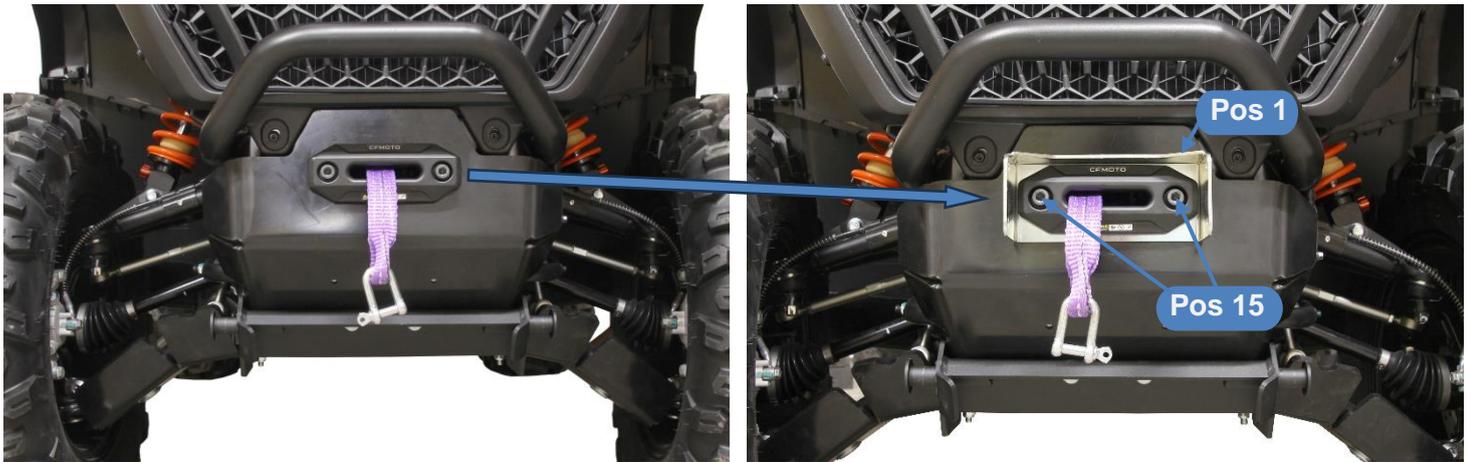

Step 2 Reinstall front mount adapter.



Step 3 Install lift cylinder holder 71.11902K (Pos. 2).

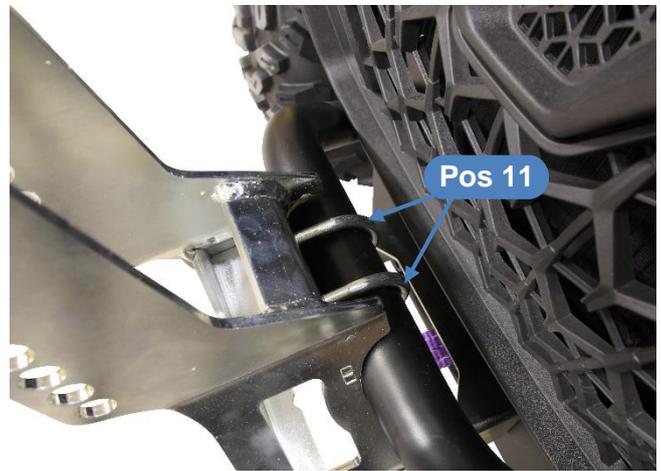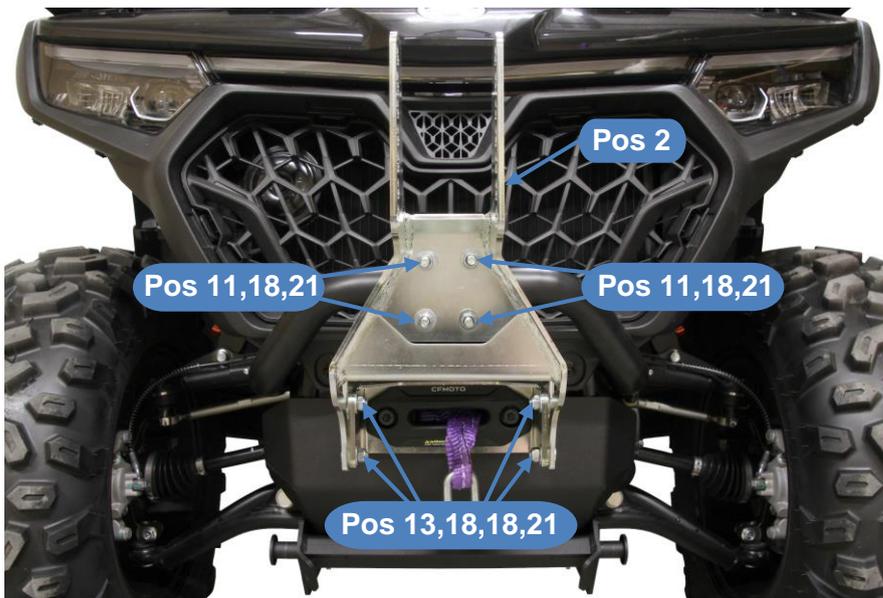


Step 4 Install cylinder mount (Pos. 4) to plow frame.



Step 5

Install cylinder. For fastening use cylinder upper pin (Pos. 5), lower pin (Pos. 6) and cotter pins (Pos. 10). If installing hydraulic cylinder, add bushings (Pos. 7) between the cylinder and cylinder holder.

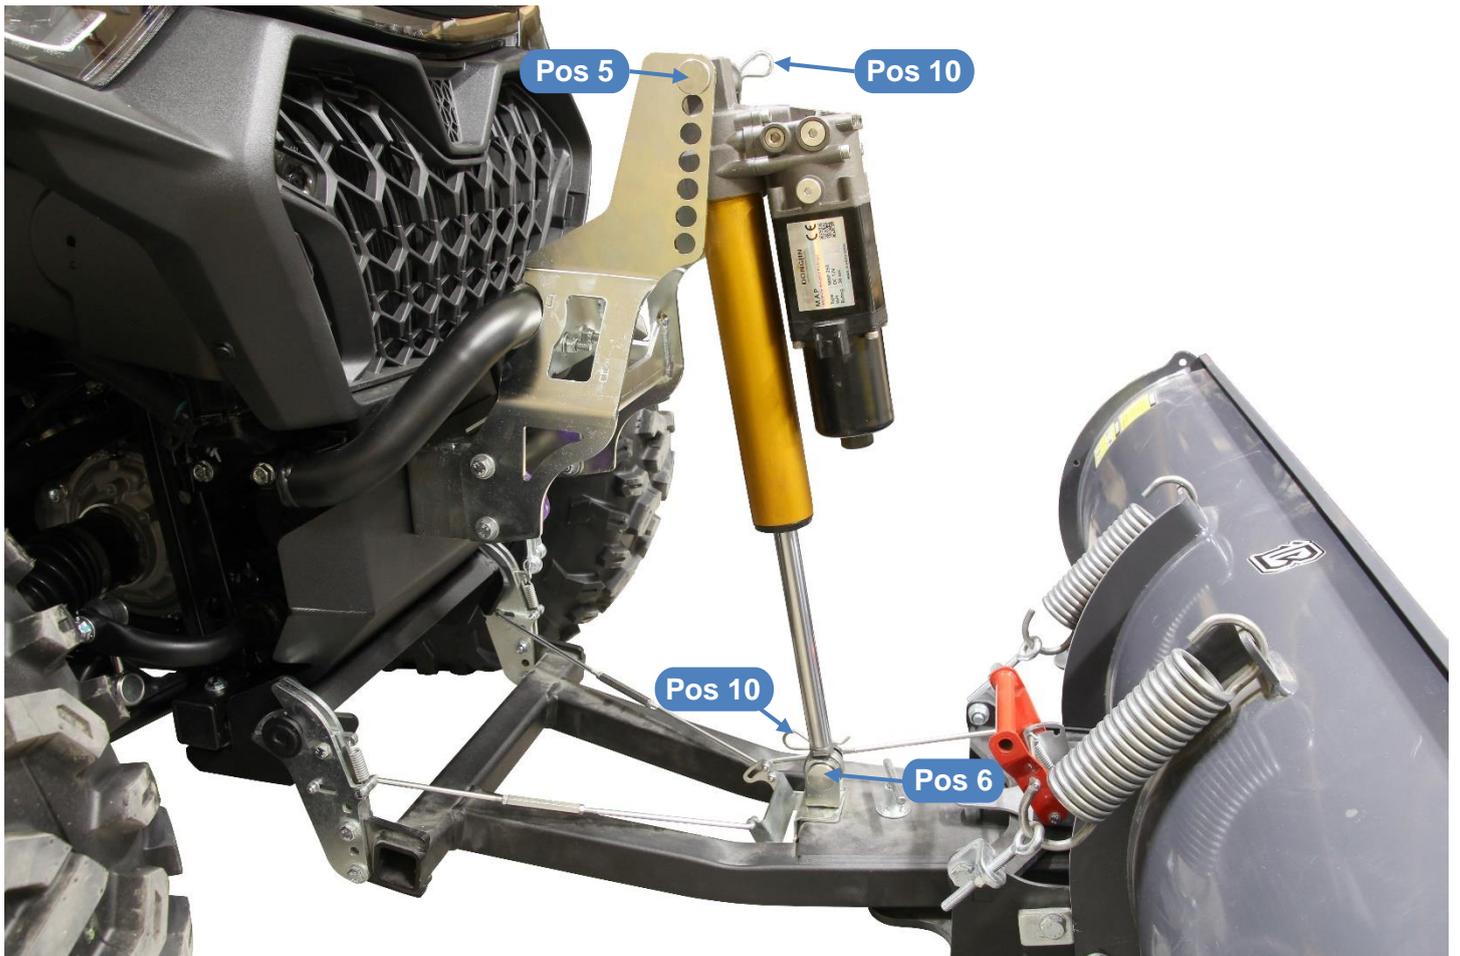

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticld

