

IRON BALTIC

LIFT CYLINDER ADAPTER

CAN AM Maverick Trail

Code 71.12200

Version 10012024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


MULTILINGUAL MANUAL



code.ironbaltic.com/u/N1q6SSeh

SPECIFICATION

Pos.	Description	Code	Amount
1	Cylinder holder	71.12201K	1
2	Cylinder mount for plow frame	71.3003	1
3	Cylinder upper pin	71.3004	1
4	Cylinder bottom pin	71.3005	1
5	Distance bushing (for hydraulic cylinder)	71.3006	2
6	Cotter pin 3 mm DIN11024	OT.07.01.020	2
7	U-bolt M8x42	OT.05.01.040	4
8	Bolt M12x30 DIN933	OT.02.02.390	1
9	Washer Ø8/20 SFS3738	OT.04.03.030	8
10	Washer Ø12 DIN125	OT.04.01.050	1
11	Nyloc nut M8 DIN985	OT.03.02.040	8
12	Nyloc nut M12 DIN985	OT.03.02.060	1

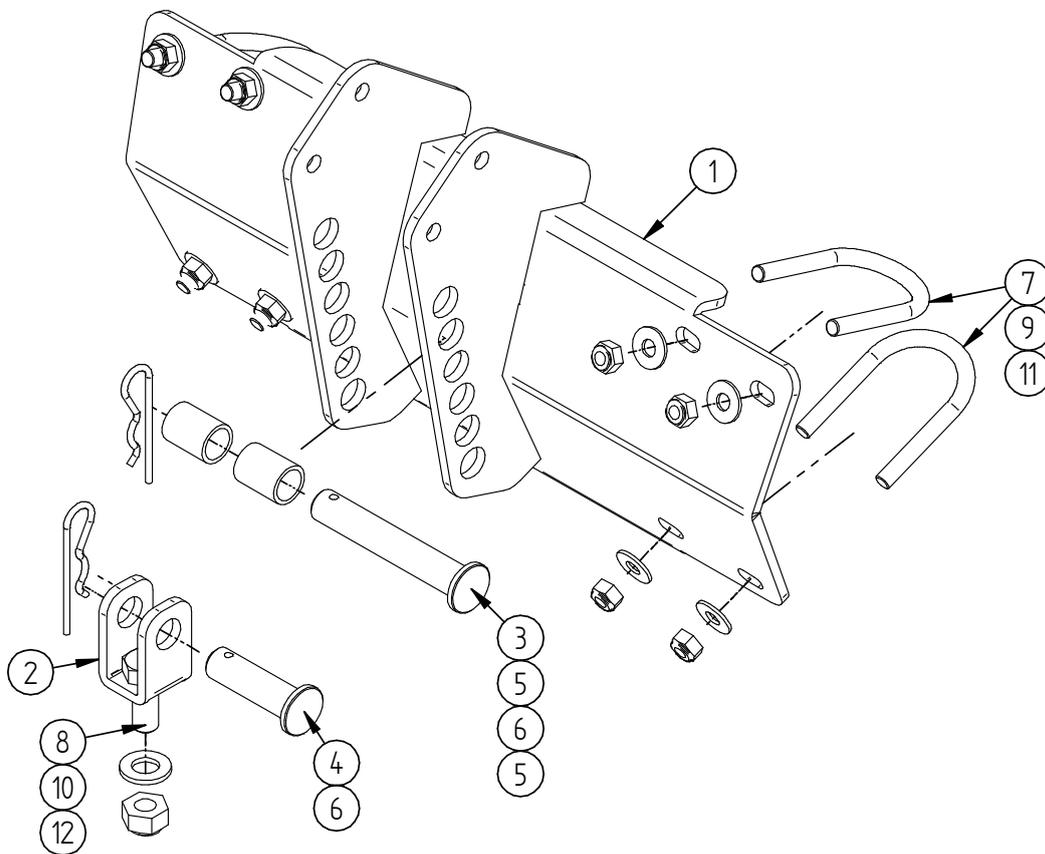

TOOLS REQUIRED FOR INSTALLATION:




- Spanner 13mm
- Spanner 15mm
- Spanner 17mm
- Socket wrench 13mm
- Socket wrench 15mm
- Socket wrench 17mm

FITTING INSTRUCTIONS


Step 1

Install lift cylinder adapter (Pos.1). For fastening use U-bolts M8x42 (Pos.7), Ø8/20 washers (Pos.9) and M8 nyloc nuts (Pos.11)

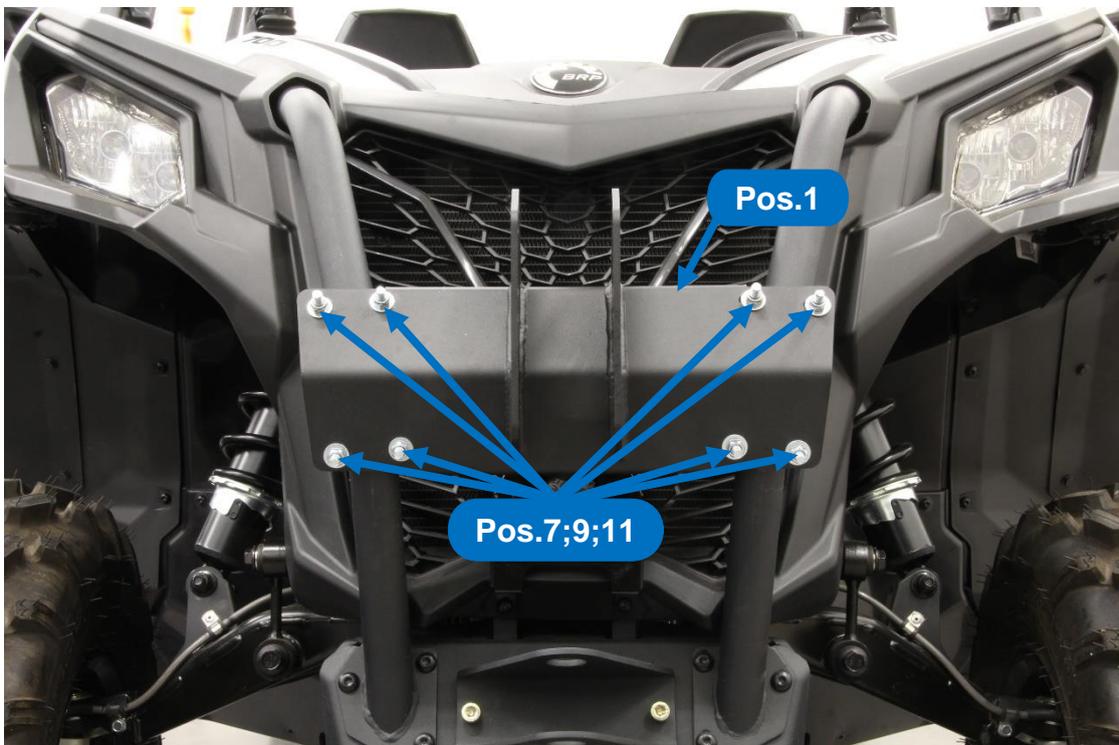


Step 2

Install cylinder mount (Pos.2) to plow frame. For fastening use M12x30 bolt (Pos.8), Ø12 mm washer (Pos.10) and M12 nyloc nut (Pos.12).

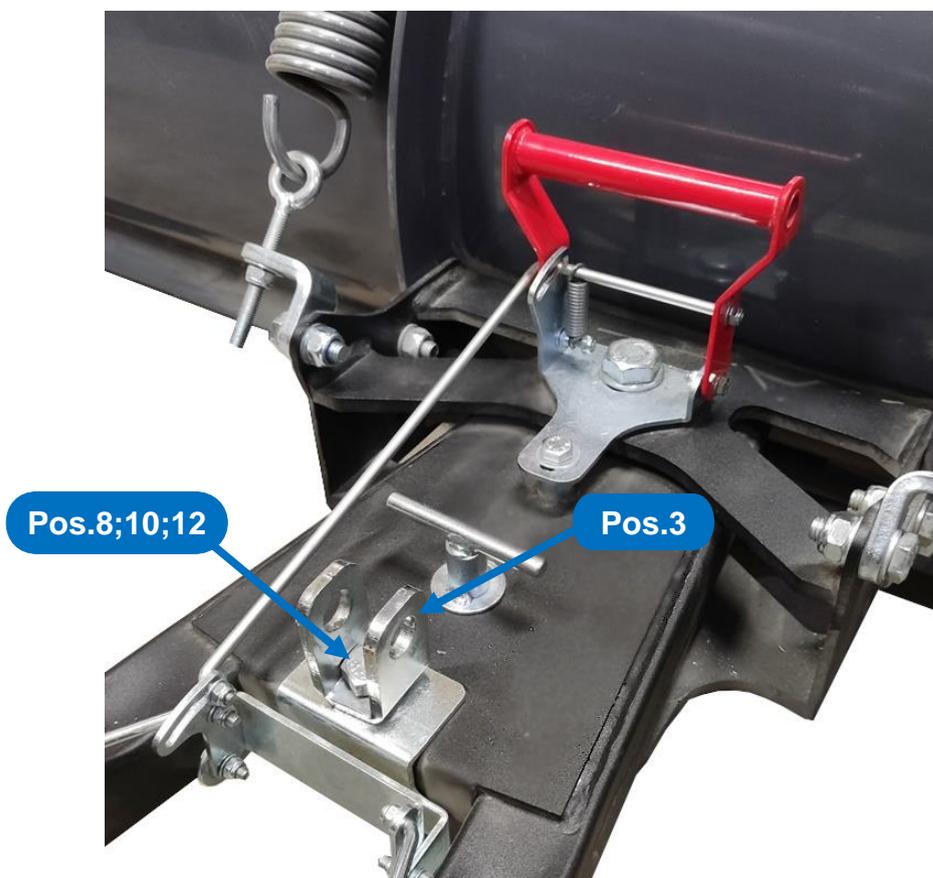

Step 3

Install cylinder. For fastening use cylinder upper pin (Pos.3), lower pin (Pos.4) and cotter pins (Pos.6). If installing hydraulic cylinder, add bushings (Pos.5) between the cylinder and cylinder holder. NB! Make sure that if the cylinder is in minimum position (the plow is raised) then the plow and the plow frame does not touch the UTV, if necessary, change the cylinder position.

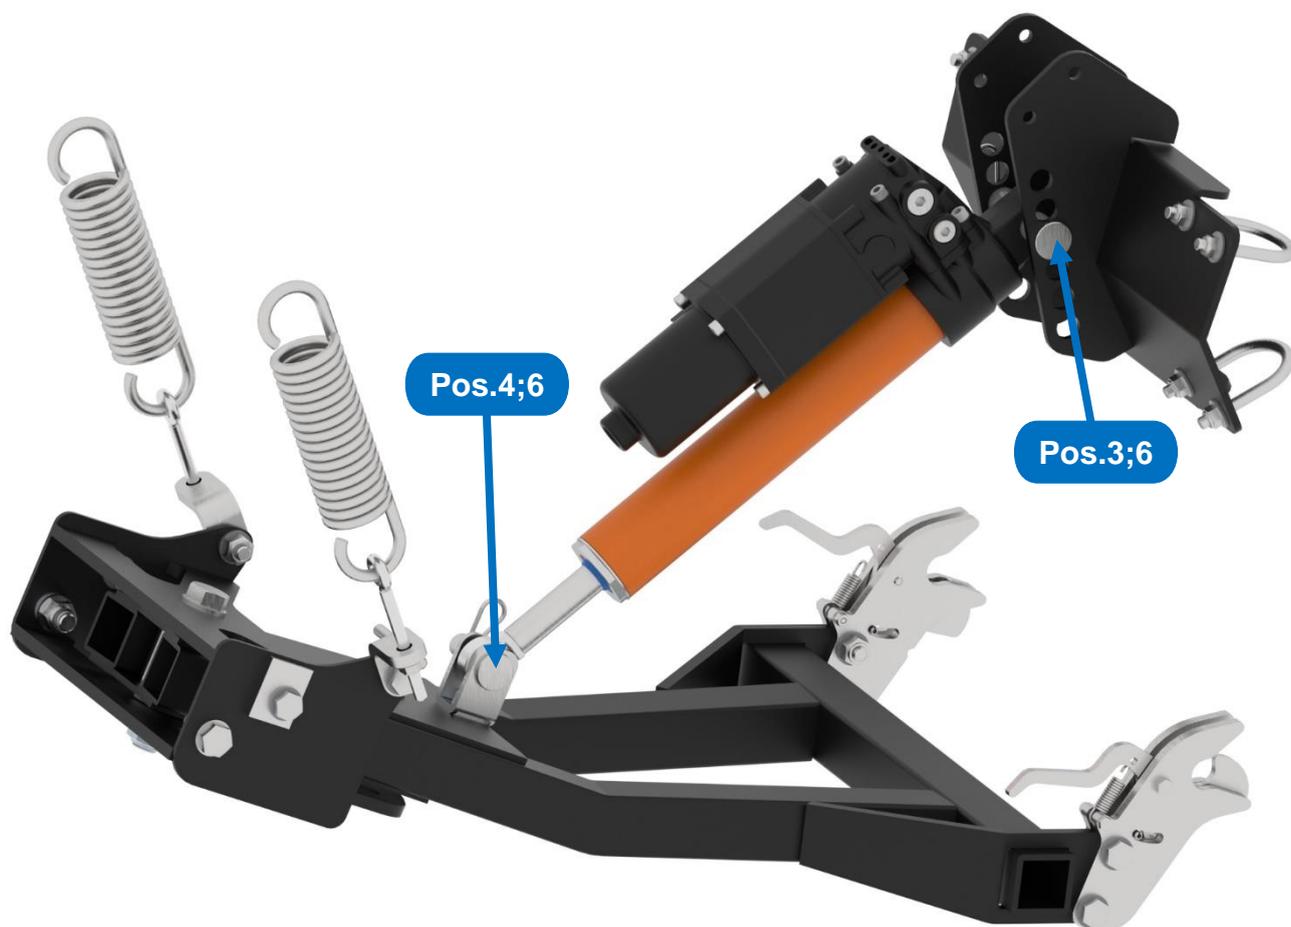

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

