

IRON BALTIC

LIFT CYLINDER HOLDER

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/47M3f5JZ

CFMOTO

U10 PRO / U10 PRO XL

Code 71.12600

Version 09092025



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


SPECIFICATION

Pos	Description	Code	Amount
1	Adapter	71.12601K	1
2	Distance bushing (for adapter)	71.12605	2
3	Cylinder mount for frame	71.3003	1
4	Cylinder upper pin	71.3004	1
5	Cylinder bottom pin	71.3005	1
6	Distance bushing (for hydraulic cylinder)	71.3006	2
7	Cotter pin 3 DIN 11024	OT.07.01.020	2
8	Bolt M8x40 DIN933	OT.02.02.220	2
9	Bolt M10x1,25-50 DIN912	OT.02.06.058	2
10	Bolt M12x30 DIN933	OT.02.02.390	1
11	Washer Ø8/20 SFS3738	OT.04.03.030	2
12	Washer M12 DIN125	OT.04.01.050	1
13	Nyloc nut M12 DIN985	OT.03.02.060	1



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 13mm
- Socket wrench 19mm
- Allen key 8mm

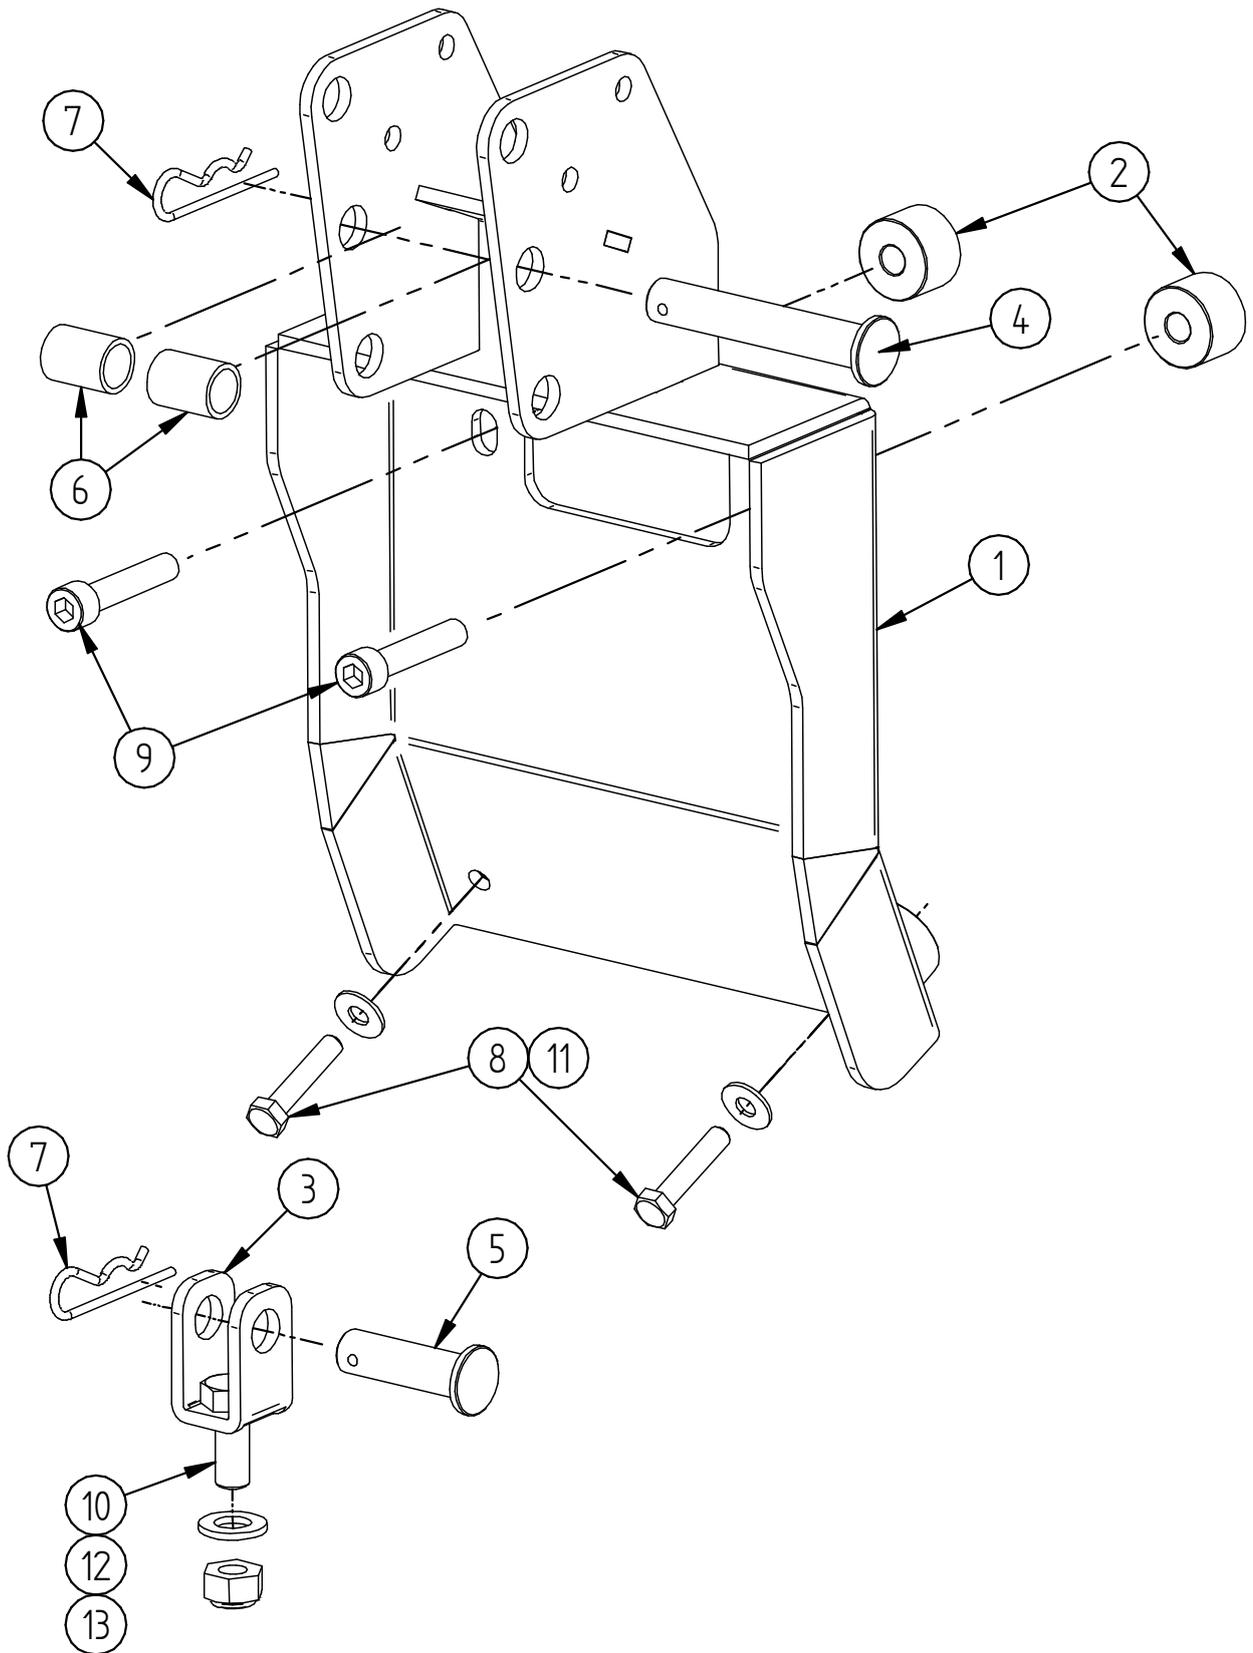

Numbers on drawing correspond to Pos numbers on specification table.

FITTING INSTRUCTIONS


Step 1 Remove bolts and winch roller as shown in the picture.



Step 2 Install adapter and winch roller. For fastening use M8x40 bolts (Pos.8), M10x1,25-50 bolts (Pos.9), Ø8/20 washers (Pos.11), original washers and distance bushings (Pos.2). Distance bushings go between adapter and ATV frame.



Step 3 Install cylinder mount (Pos.3) to plow frame. For fastening use M12x30 bolt (Pos.10), Ø12 washer (Pos.12) and M12 nyloc nut (Pos.13).

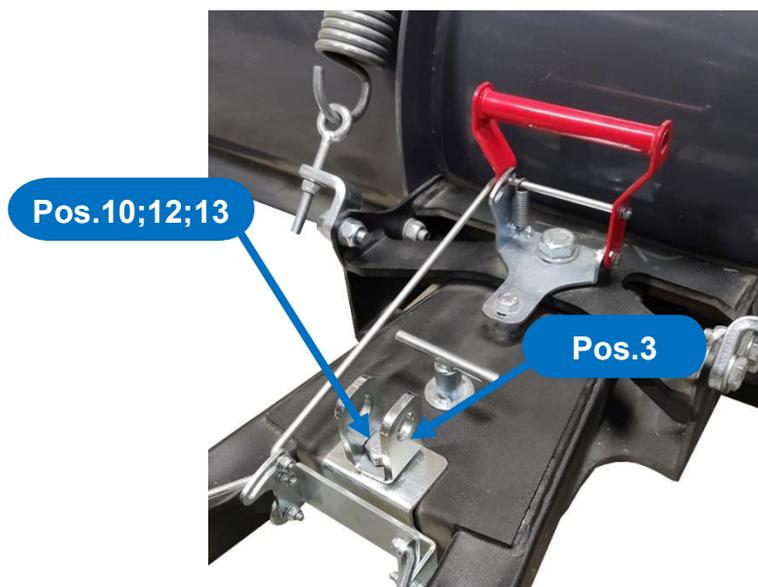

Step 4 Install cylinder. For fastening use cylinder upper pin (Pos.4), lower pin (Pos.5) and cotter pins (Pos.7). If installing hydraulic cylinder, add bushings (Pos.6) between the cylinder and cylinder holder.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

