



code.ironbaltic.com/u/j9czPAcX

CLUTCH HOLDING TOOL

CAN AM

Outlander / Renegade

Code 80.1800

Version 09122023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Clutch basket holder	80.1801	1
2	Smaller fixator	80.1802	1
3	Handle	80.1803	1
4	Distance plate	80.1703	1
5	Carriage bolt M6x25 DIN603	OT.02.05.020	2
6	Bolt M6x25 DIN933	OT.02.02.070	2
7	Bolt M8x20 DIN933	OT.02.02.180	1
8	Washer Ø6/15 SFS3738	OT.04.03.020	2
9	Nut M6 Nyloc DIN985	OT.03.02.030	2

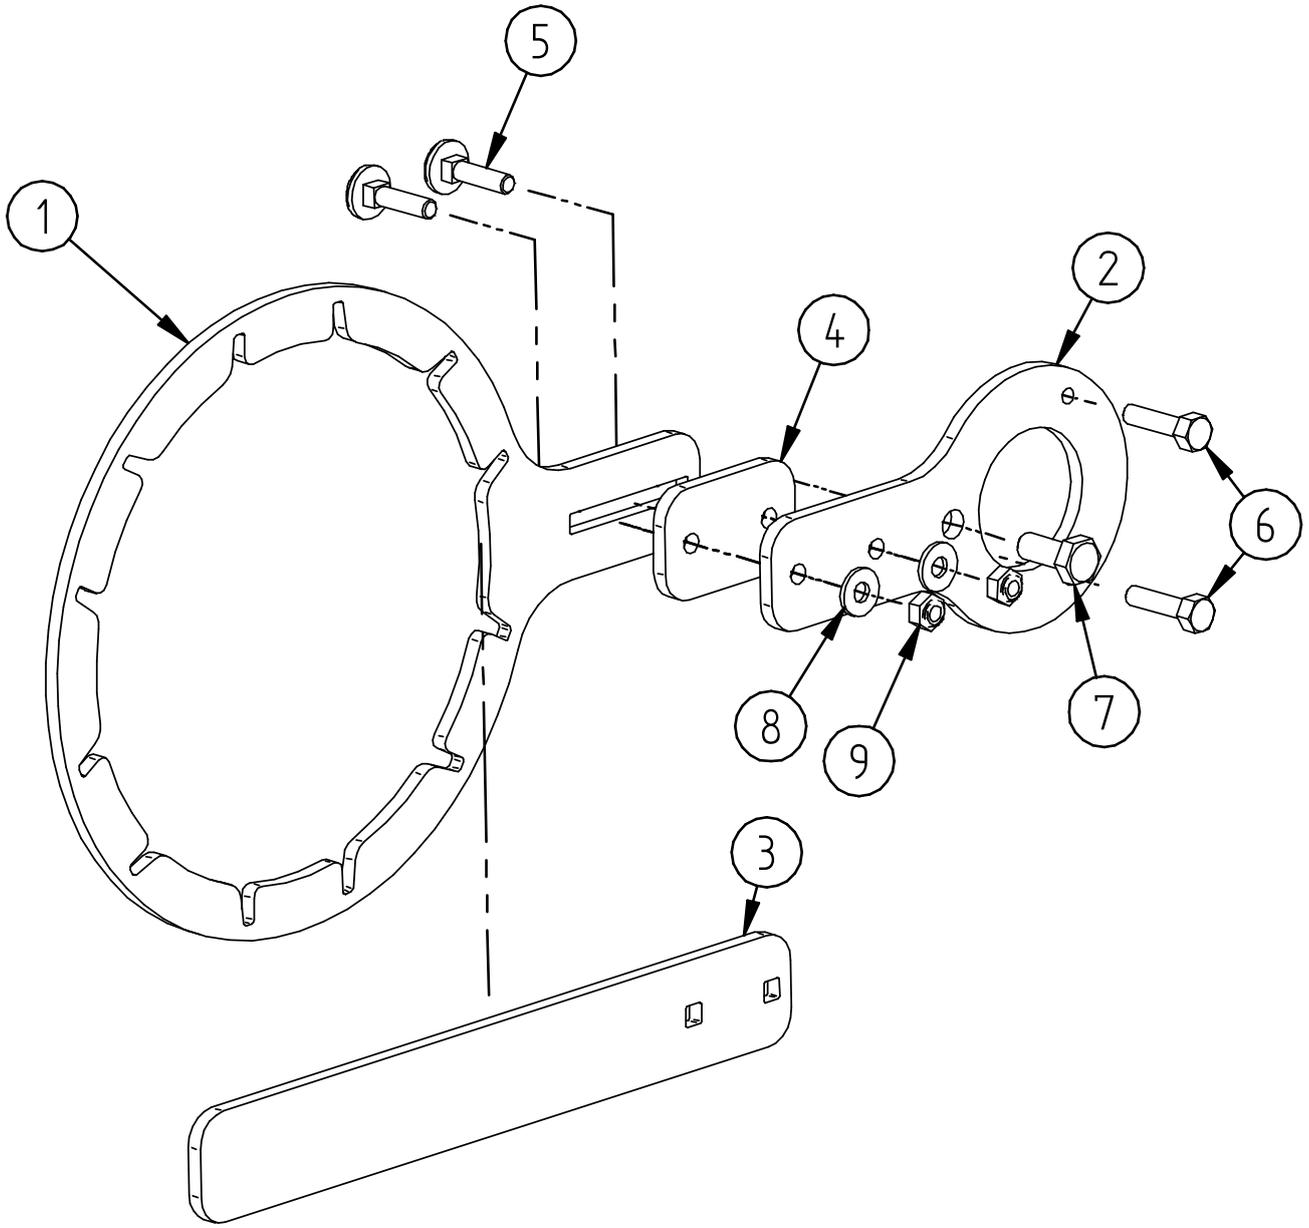

FITTING INSTRUCTIONS



Step 1

Assemble clutch holding tool.

First screw in Pos.6 bolts to Pos.2.


After that assemble Pos.1, Pos.4 and Pos.2 details.

To get the best fit, place the clutch holder in place, like shown in Step.2, and then tighten Pos.9 nuts.

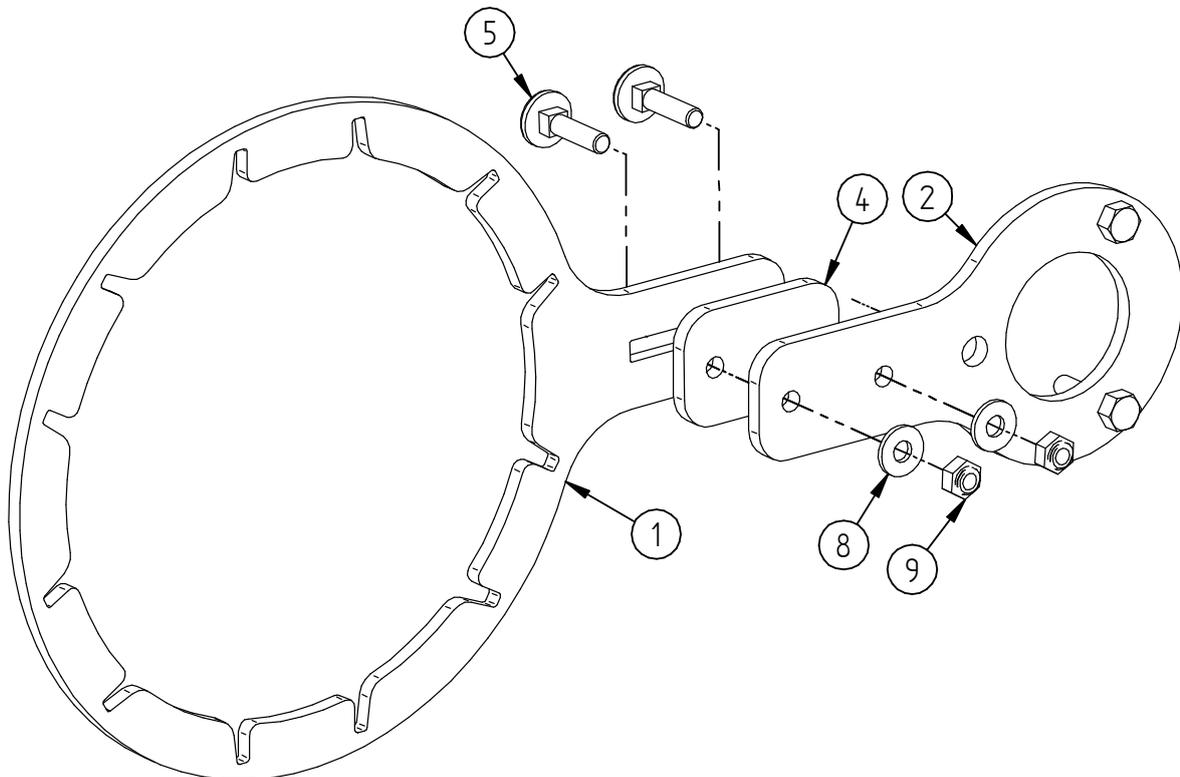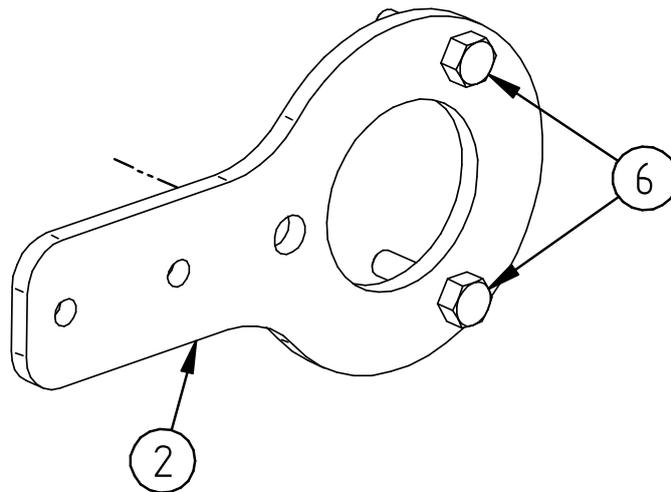


Step 2

Place the holder on top of the clutch basket. Pos.6 bolts go to the holes in clutch basket. Fix the position with M8x20 bolt.

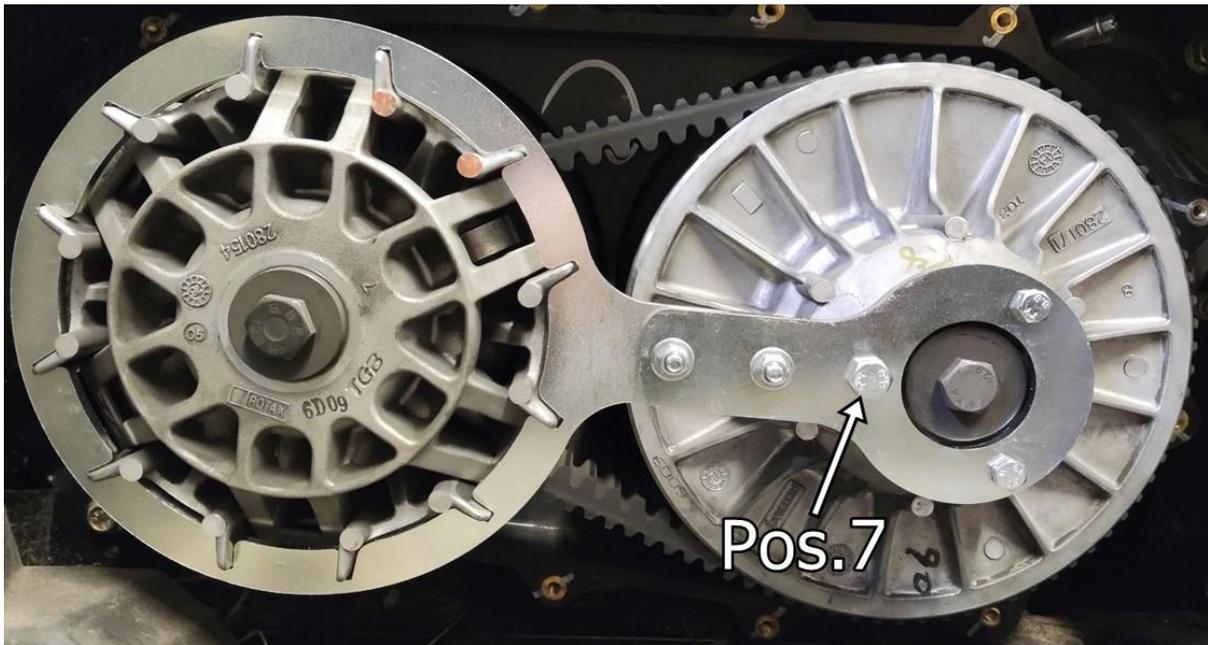

- It is possible to use the tool to hold in place one or another clutch element separately. For that, use the handle provided in the set.

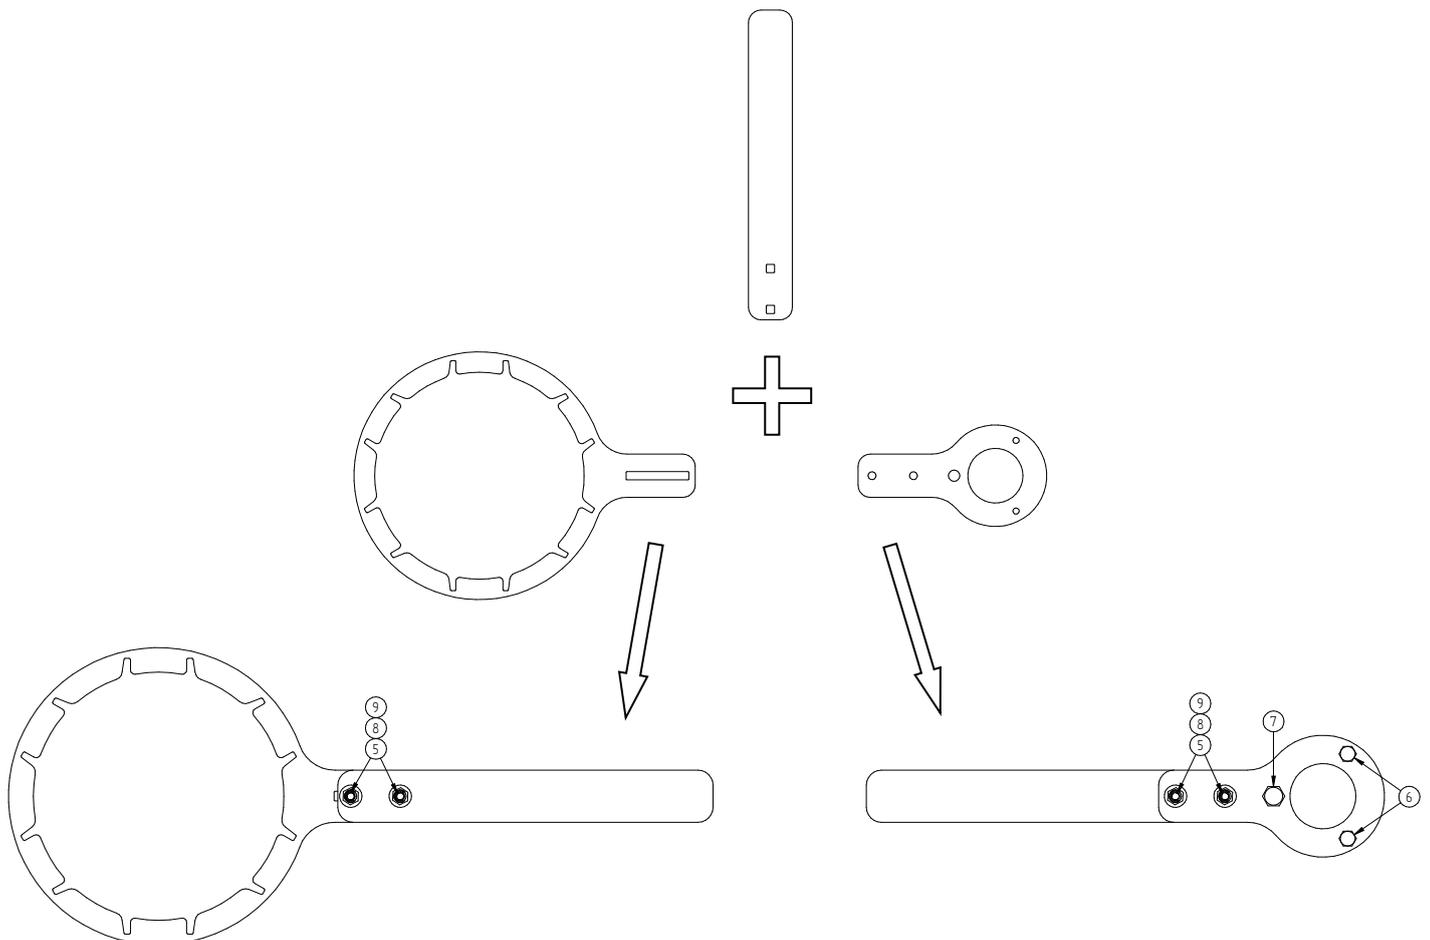

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

