



LOG SUPPORT

RECEIVER MOUNT SYSTEM

Code 84.14000

Version 06112023




Keep this manual for future reference!


If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Receiver mount	84.14001K	1
2	Front support right	84.14004	1
3	Front support left	84.14005	1
4	Rear support	84.14006	2
5	Bushing	84.14007	1
6	Chain 5,8x50x22 (2,0 m)	OT.27.00.050	1
7	Carabiner 10x100	OT.14.01.020	2
8	Locking pin 9,5x80	OT.10.11.012	1
9	Pin Quicklock	OT.53.00.045	1
10	Wing bolt M8x16 DIN 316	OT.03.03.095	2
11	Bolt M8x25 DIN 933	OT.02.02.190	2
12	Bolt M8x80 DIN 933	OT.02.02.270	2
13	Washer Ø8/20 SFS 3738	OT.04.03.030	10
14	Nut M8 Nyloc DIN 985	OT.03.02.040	4

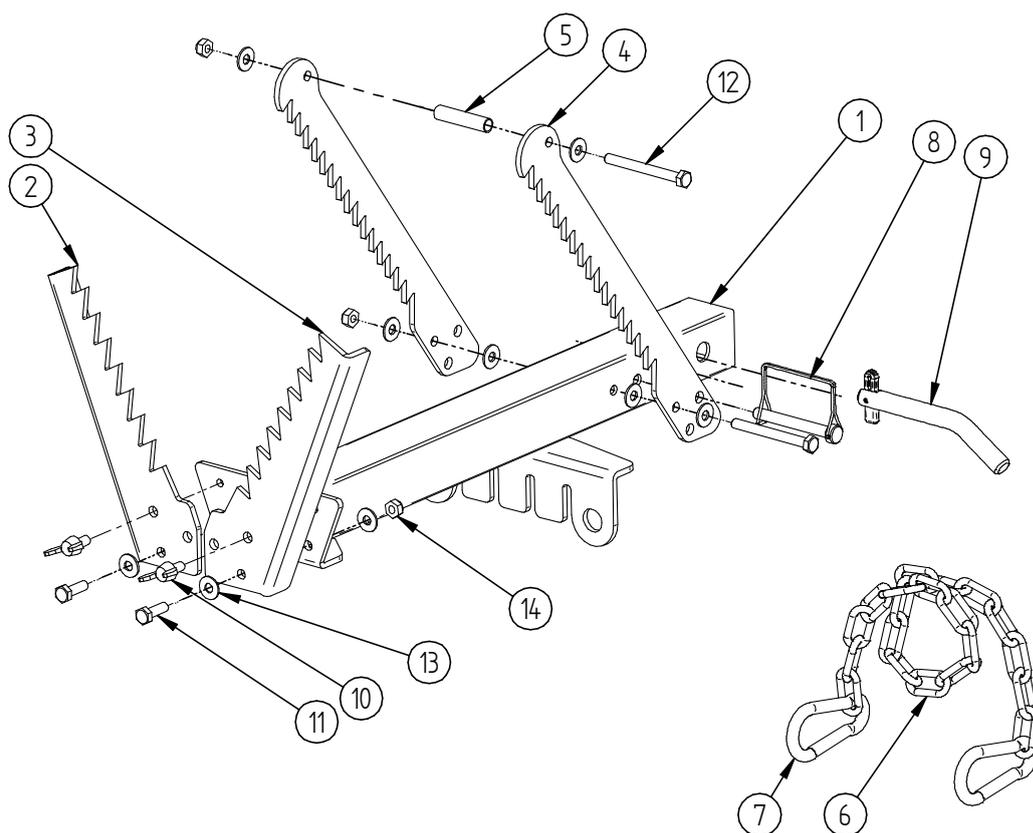

Suitable to use with UTV / side by side vehicles and larger ATV-s with stronger suspension or together with installed 14.11600 suspension lock.

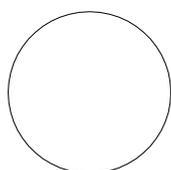


TOOLS REQUIRED FOR INSTALLATION:


- Spanner 13mm
- Socket wrench 13mm

FITTING INSTRUCTIONS

- Step 1** Install rear supports (Pos.4) to the receiver mount (Pos.1). For fastening use M8x80 bolts (Pos.12), Ø8 washers (Pos.13) and M8 nyloc nuts (Pos.14). To fix the position of the supports, use locking pin (Pos.8).

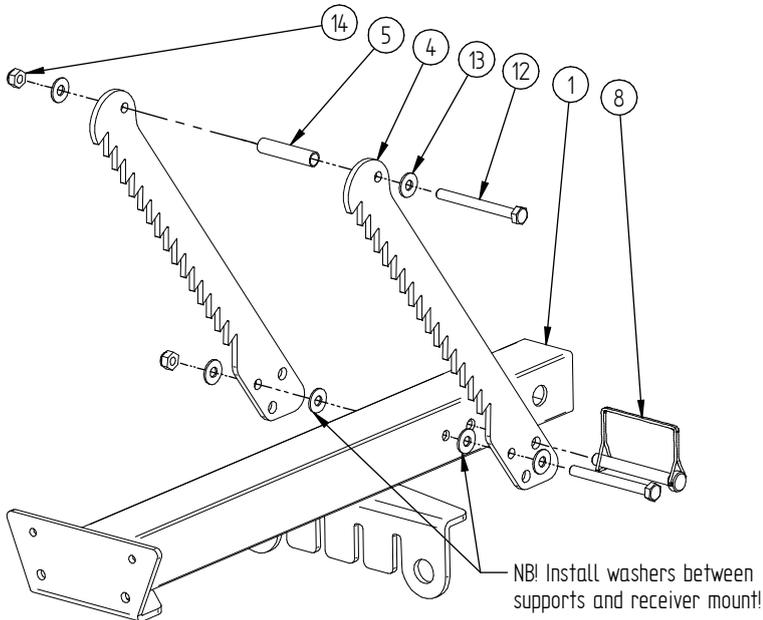


- Step 2** Install front supports (Pos.2, Pos.3) to the receiver mount. Use M8x25 bolts (Pos.11), Ø8 washers (Pos.13) and M8 nyloc nuts (Pos.14) to fasten lower holes. For upper holes use M8x16 wing bolts (Pos.10) to fasten the supports.


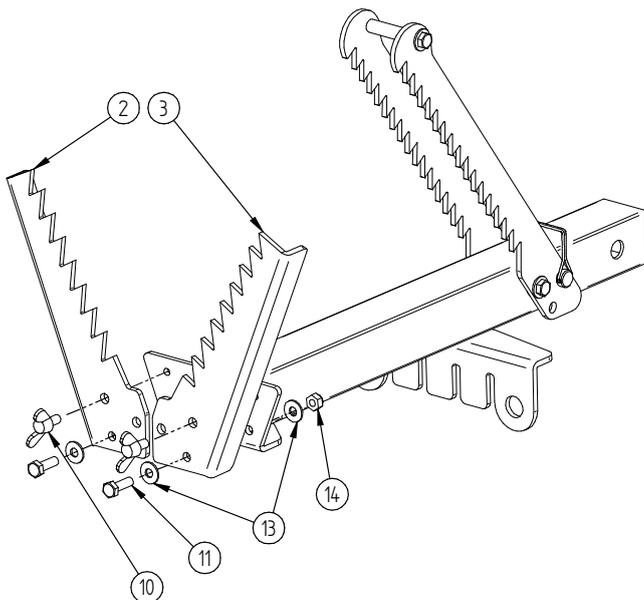


Step 3

Install log holder to the receiver mount system. For fastening use Quicklock pin (Pos.9)

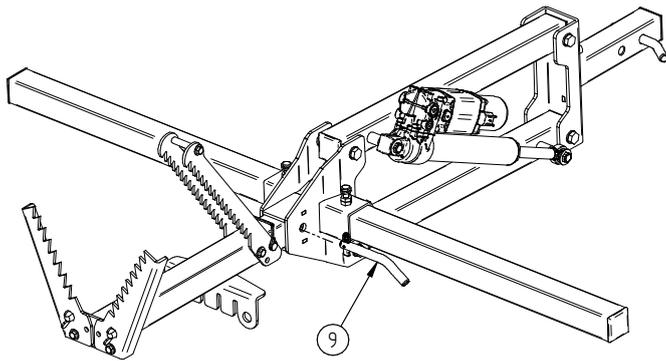

For log hauling move front supports and rear support to the lower position and turn around the receiver mount. Use a chain to secure the log.

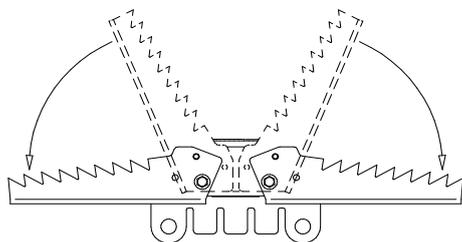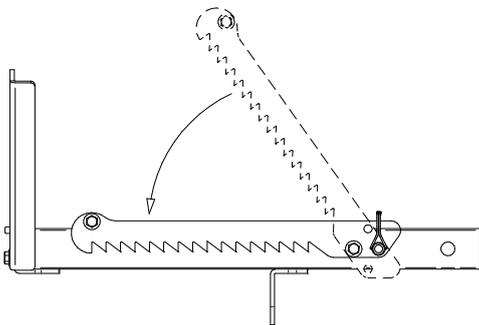

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticld

