

IRON BALTIC

DRAG HARROW

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/uIUYsPmL

Receiver mount system

Code 84.7000

Version 08012024

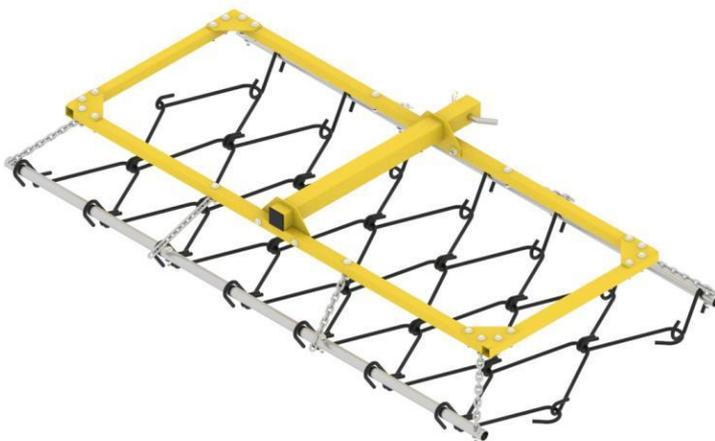


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Frame tube 1	84.7001	2
2	Frame tube 2	84.7002	2
3	Frame tube 3	84.7003K	1
4	Frame connecting plate	84.7005	4
5	Harrow tube	84.7006	2
6	Pin Quicklock	OT.53.00.045	1
7	Harrow	OT.52.01.010	1
8	Chain 5x36,5x19,3 (240 mm)	OT.27.00.040	8
9	Tube cap 50x50	OT.10.07.020	1
10	Bolt M8x50 DIN933	OT.02.02.240	24
11	Bolt M8x55 DIN933	OT.02.02.241	8
12	Washer Ø8/20 SFS3738	OT.04.03.030	64
13	Nyloc nut M8 DIN985	OT.03.02.040	32

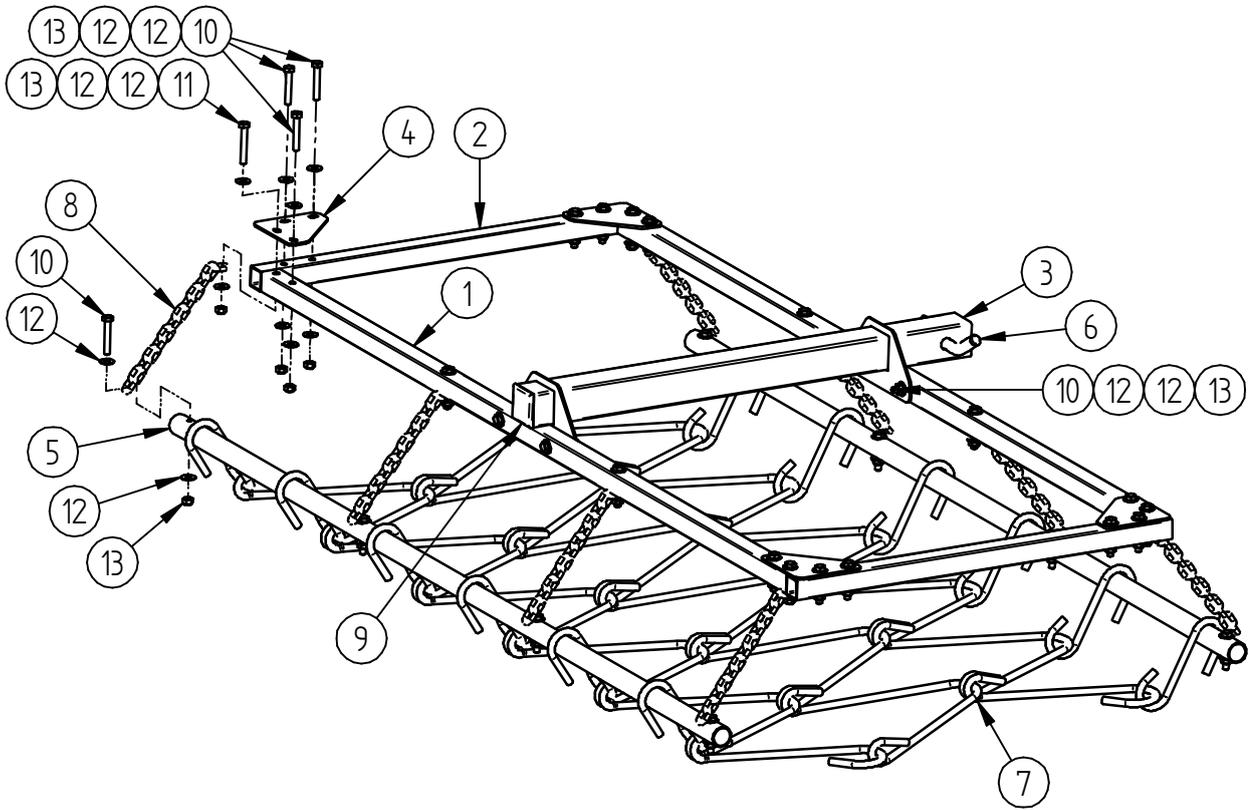

FITTING INSTRUCTIONS


Step 1

Assemble the harrow frame. Connect the frame tube 1 (Pos.1) and the frame tube 2 (Pos.2) with frame connecting plates (Pos.4). For fastening use M8x50 bolts (Pos.10), Ø8 washers (Pos.12) and M8 nyloc nuts (Pos.13).

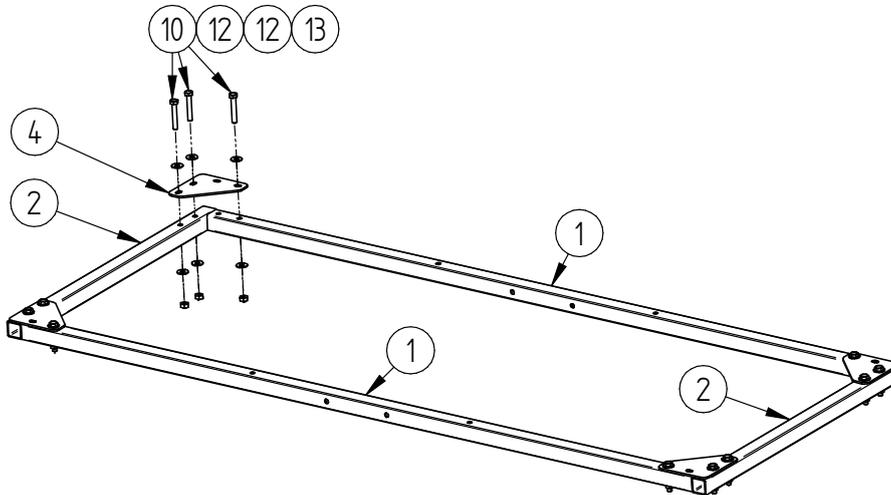


Step 2

Install the frame tube 3 (Pos.3). For fastening use M8x50 bolts (Pos.10), Ø8 washers (Pos.12) and M8 nyloc nuts (Pos.13).

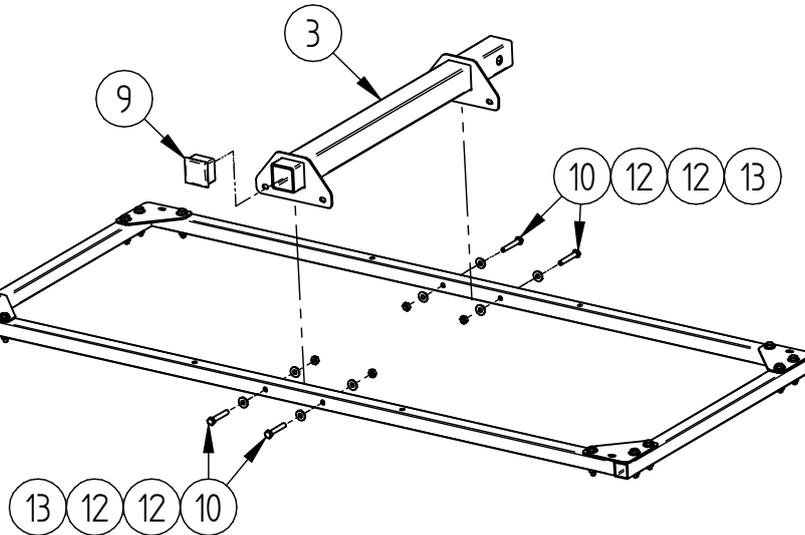


Step 3

Install chains (Pos.8) to the harrow frame. For fastening use M8x55 bolts (Pos.11), Ø8 washers (Pos.12) and M8 nyloc nuts (Pos.13).

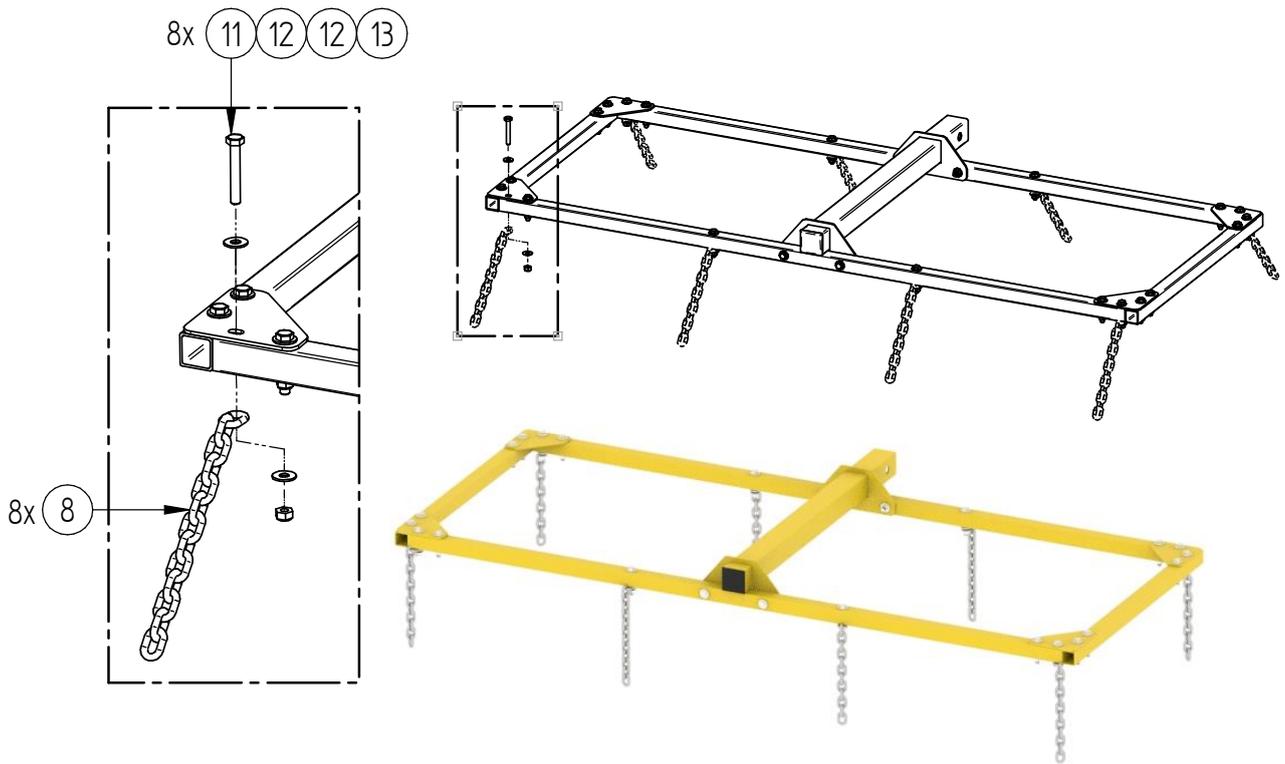

Step 4



Install the harrow pipes (Pos.5) to harrow (Pos.7).

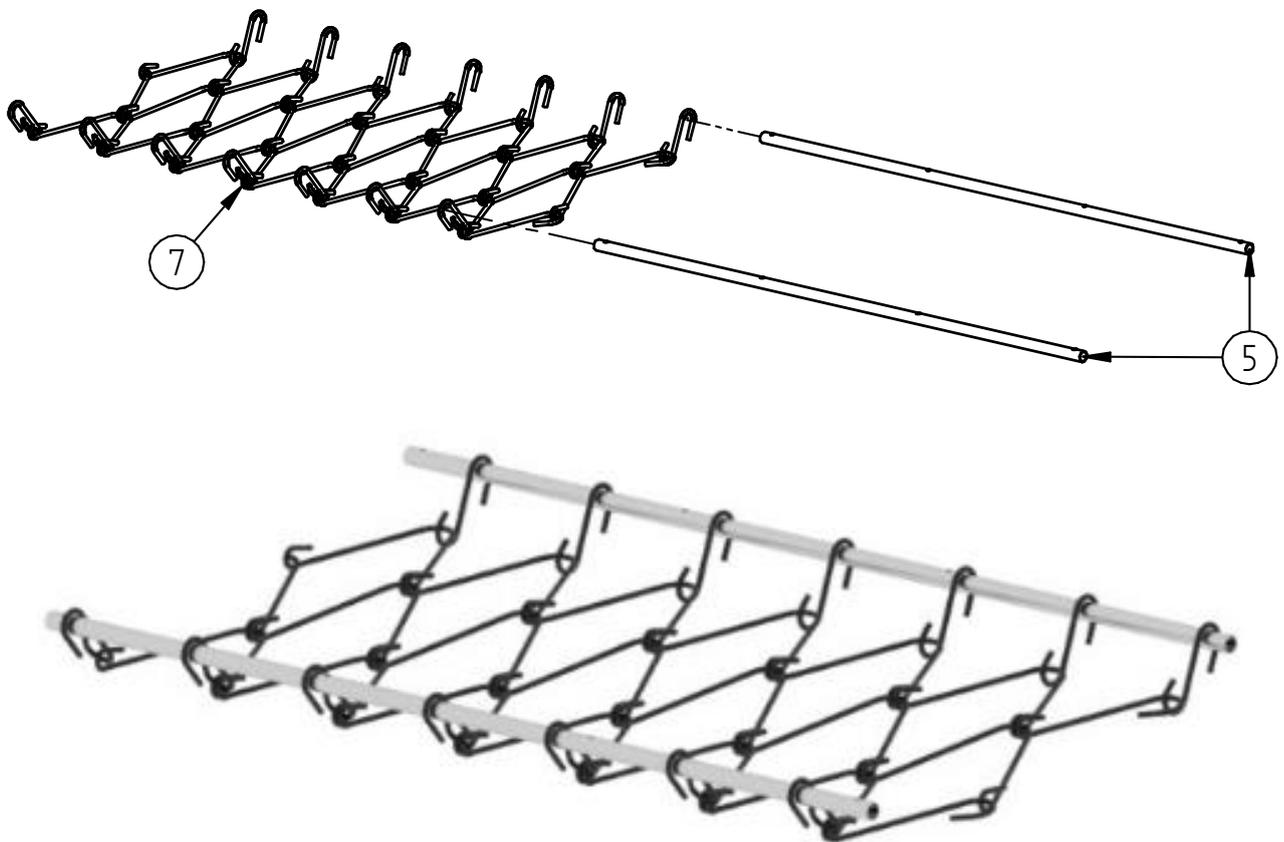

Step 5

Install the harrow to the harrow frame. For fastening use M8x50 bolts (Pos.10), Ø8 washers (Pos.12) and M8 nyloc nuts (Pos.13).

8x (10) (12) (12) (13)

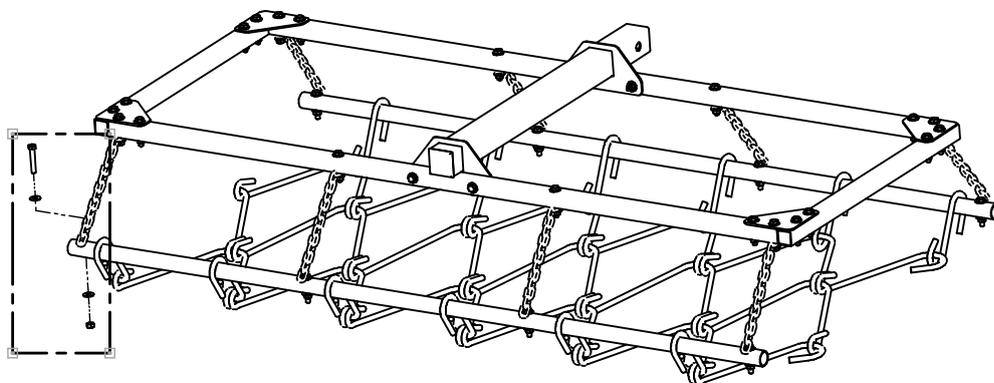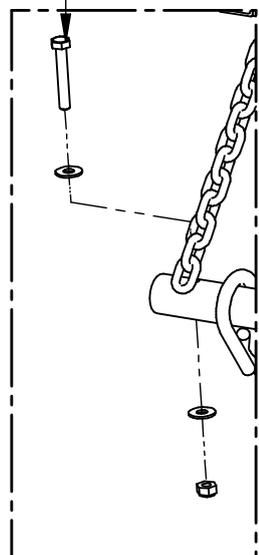

Step 6

Install the harrow to the receiver mount system. For fastening use pin (Pos.6).



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

