

# IRON BALTIC

## ACCESSORIES BOX

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/iteYHGfj](https://code.ironbaltic.com/u/iteYHGfj)

## IB-1200 / COMBO 1000

Code 86.3000

Version 09012024




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Accessories box	86.3001K	1
2	Distance plate	86.3003	8
3	Saw holder	14.7100	1
4	U-clamp M8x25	OT.05.01.005	4
5	Pipe clamp (38mm)	OT.05.01.030	3
6	Bolt M6x40 DIN7991	OT.02.04.070	4
7	Carriage bolt M8x60 DIN603	OT.02.05.080	6
8	Washer Ø6/18 DIN9021	OT.04.02.020	4
9	Washer Ø8/20 SFS3738	OT.04.03.030	14
10	Nyloc nut M6 DIN985	OT.03.02.030	4
11	Nyloc nut M8 DIN985	OT.03.02.040	14

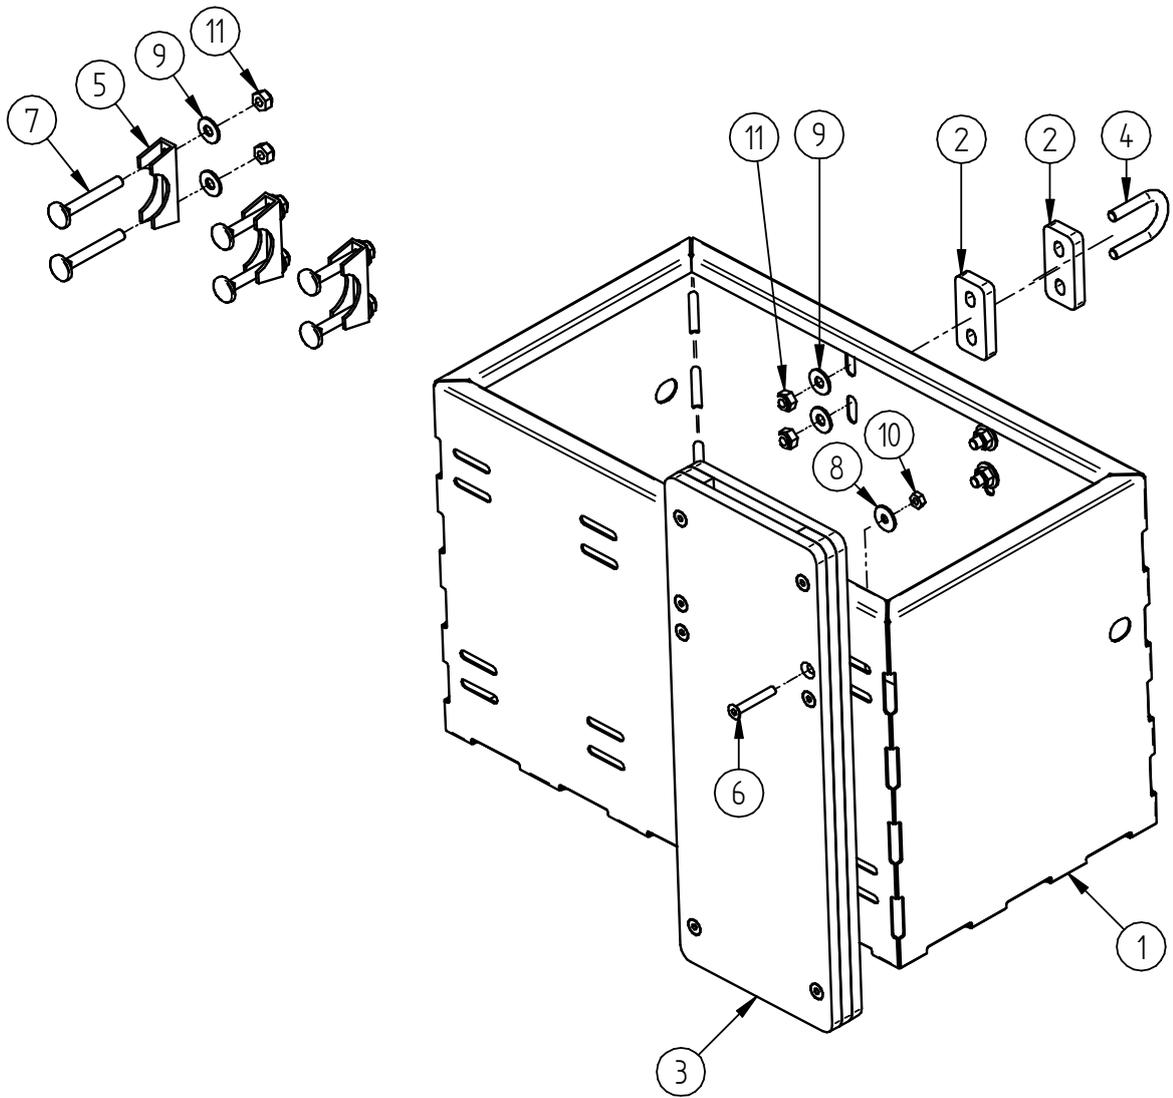




# FITTING INSTRUCTIONS

## IB 1200 Trailer

### Step 1


Install the accessories box (Pos.1) to the trailer protective fence. For fastening use M8x25 U-clamps (Pos.4), Ø8 mm washers (Pos.9) and M8 nyloc nuts (Pos.11).

NB! Install distance plates (Pos.2) (2 pcs) to the mounting points in between accessories box and trailer protective fence.

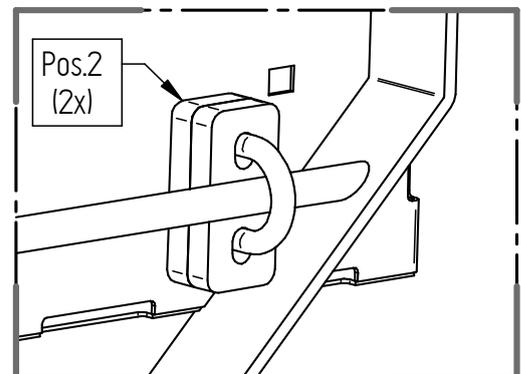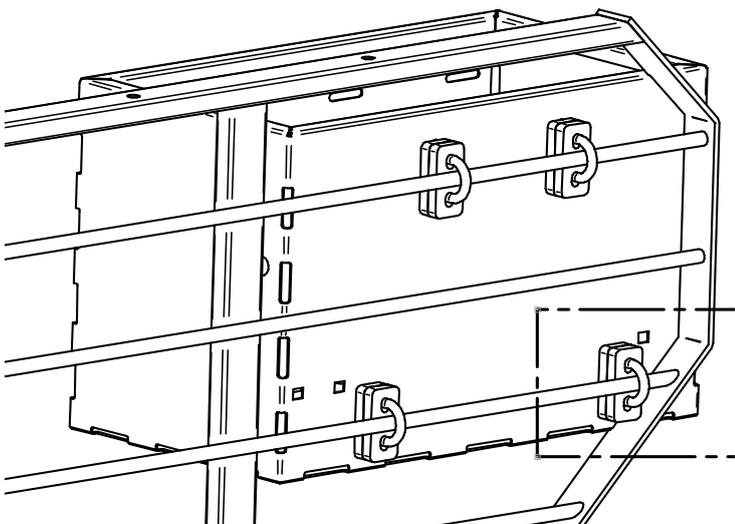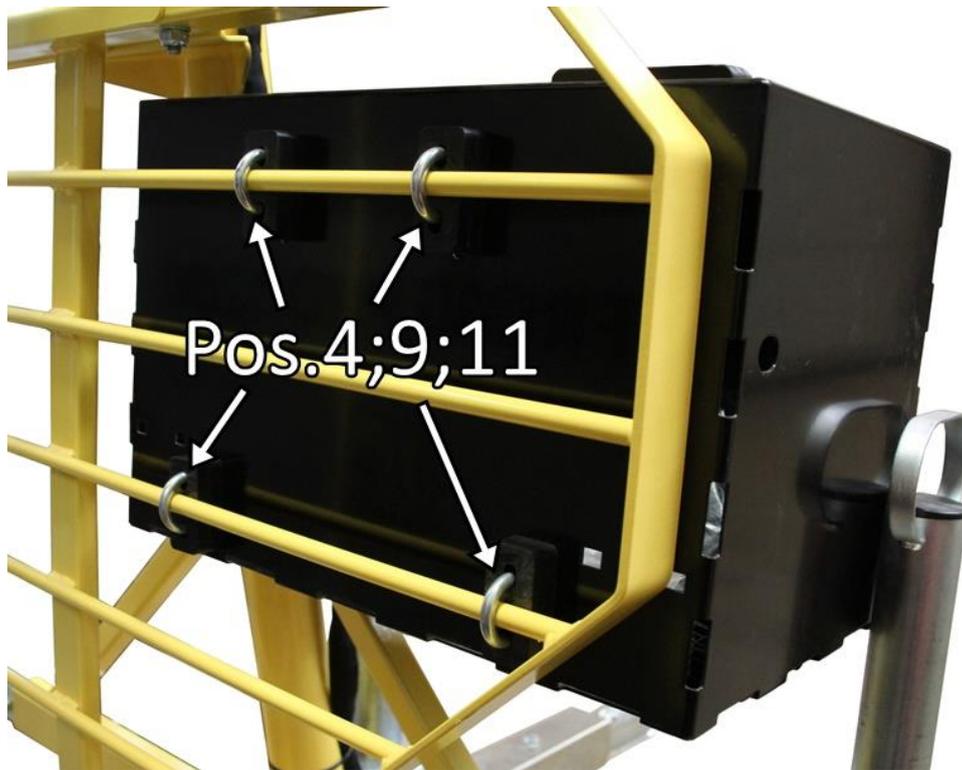

## Step 2

Install saw holder (Pos.2) to accessories box (Pos.1). For fastening use M6x40 bolts (Pos.6), Ø6 mm washers (Pos.8) and M6 nyloc nuts (Pos.10).

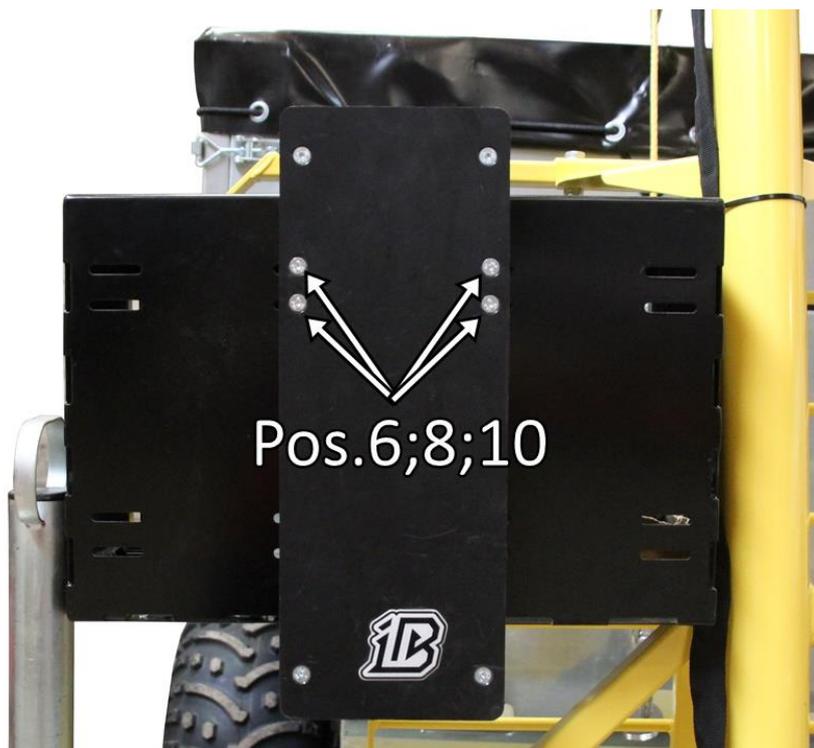

# FITTING INSTRUCTIONS

## COMBO Trailer



### Step 1

Remove crane frame upper mounting bolt.




### Step 2

Install the accessories box (Pos.1) to the trailer protective fence. For fastening use M8x60 carriage bolts (Pos.7), 38 mm pipe clamp (Pos.5), Ø8 mm washers (Pos.9) and M8 nyloc nuts (Pos.11). In addition, reinstall the mounting bolt removed in the previous step.

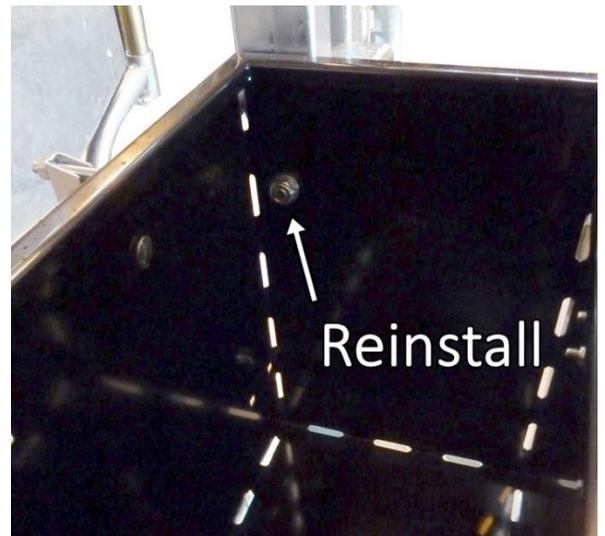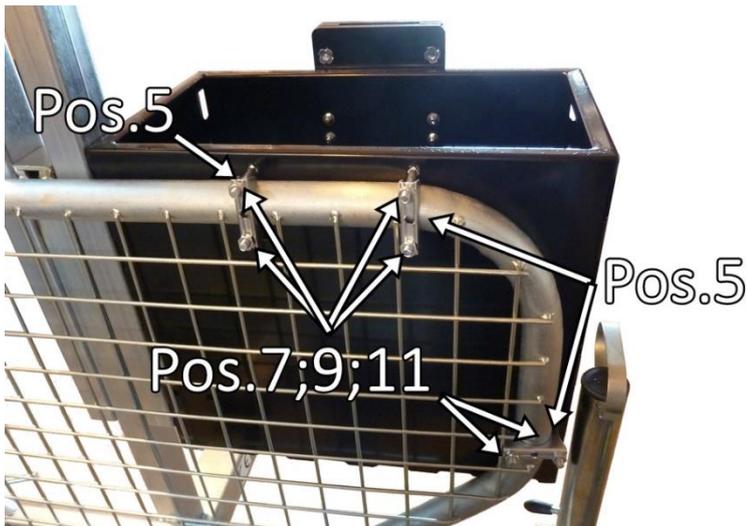

### Step 3

Install saw holder (Pos.2) to accessories box (Pos.1). For fastening use M6x40 bolts (Pos.6), Ø6 mm washers (Pos.8) and M6 nyloc nuts (Pos.10).

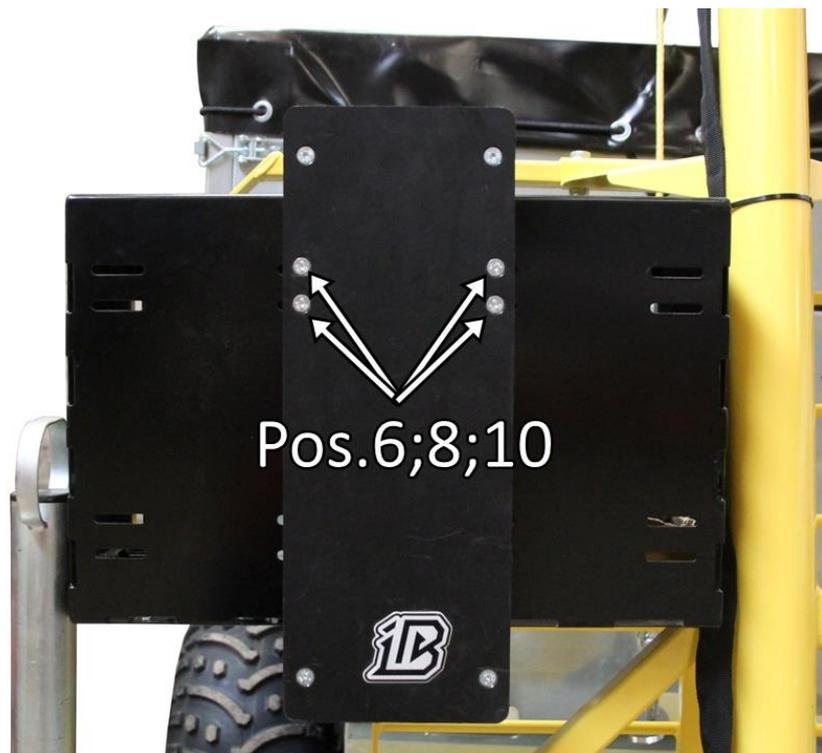

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

