

IRON BALTIC

PVC COVER

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/3LfAKOu1

IB-1200 / OFFROAD PRO 1200

Code 86.4000

Version 09012024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	PVC cover + rubber cord (7m)	86.4001	1
2	Cord eyelet	OT.10.15.010	14
3	Rivet 6x18	OT.06.01.042	14
4	Bolt M6x20 ISO7380	OT.02.03.030	14
5	Washer Ø6/15 SFS 3738	OT.04.03.020	14
6	Nyloc nut M6 DIN 985	OT.03.02.030	14


FITTING INSTRUCTIONS

Step 1


Drill $\text{\O}6$ mm holes in to the cargo box, to the hatches or to the cargo box extensions as shown in the figure and install cord eyelets (Pos.2). For fastening use 6x18 rivets (Pos.3) or M6x20 bolts (Pos.4), $\text{\O}6$ mm washers (Pos.5) and M6 nyloc nuts (Pos.6).

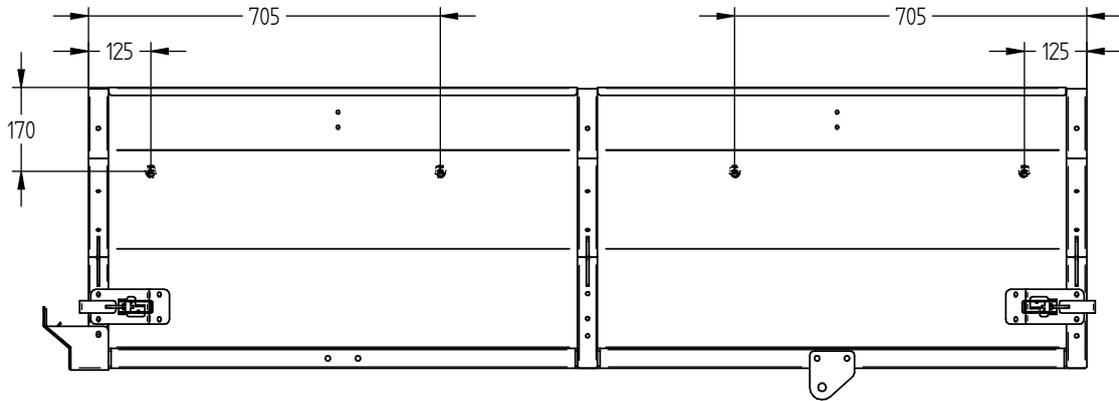


Cargo box side

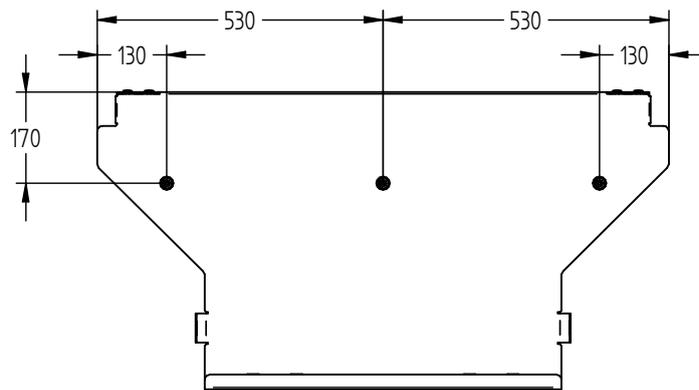

Cargo box hatch

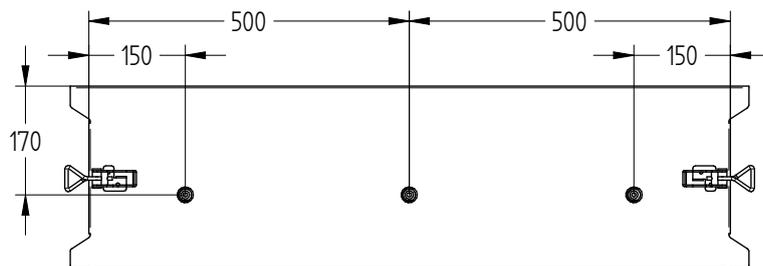

End extension

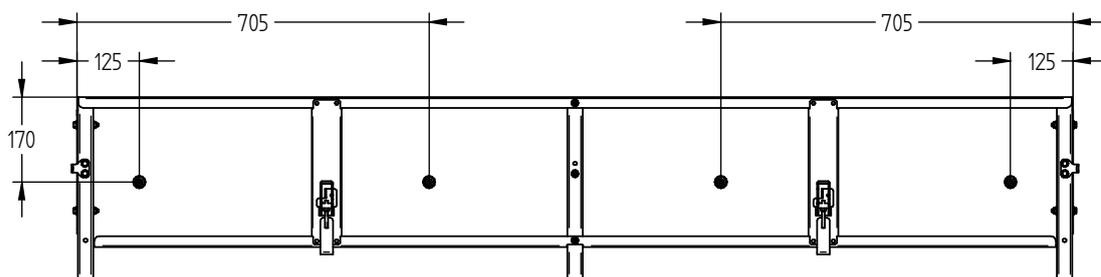

Side extension

Step 2

Attach rubber cord to the PVC cover and tighten so that the cover is easy to install to the trailer.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

