

# IRON BALTIC

## CARGO BOX EXTENSIONS

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/tYL0w3jv](https://code.ironbaltic.com/u/tYL0w3jv)

## OFFROAD 500

Code 89.2000

Version 11012024




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

# SPECIFICATION


<b>Pos.</b>	<b>Description</b>	<b>Code</b>	<b>Amount</b>
1	Side extension assembly	89.2001K	2
2	Latch hook plate	89.1014	4
3	End extension assembly	86.2502K	2
4	Extension post	86.2503	4
5	Bolt M6x16 DIN933	OT.02.02.050	8
6	Bolt M6x45 DIN933	OT.02.02.110	8
7	Washer Ø6/15 SFS3738	OT.04.03.020	32
8	Nyloc nut M6 DIN985	OT.03.02.030	16

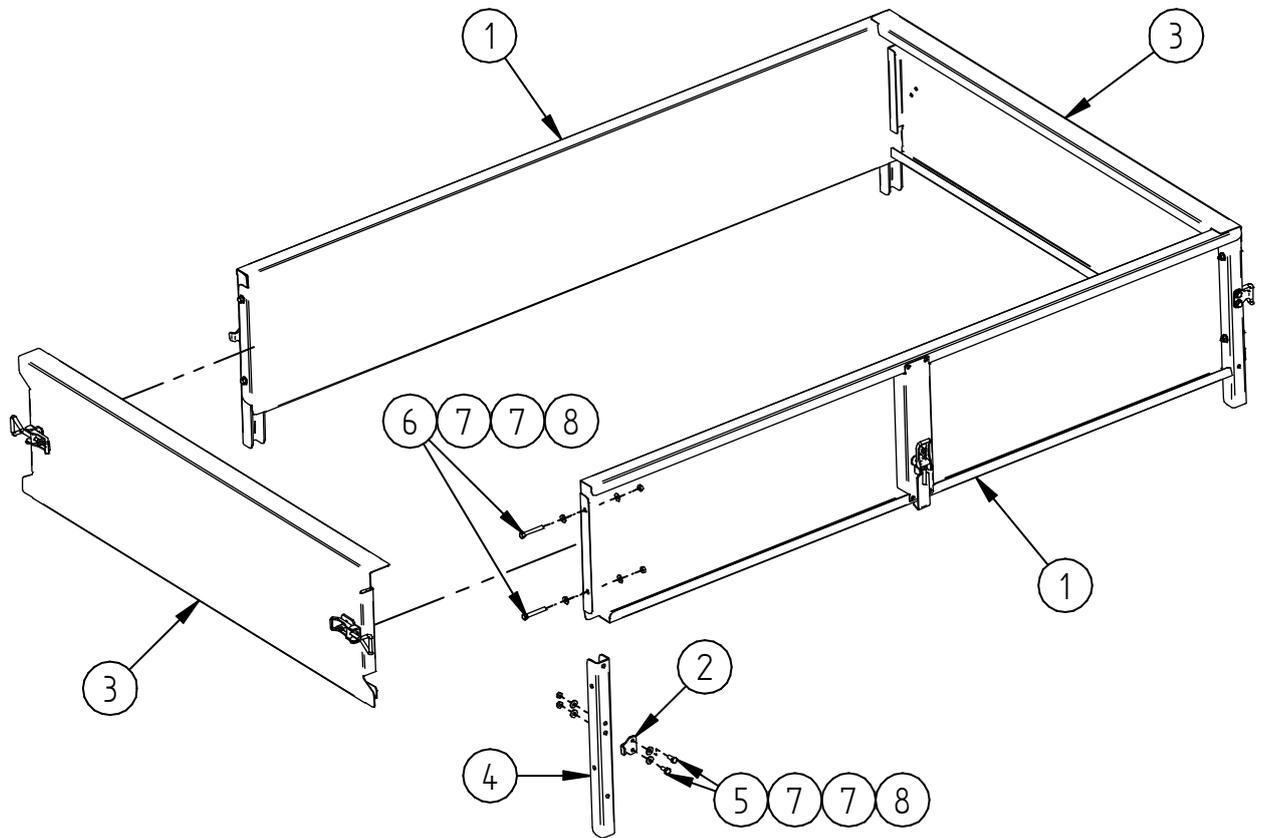

# FITTING INSTRUCTIONS


## Step 1

Assemble the corners posts (4 pcs). Install latch hook plate (Pos.2) to extension post (Pos.4). Use M6x16 bolts (Pos.5), Ø6 mm washers (Pos.7) and M6 nyloc nuts (Pos.8) for fastening. NB! Make sure that two posts are assembled in mirror!

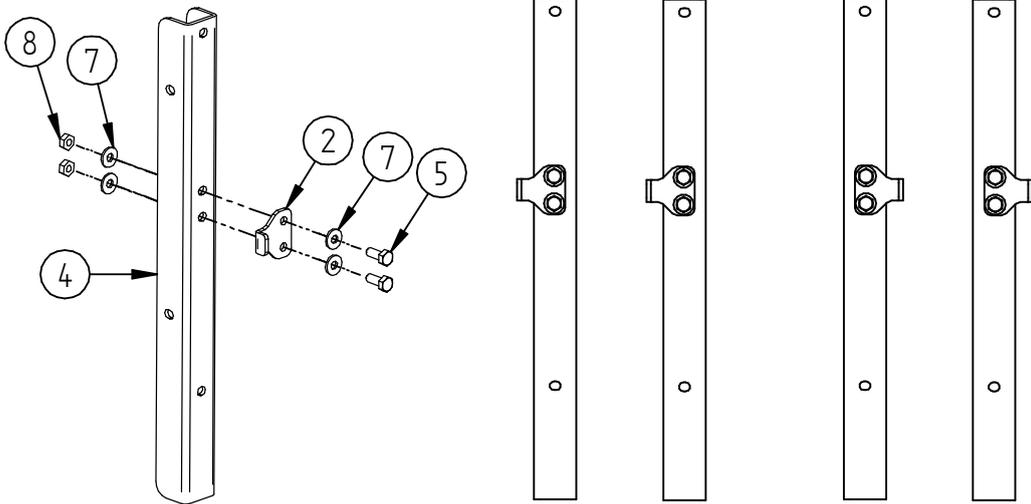


## Step 2

Install assembled corner post to the side extensions (Pos.1). Use M6x45 bolts (Pos.6), Ø6 mm washers (Pos.7) and M6 nyloc nuts (Pos.8) for fastening.

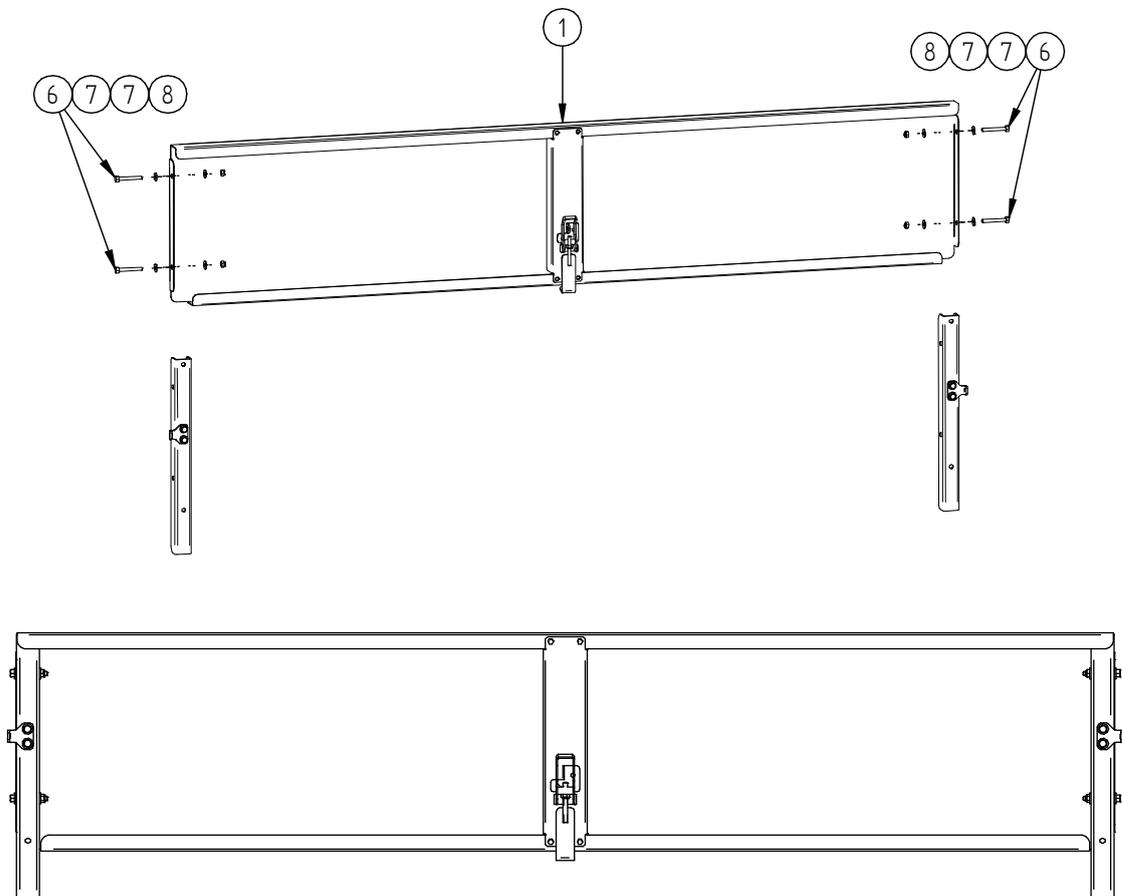

### Step 3

Install side extensions to cargo box and fix the position with the latches (adjust the latches if necessary). Then install end extensions and secure these to the side extensions with latches (adjust the latches if necessary).

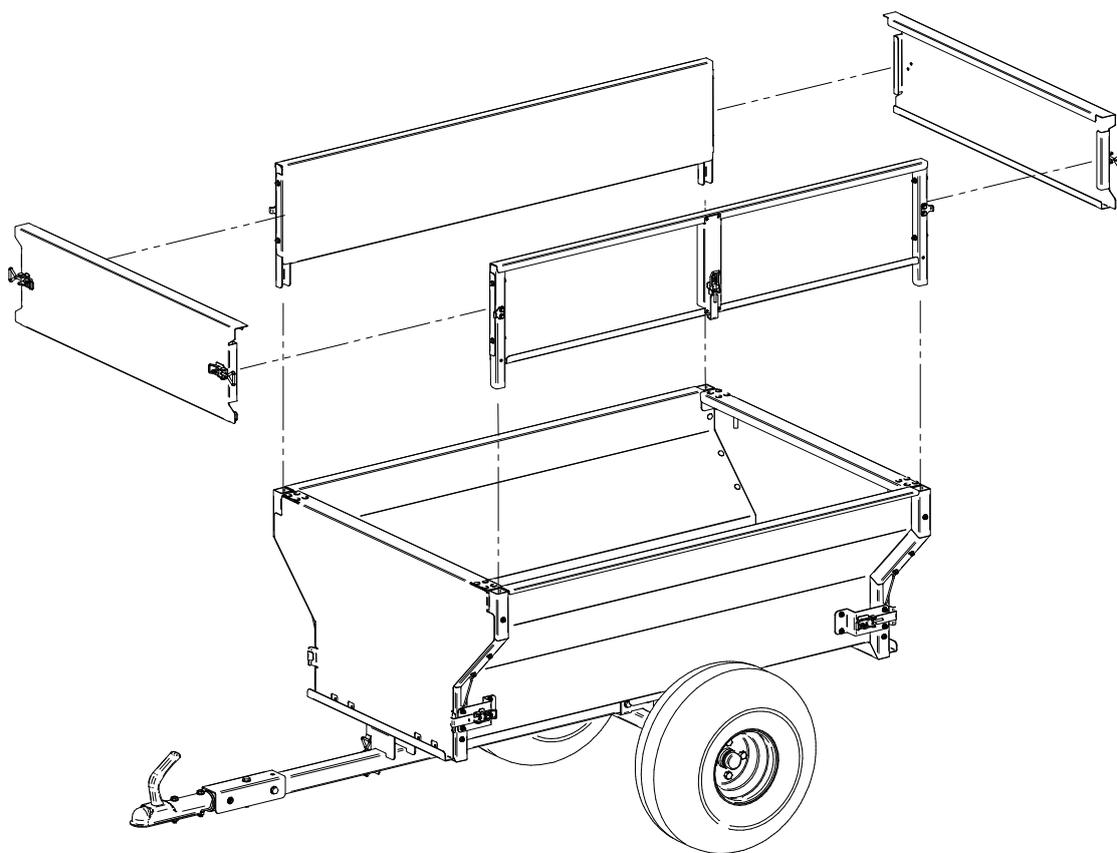





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

