

IRON BALTIC

GAS SPRING TILTING

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/zlCfbPc

OFFROAD 500

Code 89.3000

Version 11012024




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Upper attachment	89.3001	2
2	Bottom attachment	89.3002K	1
3	U-bolt 50 mm	84.2010	2
4	Distance bush	03.11504	4
5	Gas spring 600MM/700N	OT.35.00.055	1
6	Bolt M6x20 DIN933	OT.02.02.060	2
7	Bolt M8x65 DIN931	OT.02.01.013	2
8	Washer Ø6/15 SFS3738	OT.04.03.020	4
9	Washer Ø8/20 SFS3738	OT.04.03.030	4
10	Washer Ø10 DIN125	OT.04.01.040	4
11	Nyloc nut M6 DIN985	OT.03.02.030	2
12	Nyloc nut M8 DIN985	OT.03.02.040	2
13	Nyloc nut M10 DIN985	OT.03.02.050	4

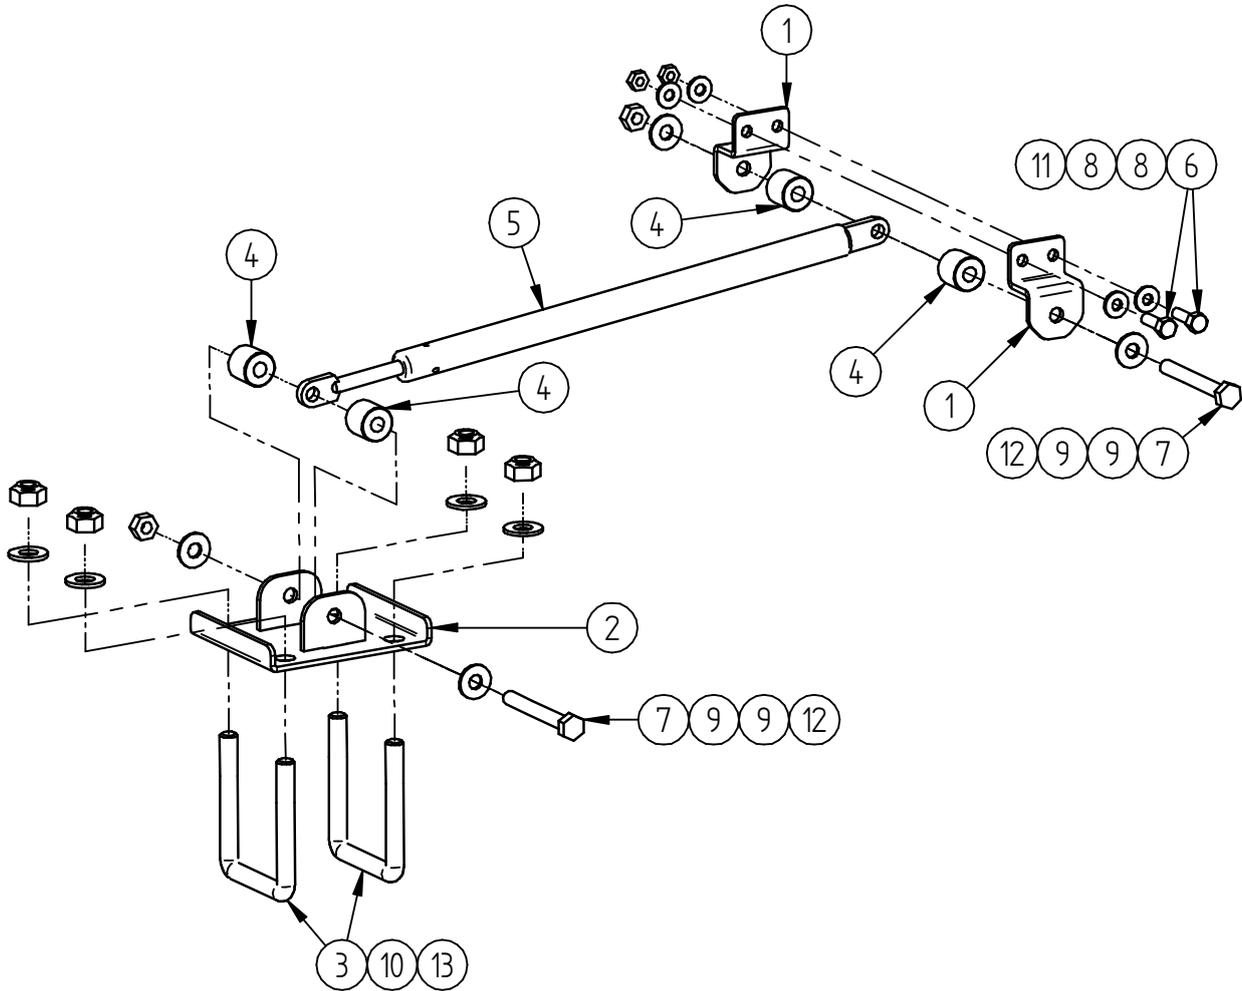

FITTING INSTRUCTIONS


Step 1

Install upper attachments (Pos.1) to cargo box. For fastening use M6x20 bolts (Pos.6), Ø6 mm washers (Pos.8) and M6 nyloc nuts (Pos.11).

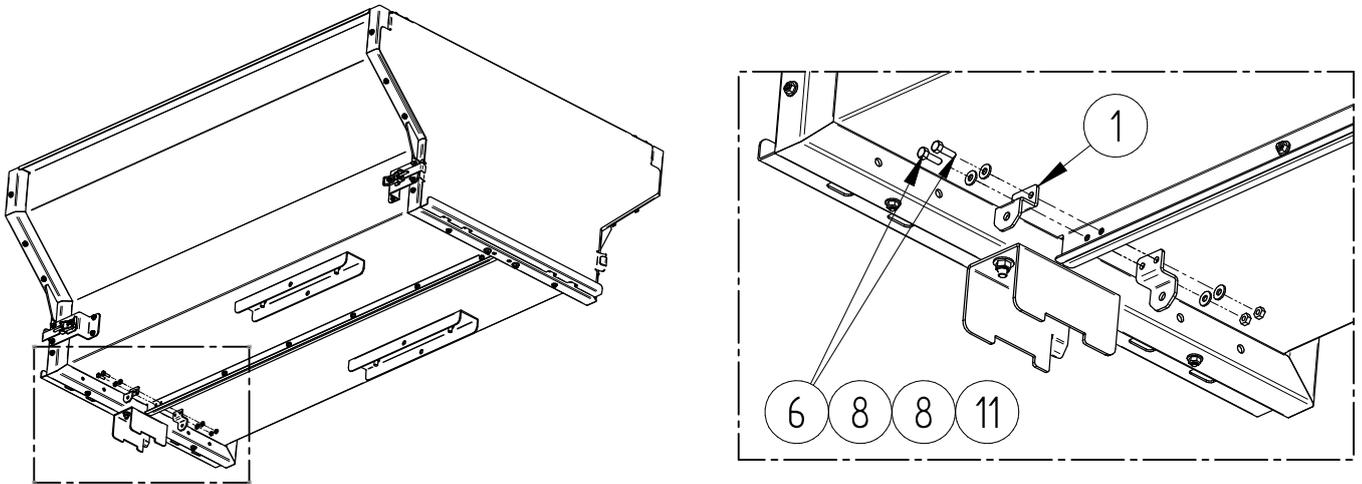



Step 2

Install bottom attachment (Pos.2). For fastening use U-bolts (Pos.3), Ø10 mm washers (Pos.10) and M10 nyloc nuts (Pos.13).
NB! The right position for bottom attachment is 430 mm from the cargo box clamp plate!

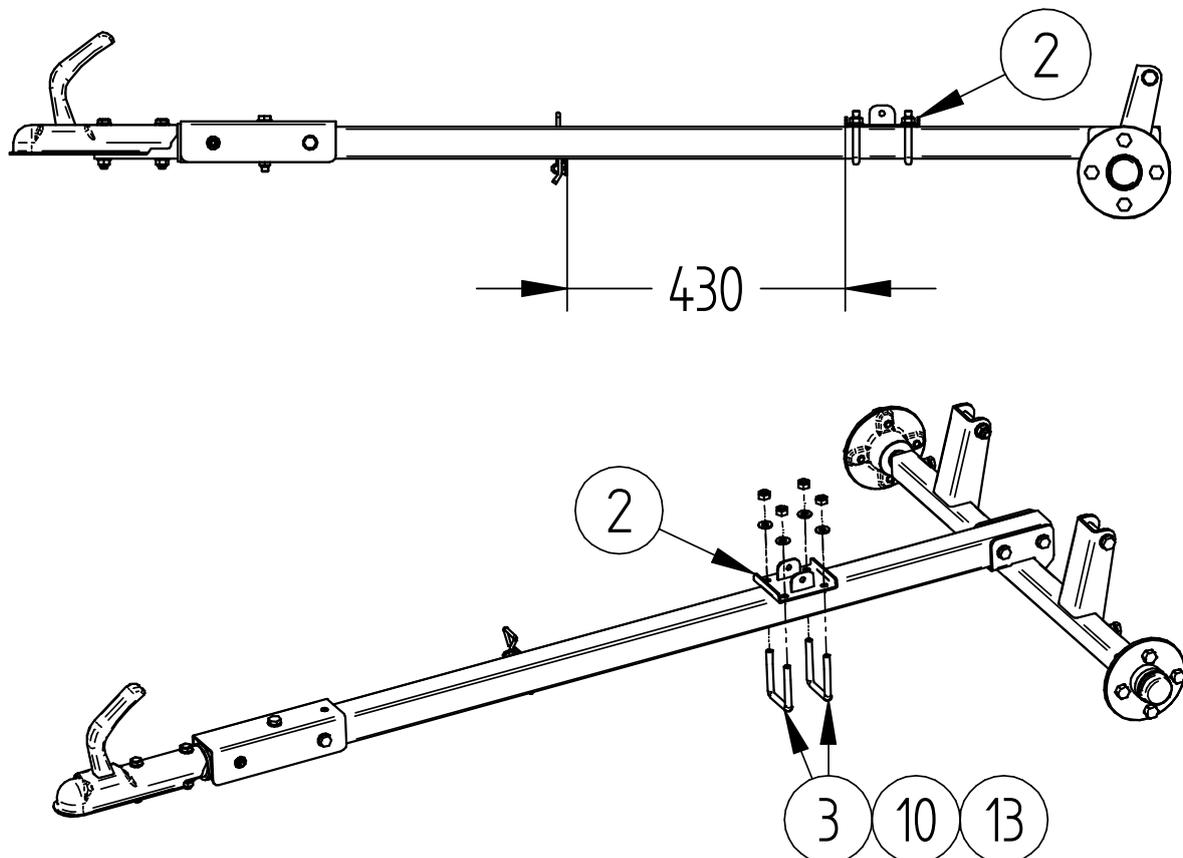

Step 3

Install gas spring (Pos.5). Between the gas spring and attachments install distance bushes (Pos.4). For fastening use M8x65 bolts (Pos.7), Ø8 mm washers (Pos.9) and M8 nyloc nuts (Pos.12).

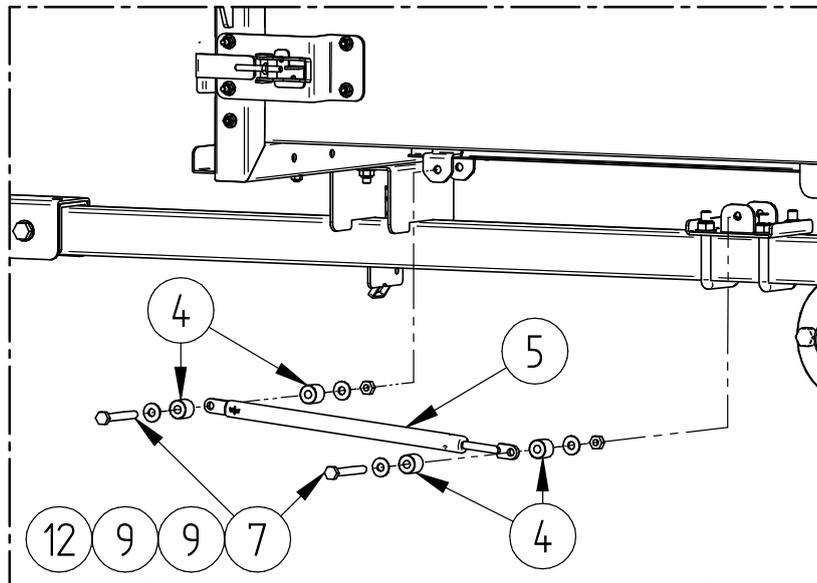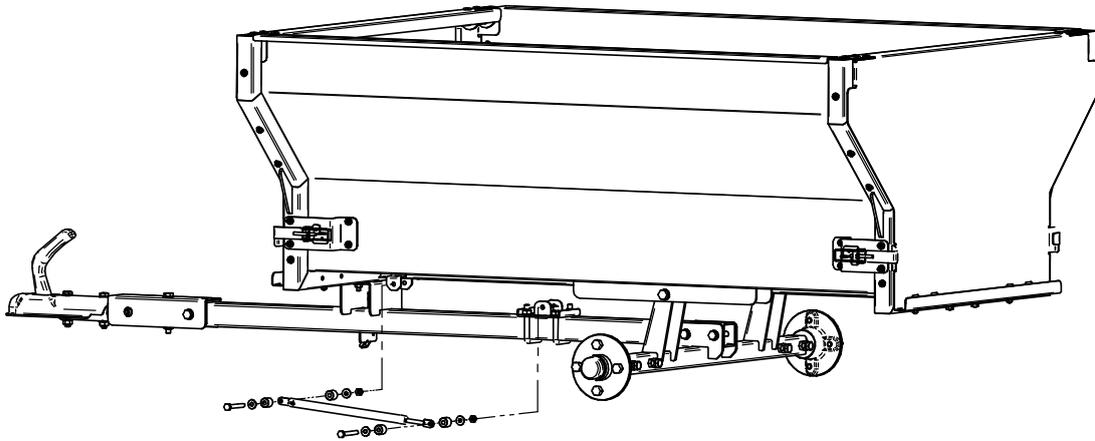

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

