

IRON BALTIC

PVC COVER

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/2l1txBS2

OFFROAD 500

Code 89.6000

Version 11012024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	PVC cover + rubber cord (5,2m)	89.6001	1
2	Cord eyelet	OT.10.15.010	12
3	Rivet 6x18	OT.06.01.042	12
4	Bolt M6x20 ISO7380	OT.02.03.030	12
5	Bolt M6x60 ISO7380	OT.02.03.075	2
6	Washer Ø6/15 SFS 3738	OT.04.03.020	12
7	Nyloc nut M6 DIN 985	OT.03.02.030	12

FITTING INSTRUCTIONS


Step 1

Drill $\text{\O}6$ mm holes in to the cargo box, to the hatches or to the cargo box extensions as shown in the figure and install cord eyelets (Pos.2). For fastening use 6x18 rivets (Pos.3) or M6x20 bolts (Pos.4), $\text{\O}6$ mm washers (Pos.6) and M6 nyloc nuts (Pos.7).


NB! When installing side extension middle eyelet with a bolt, drill a hole through two walls and use M6x60 bolt (Pos.5) for fastening.

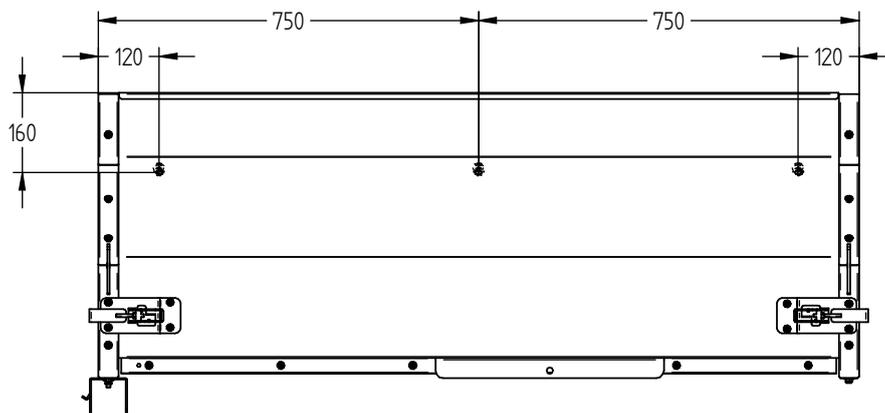


Cargo box side

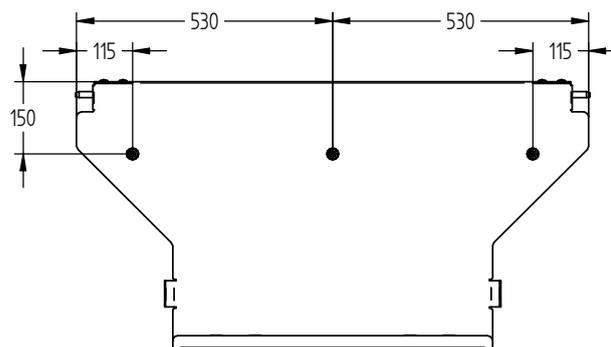

Cargo box hatch

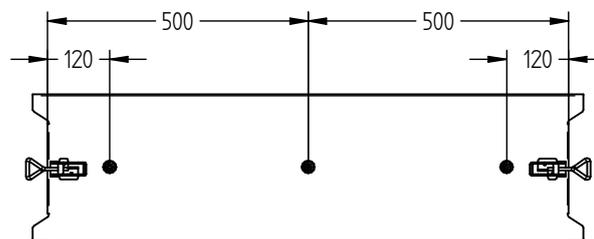

End extension

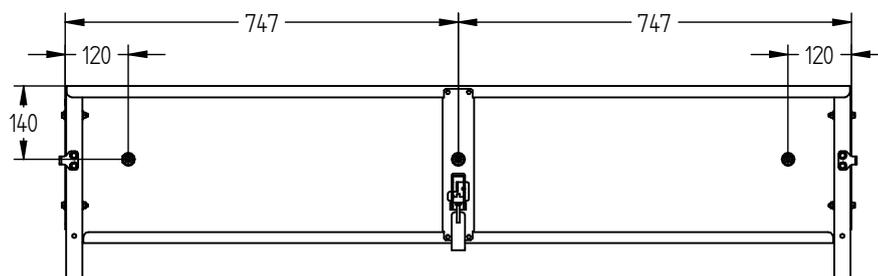

Side extension

Step 2

Attach rubber cord to the PVC cover and tighten so that the cover is easy to install to the trailer.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

