

IRON BALTIC

REEL HOLDER

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/OWhZns9Q

Receiver mount system

Code 84.16000

Version 08012024




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Receiver mount	84.16001S	1
2	Mounting plate	84.16002	2
3	Bracket	84.16003	4
4	Reel holder	84.16004K	4
5	Bushing	84.16006	4
6	Stopper bushing	84.16007	4
7	Reel support	84.16008	8
8	Pin Quicklock	OT.53.00.045	1
9	Pigtail hook M10x140 R88145	OT.21.00.015	4
10	Bolt M6x20 DIN933	OT.02.02.060	12
11	Bolt M8x12 DIN933	OT.02.02.168	4
12	Bolt M8x20 DIN933	OT.02.02.180	8
13	Bolt M8x75 DIN931	OT.02.01.016	2
14	Washer M6/15 SFS 3738	OT.04.03.020	24
15	Washer M8/20 SFS 3738	OT.04.03.030	20
16	Nyloc nut M6 DIN985	OT.03.02.030	12
17	Nyloc nut M8 DIN985	OT.03.02.040	10
18	Nyloc nut M10 DIN985	OT.03.02.050	4
19	Nut M10 DIN934	OT.03.01.040	4

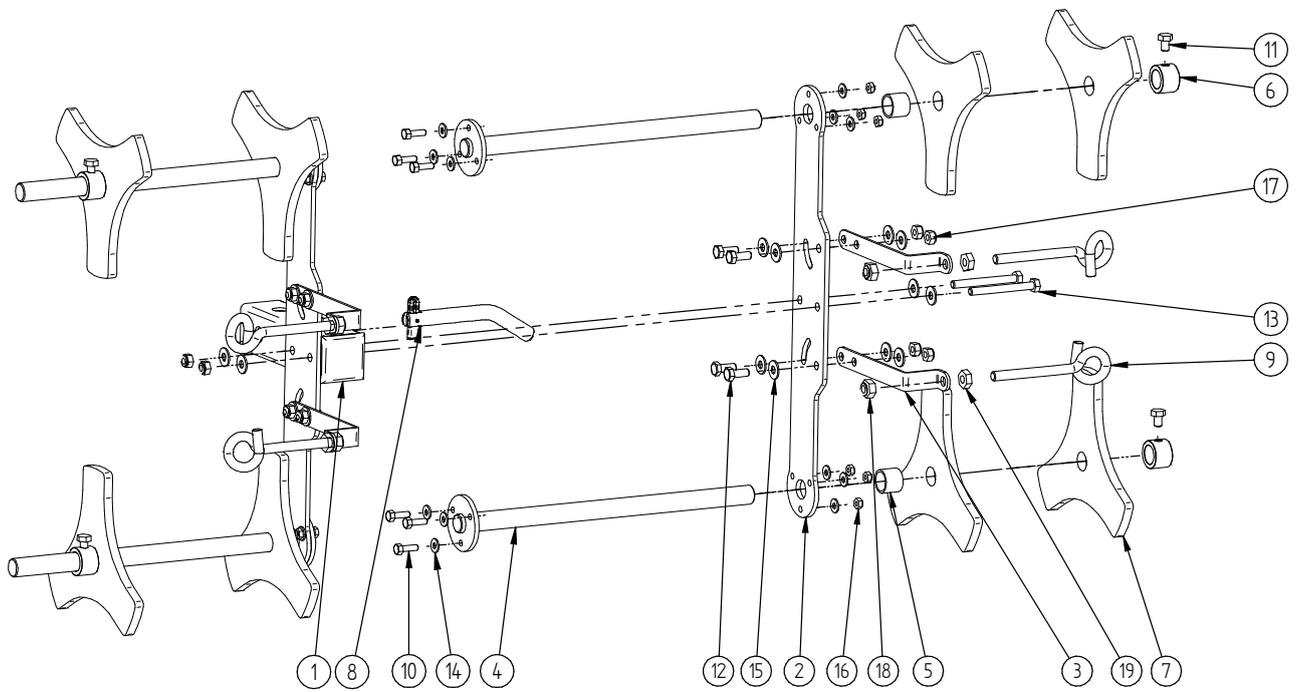

FITTING INSTRUCTIONS


Step 1

Install reel holders (Pos.4) to the mounting plates (Pos.2). For fastening use M6x20 bolts (Pos.10), Ø6 washers (Pos.14) and M6 nyloc nuts (Pos.16).

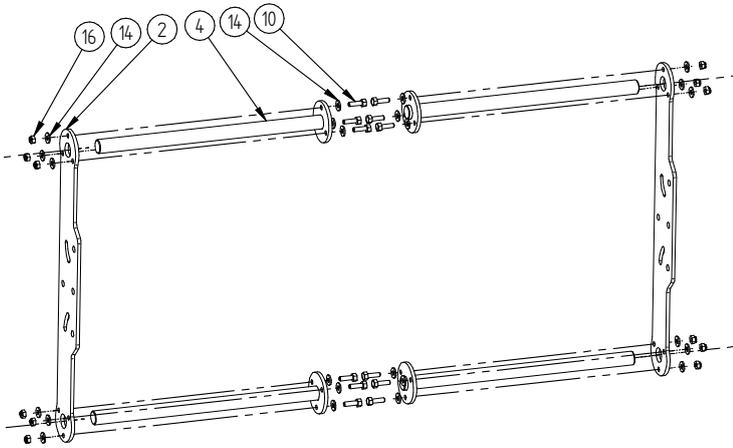



Step 2

Install brackets (Pos.3) with pigtail hooks (Pos.9) to the mounting plates. To fasten brackets, use M8x20 bolts (Pos.12), Ø8 washers (Pos.15) and M8 nyloc nuts (Pos.17). To fasten pigtail hooks, use M10 nyloc nuts (Pos.18) and M10 nuts (Pos.19).

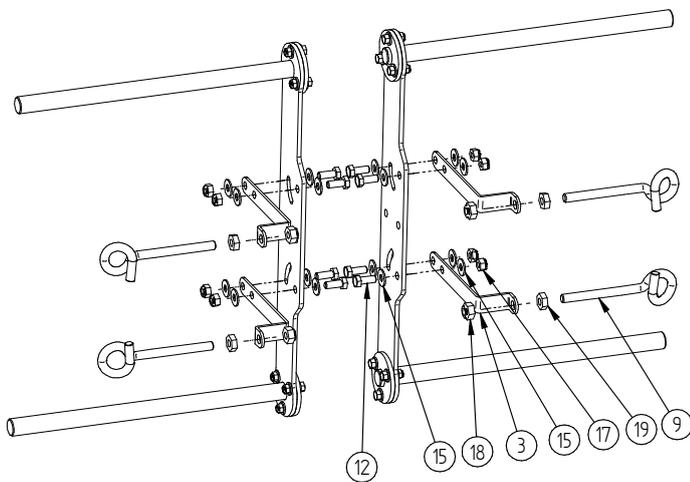



Step 3

Install mounting plates with reel holders and brackets to the receiver mount (Pos.1). For fastening use M8x75 bolts (Pos.13), Ø8 washers (Pos.15) and M8 nyloc nuts (Pos.17).

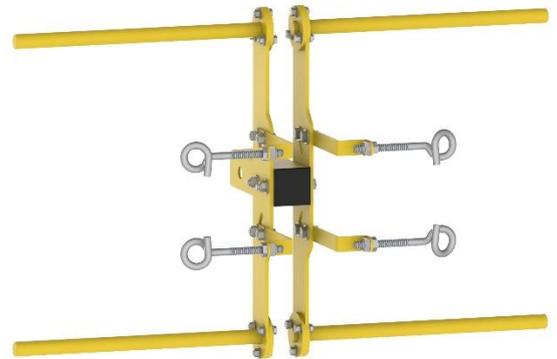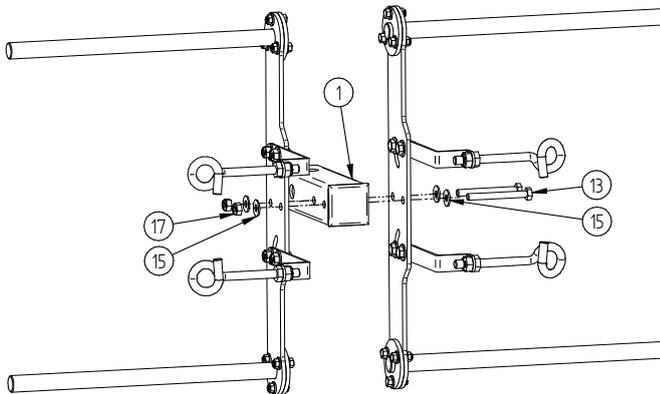


Step 4

Install bushings (Pos.5), reel supports (Pos.7) and stopper bushings (Pos.6) with M8x12 bolts (Pos.11) to the reel holder shafts. Next install reel holder to the receiver mount system. For fastening use quicklock pin (Pos.8). The reel holder can also be installed vertically if necessary.

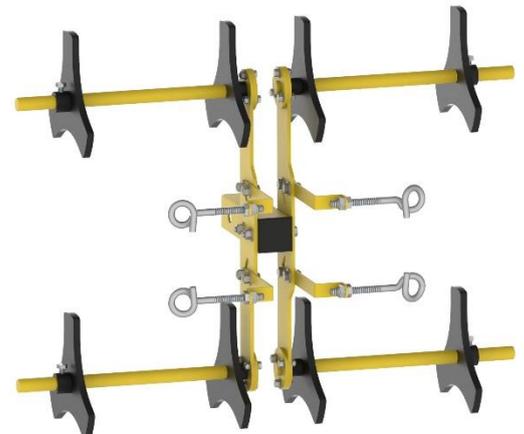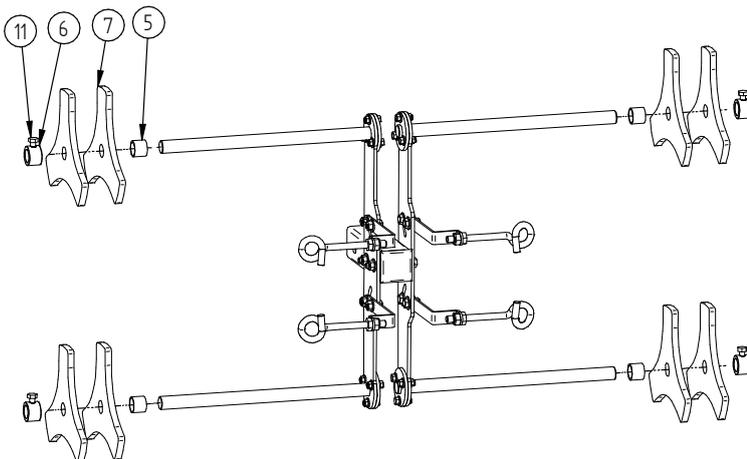

Step 5

To install reel, place it between reel supports and tighten the stopper bushing bolt. Next adjust the pigtail hook and use it to keep the wire steady during unrolling.

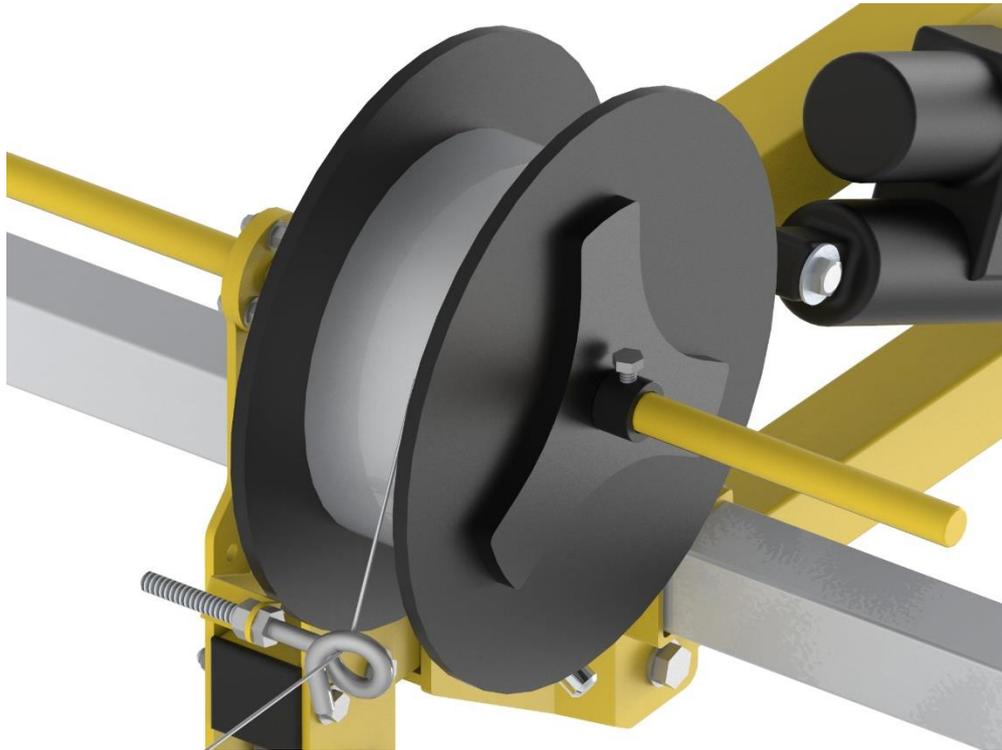

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

