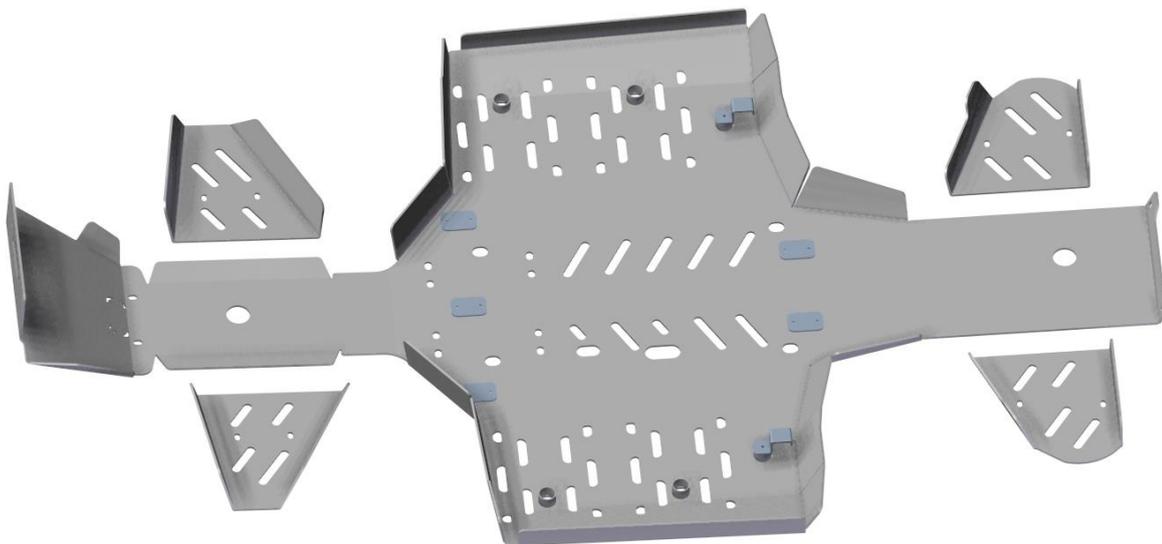# IRON BALTIC

ALUMINIUM SKID PLATE

CFMOTO

X8 LUX

Code 02.9200

Version   29102023

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
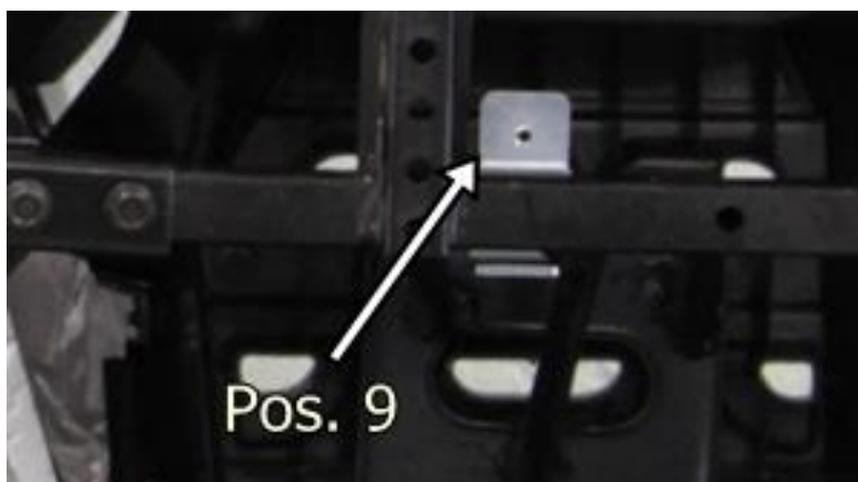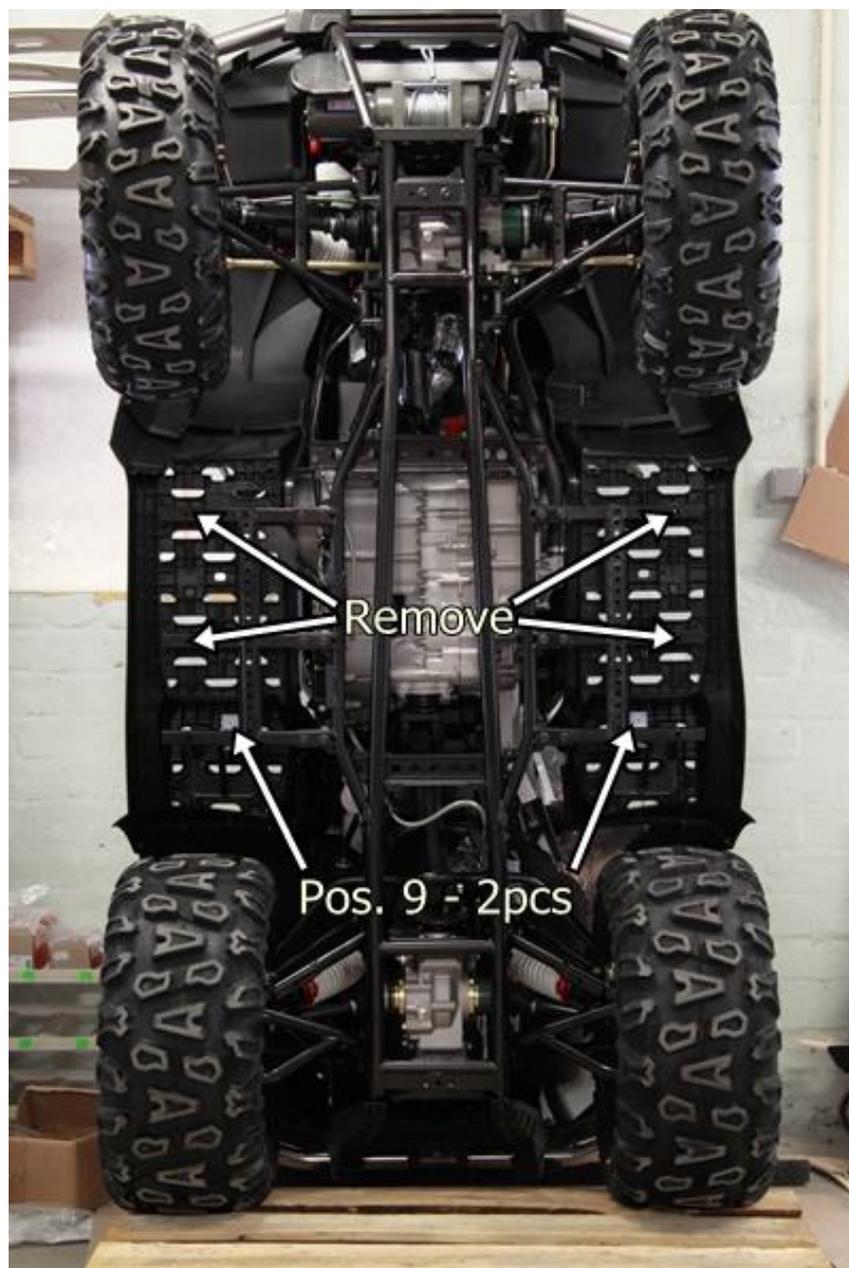sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.8701K	1
2	Rear part	02.8703	1
3	Front part	02.8702	1
4	Front left arm protection	02.9204	1
5	Front right arm protection	02.9205	1
6	Rear left arm protection	02.9206	1
7	Rear right arm protection	02.9207	1
8	Plate	02.5006	5
9	Installation plate	02.5709	2
10	Bolt M6x16 DIN 7991	OT.02.04.020	18
11	Bolt M6x20 DIN 7991	OT.02.04.030	2
12	Bolt M6x20 DIN 933	OT.02.02.060	2
13	Bolt M6x35 DIN 933	OT.02.02.090	6
14	Bolt M6x70 DIN 933	OT.02.02.150	4
15	Conical washer 6	14.502	20
16	Dished washer	14.503	10
17	Washer 6/15 SFS 3738	OT.04.03.020	16
18	Nut M6 Nyloc DIN 985	OT.03.02.030	4

9
7
2
5
1
3
8
6
4

14;16;17;18
10;15
10;15
10;15
12;17
13;16;17
10;15
11;15
Original bolts
10;15
14;16;17;18
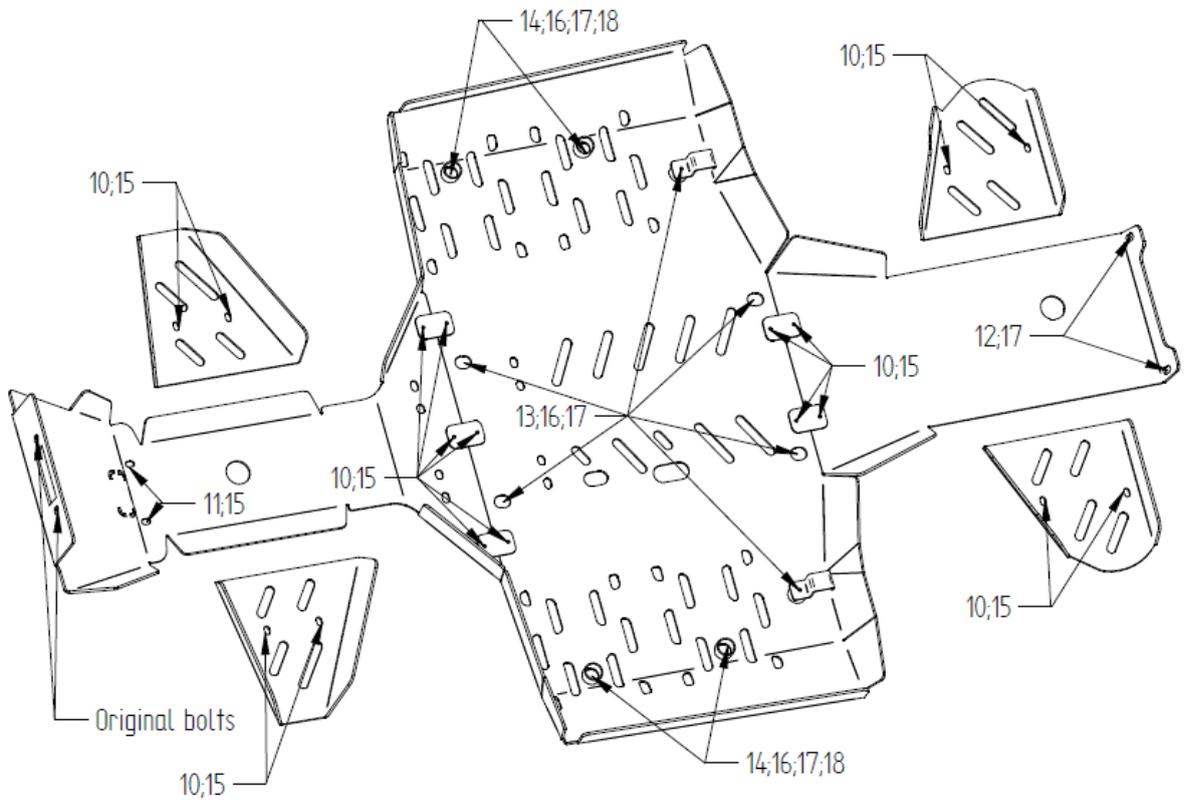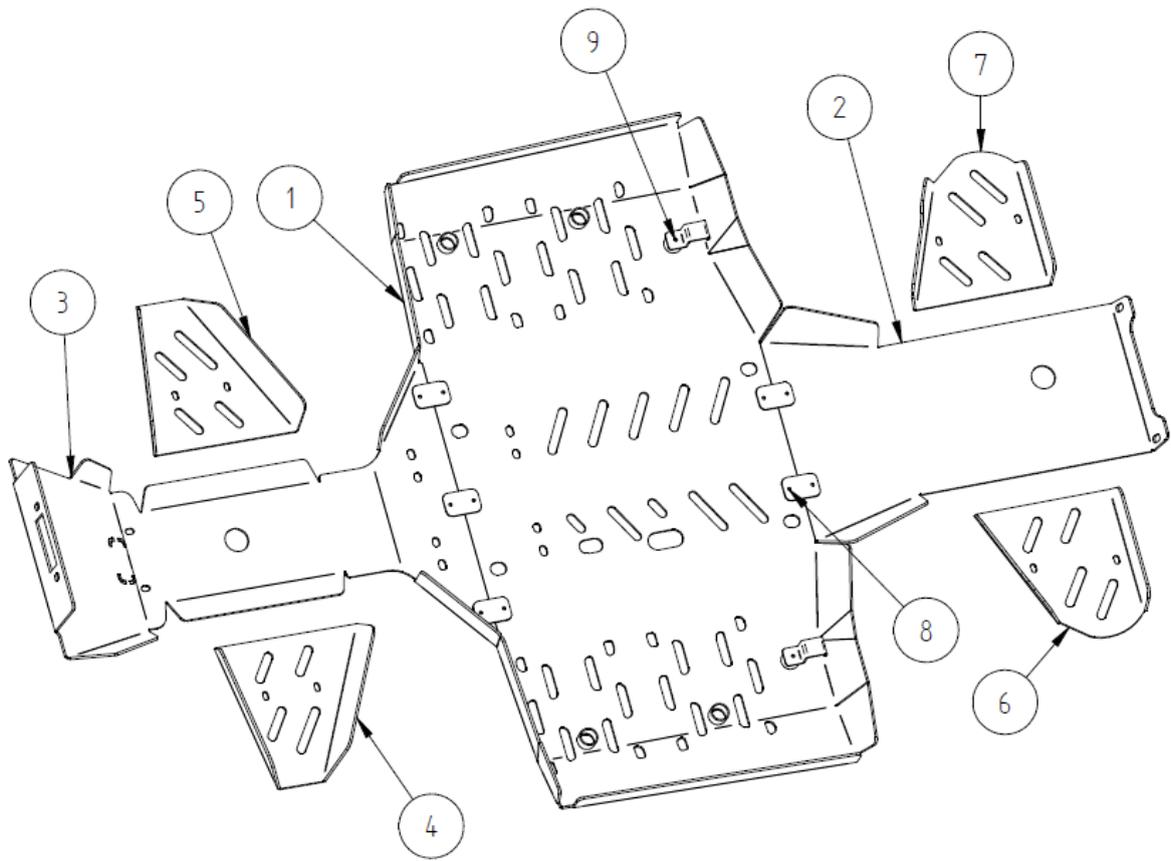
FITTING INSTRUCTIONS

Step 1   Remove all standard plastic covers, 4 bolts and install plates 02.5709.
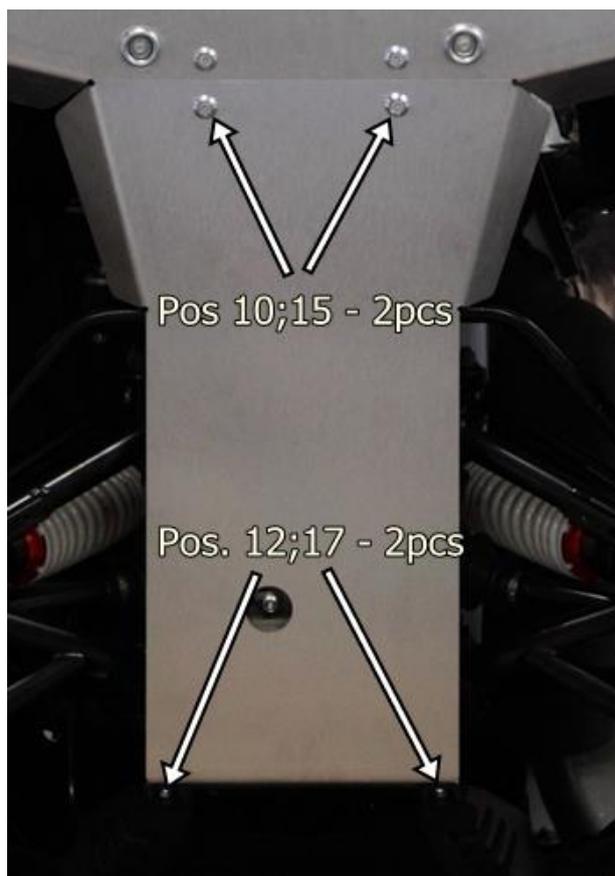
Step 2 Install middle part 02.8701K.

Pos. 13;16;17 - 2pcs

Pos. 14;16;18 - 4pcs
+Pos. 17 - 8pcs

Pos. 13;16;17 - 4pcs

Step 3 Install plates 02.5006 to middle part.

Pos. 8;10;15 - 5pcs
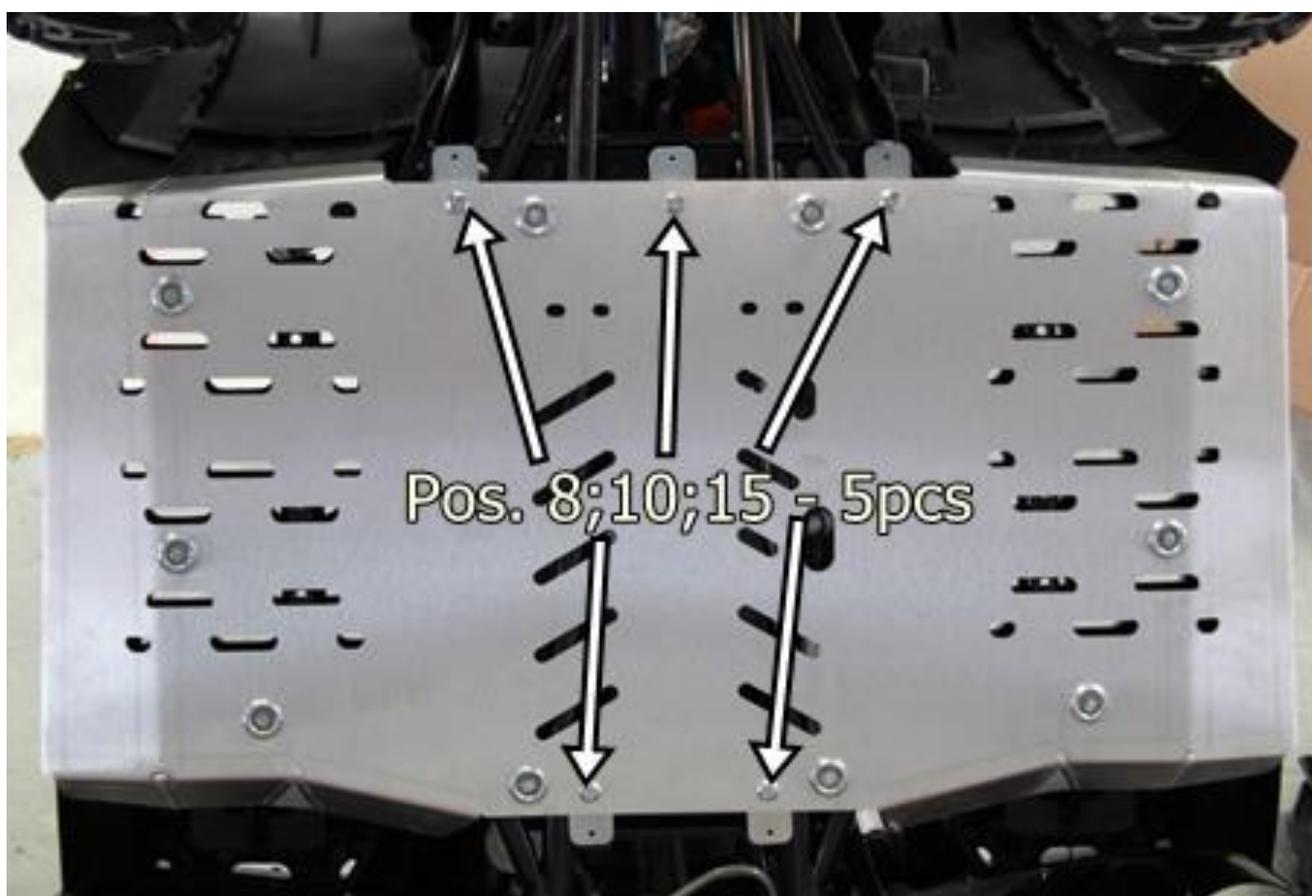
Step 4   Install rear part 02.8703.

Pos 10;15 - 2pcs

Pos. 12;17 - 2pcs

Step 5   Install front part 02.8702.

Pos. 11;15 - 2pcs

Pos. 10;15 - 3pcs

Original bolts

02.9200 Aluminium skid plate CFMoto X8 LUX
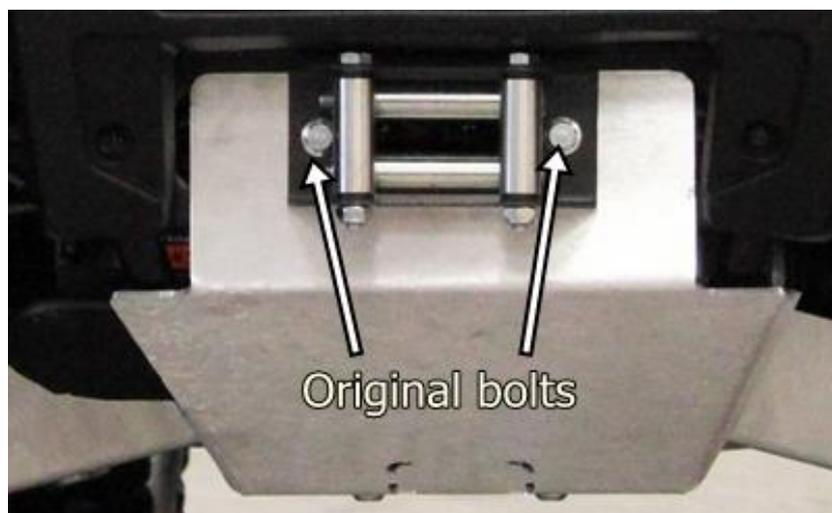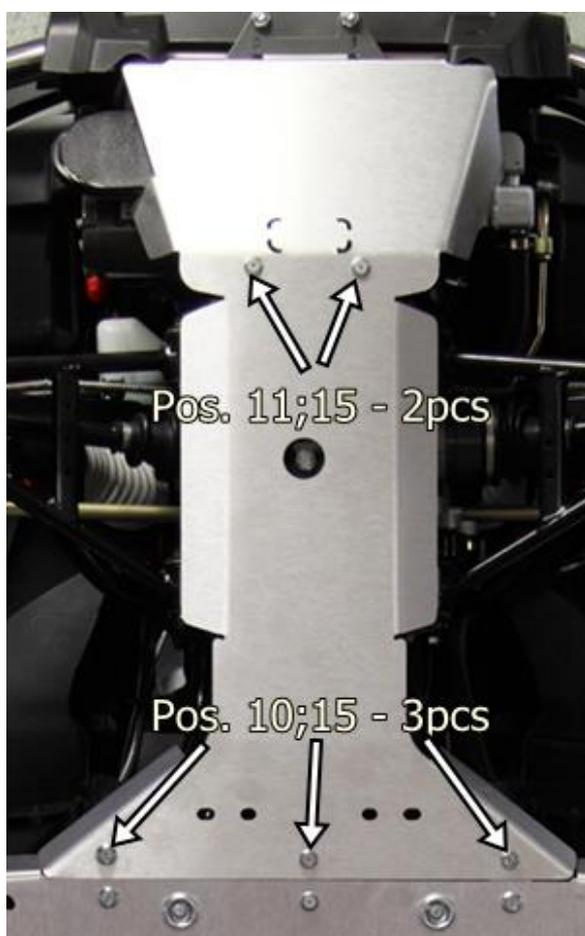
Step 6   Install rear arms protections 02.9206 and 02. 9207.

Pos. 10;15 - 4pcs
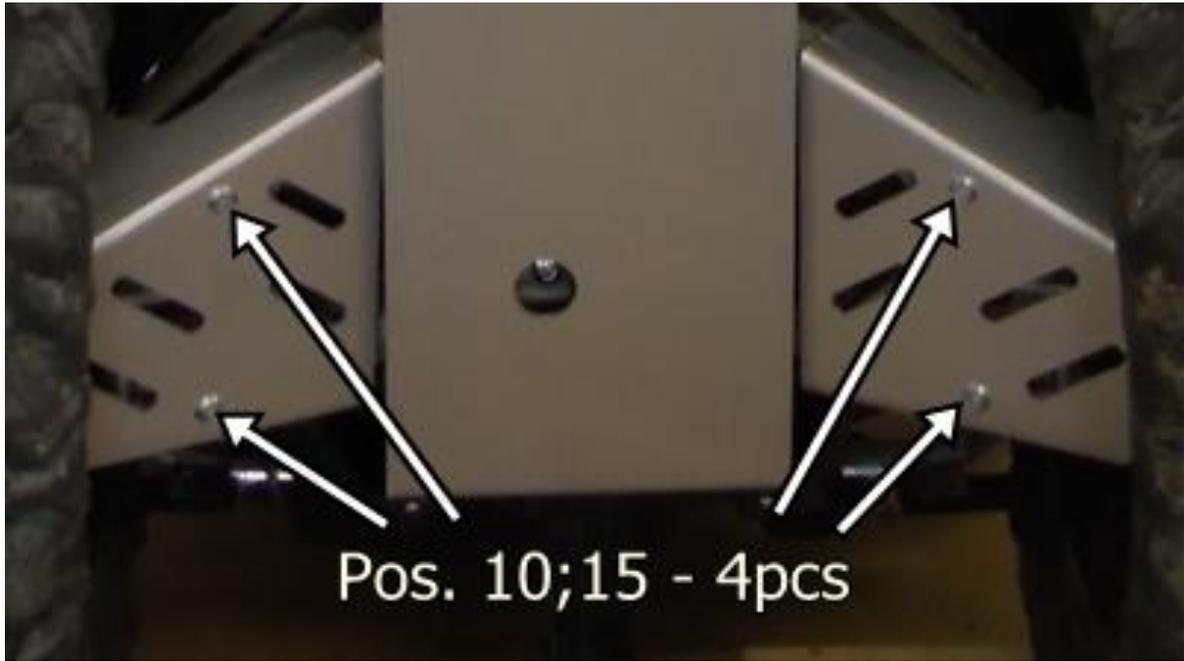
Step 7   Install front arms protections 02.9204 and 02. 9205.

Pos. 10;15 - 4pcs
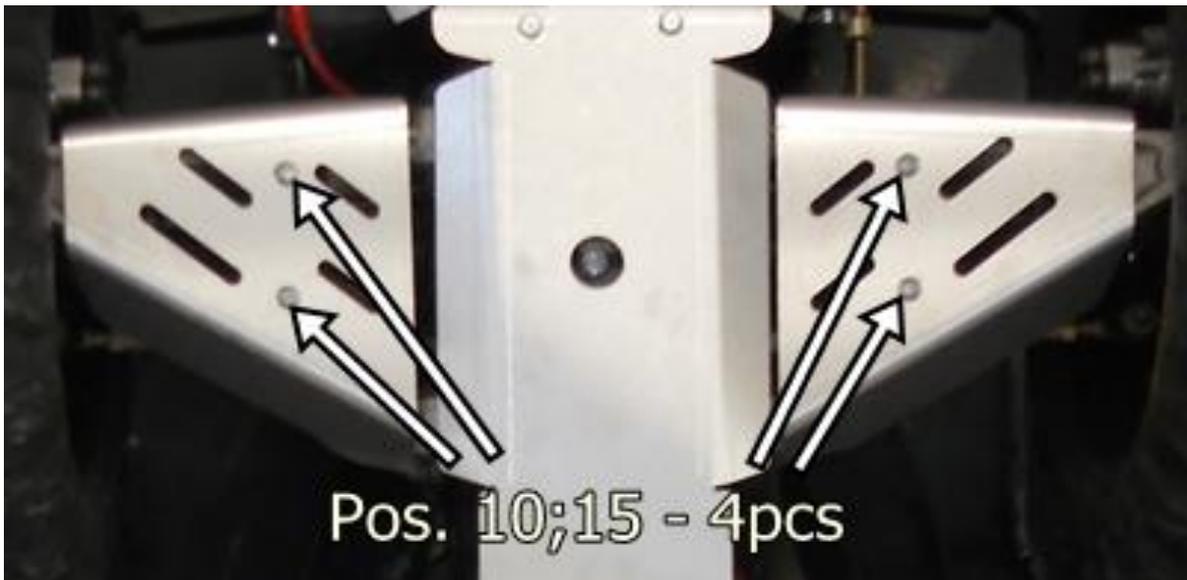
IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticltd