DOWNLOAD MULTILINGUAL USER MANUAL

code.ironbaltic.com/u/kG04mRWt

SNOW PLOW MOUNTING KIT

CAN AM

Renegade / Outlander (G2)

500 / 570 / 650 / 800R / 850 / 1000

570 MAX / 650 MAX / 800 MAX / 850 MAX

1000 MAX / 1000 XMR

Code 03.4900

Version 04112023

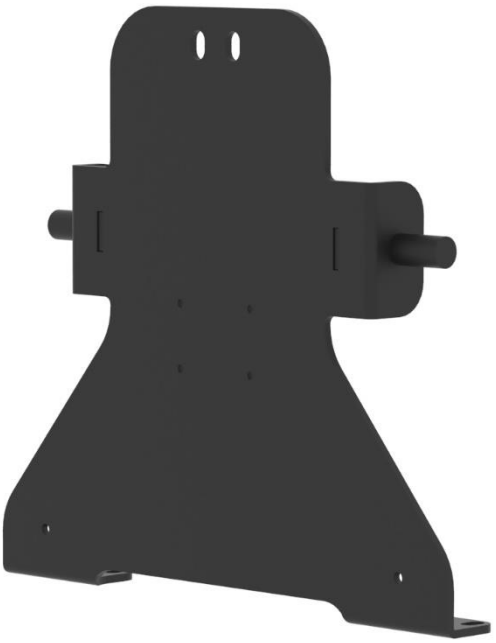

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Snow plow mounting kit	03.4901K	1
2	Carriage bolt M8x25 DIN603	OT.02.05.060	4
3	Bolt M8x30 DIN7991	OT.02.04.170	2
4	Conical washer Ø8	14.501	2
5	Washer 8/20 SFS3738	OT.04.03.030	6
6	Nut M8 Nyloc	OT.03.02.040	6

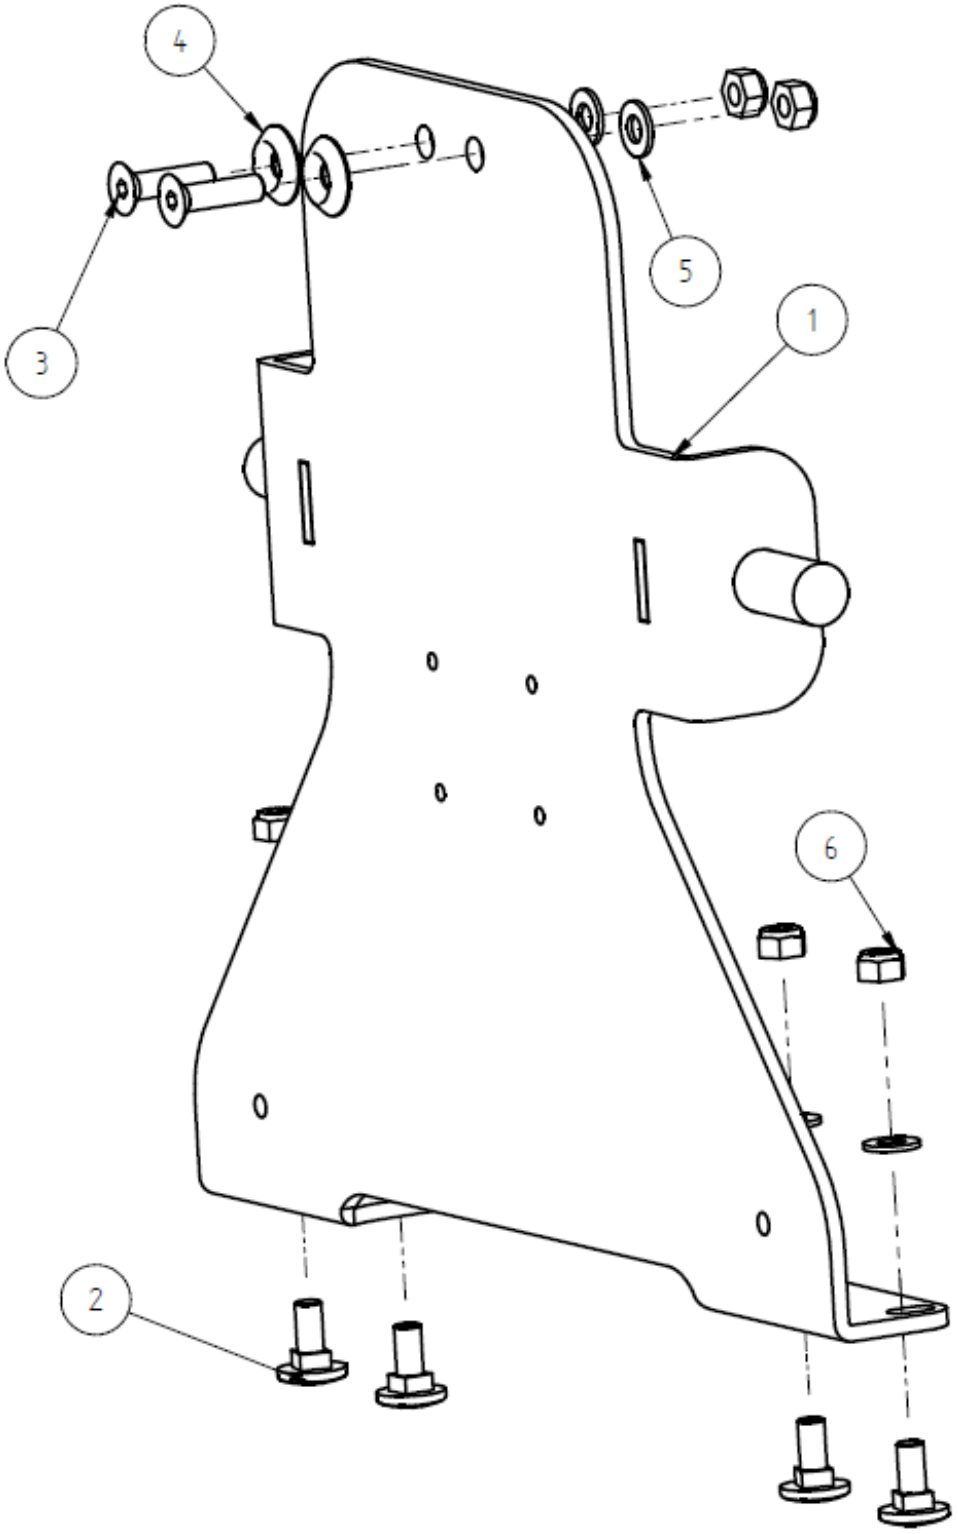
4
3
5
1
6
2

FITTING INSTRUCTIONS

Step 1 Cut a piece part of skid plate middle part using pre-cut holes.

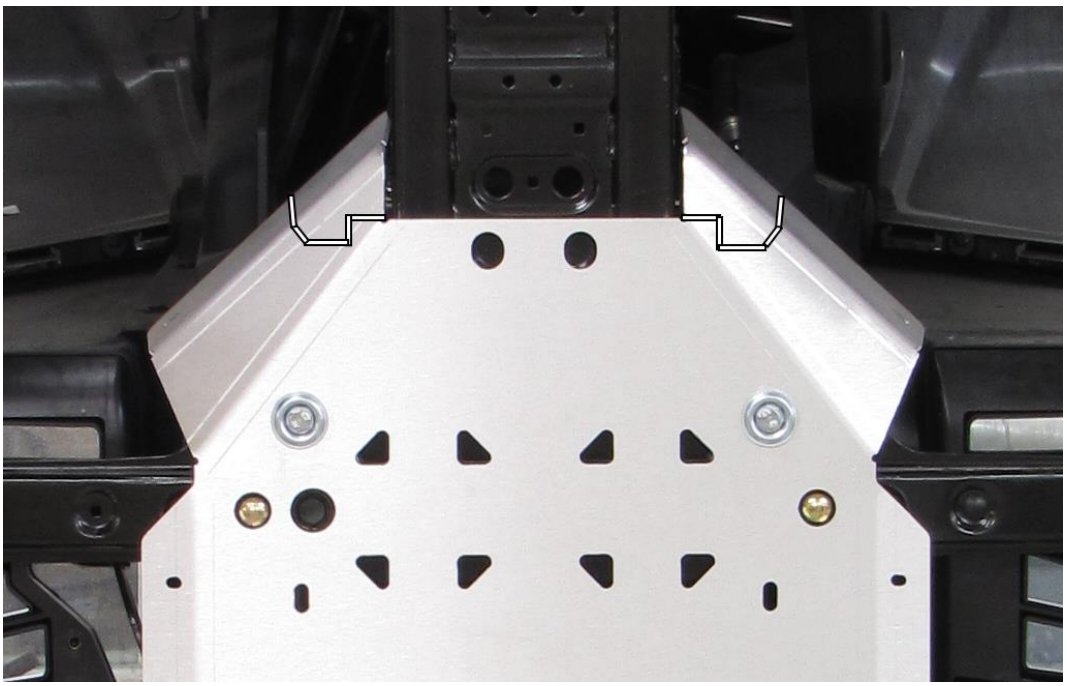

Step 2 Install snow plow adapter.

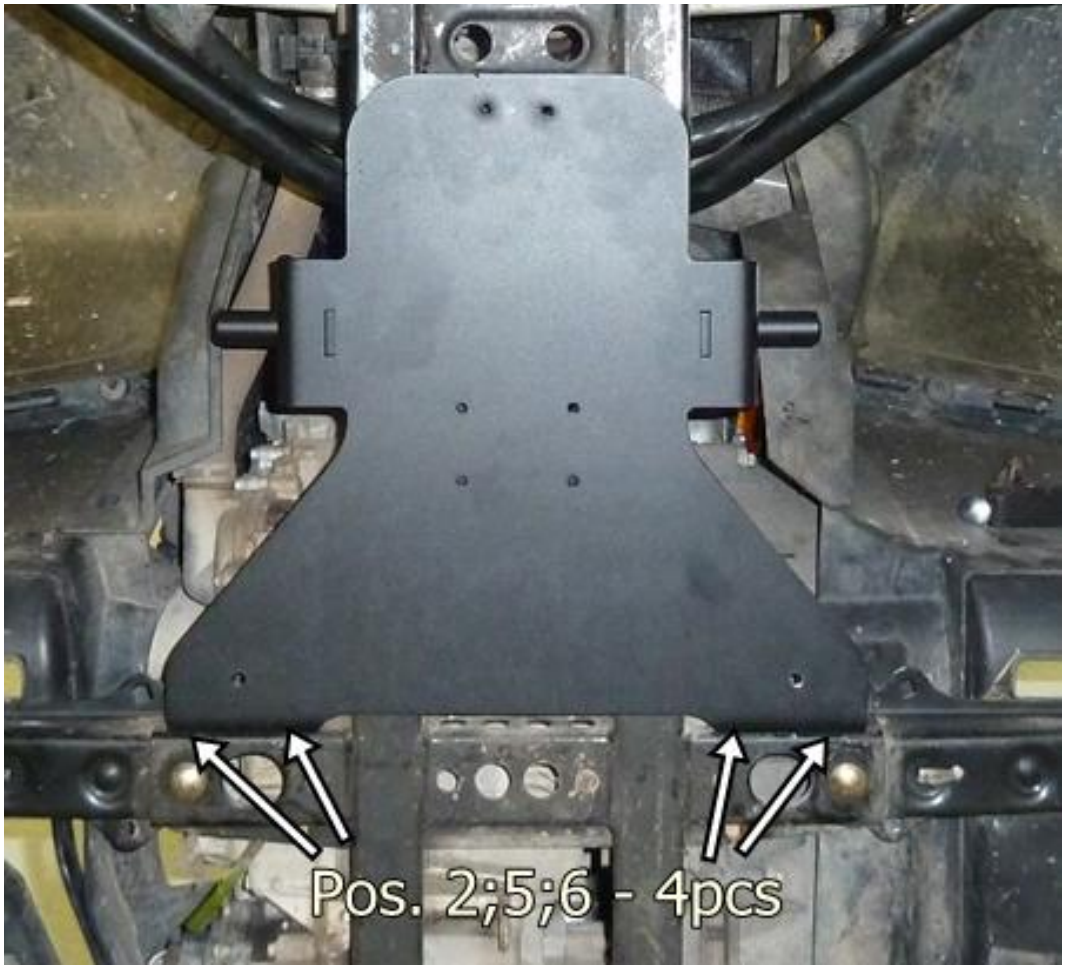

Step 3 Install skid plate according to corresponding manual.

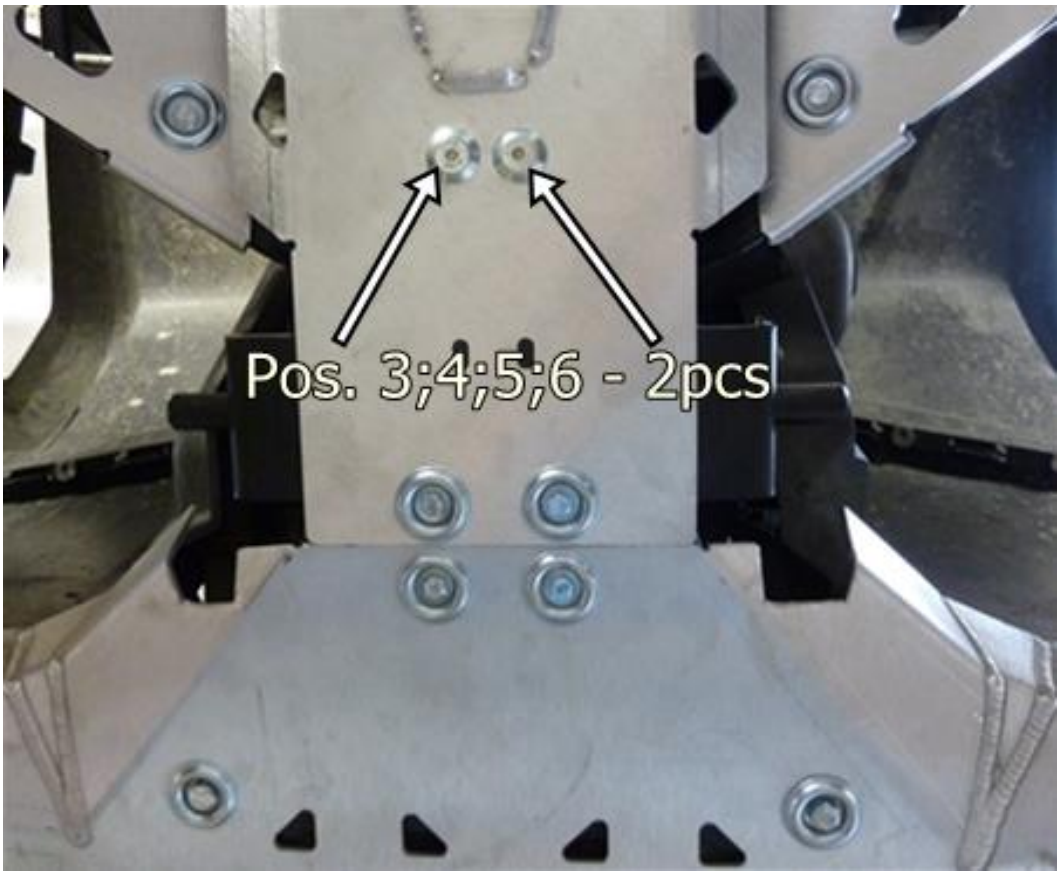

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticltd